

onerbl GEVCC932-U

onerbl AC-DC Adapter Instruction Manual for Gevi GEVCC932-U Vacuum Cleaner

Model: GEVCC932-U, E-TEK ZD012A270050US

1. INTRODUCTION

This manual provides instructions for the safe and proper use of your onerbl AC-DC adapter. This adapter is designed to power and charge the battery of compatible devices, specifically the Gevi Model GEVCC932-U cordless stick vacuum cleaner and devices requiring an E-TEK ZD012A270050US power supply.

The adapter converts standard AC wall power into the DC power required by your device, ensuring reliable operation and charging.

2. SAFETY INFORMATION

Please read all safety instructions before using the adapter. Failure to follow these instructions may result in electric shock, fire, or damage to the adapter or connected device.

- Use the adapter only with compatible devices as specified in this manual.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Do not disassemble or modify the adapter.
- Avoid dropping or subjecting the adapter to strong impacts.
- Ensure the power outlet is easily accessible and properly grounded.
- Unplug the adapter from the power outlet when not in use or during electrical storms.
- Keep out of reach of children.
- The adapter features **Short Circuit Protection** to prevent damage in case of an electrical fault.

Important Note: The vacuum cleaner's battery voltage is 21.9V. This adapter provides 27V DC output, which is the correct charging voltage for a 21.9V Li-ion battery pack. Do not confuse the battery voltage with the charger's output voltage.

3. SETUP

Follow these steps to set up your onerbl AC-DC adapter:

1. **Inspect the Adapter:** Before first use, visually inspect the adapter and its cable for any signs of damage. Do not use if damaged.

2. **Connect to Device:** Insert the barrel connector of the adapter cable firmly into the charging port of your Gevi GEVCC932-U cordless stick vacuum cleaner or other compatible device.
3. **Plug into Power Outlet:** Insert the 2-pin (Type A) plug of the adapter into a standard 110V AC wall power outlet.



Image: The onerbl AC-DC adapter connected to a power strip, ready for use. Ensure the adapter is securely plugged into a suitable power source.

Once connected, the adapter will begin to supply power to your device or charge its battery. Refer to your device's manual for specific charging indicators.

4. OPERATING INSTRUCTIONS

The onerbl AC-DC adapter is designed for straightforward operation:

- **Powering Device:** When connected, the adapter provides continuous DC power to your compatible device.
- **Charging Battery:** If your device has a rechargeable battery, the adapter will initiate charging when connected to both the device and a power outlet. The charging duration will depend on the device's battery capacity and charge level.
- **Disconnection:** To disconnect, first unplug the adapter from the wall outlet, then disconnect the barrel connector from your device.



Image: Front and side views of the onerbl AC-DC adapter, showing the input specifications and barrel connector.

5. MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your adapter:

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly winding the cable to prevent damage.
- **Cable Care:** Do not bend, twist, or pull the cable excessively. Avoid placing heavy objects on the cable.

6. TROUBLESHOOTING

If you encounter issues with your onerbl AC-DC adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not powering on/charging.	Adapter not properly plugged in. Device's charging port is faulty. Power outlet is not working. Device's battery is old/bad.	Ensure both ends of the adapter are securely connected. Test the adapter with another compatible device, if possible. Test the power outlet with another appliance. Note: Rechargeable batteries typically last 1 to 3 years. An old or bad battery may not accept a charge, which is not an adapter issue.
Adapter feels warm during use.	Normal operation.	A slight warmth is normal during operation. If it becomes excessively hot or emits smoke/odor, unplug immediately and discontinue use.
Visible damage to adapter or cable.	Physical damage.	Discontinue use immediately. Do not attempt to repair. Replace the adapter.

7. SPECIFICATIONS

Feature	Detail
Brand	onerbl
Model (Compatible)	Gevi GEVCC932-U, GEVCC932U, VC3932-UL-P, E-TEK ZD012A270050US
Input Voltage	100-240V AC (Global compatibility)
Input Frequency	50/60 Hz
Output Voltage	27V DC
Output Current	0.5A (500mA)
Output Wattage	13.5W (27V * 0.5A)
Connector Type	Barrel Connector
Power Plug Type	Type A - 2 pin (North American)
Special Features	Short Circuit Protection
Color	Black
Cable Length	Approximately 76 inches (1.93 meters)
Dimensions (Adapter Body)	Approximately 2.6 inches (L) x 1.6 inches (W) x 1.2 inches (H)
Manufacturer	Shenzhen Waweis Technology Co., Ltd

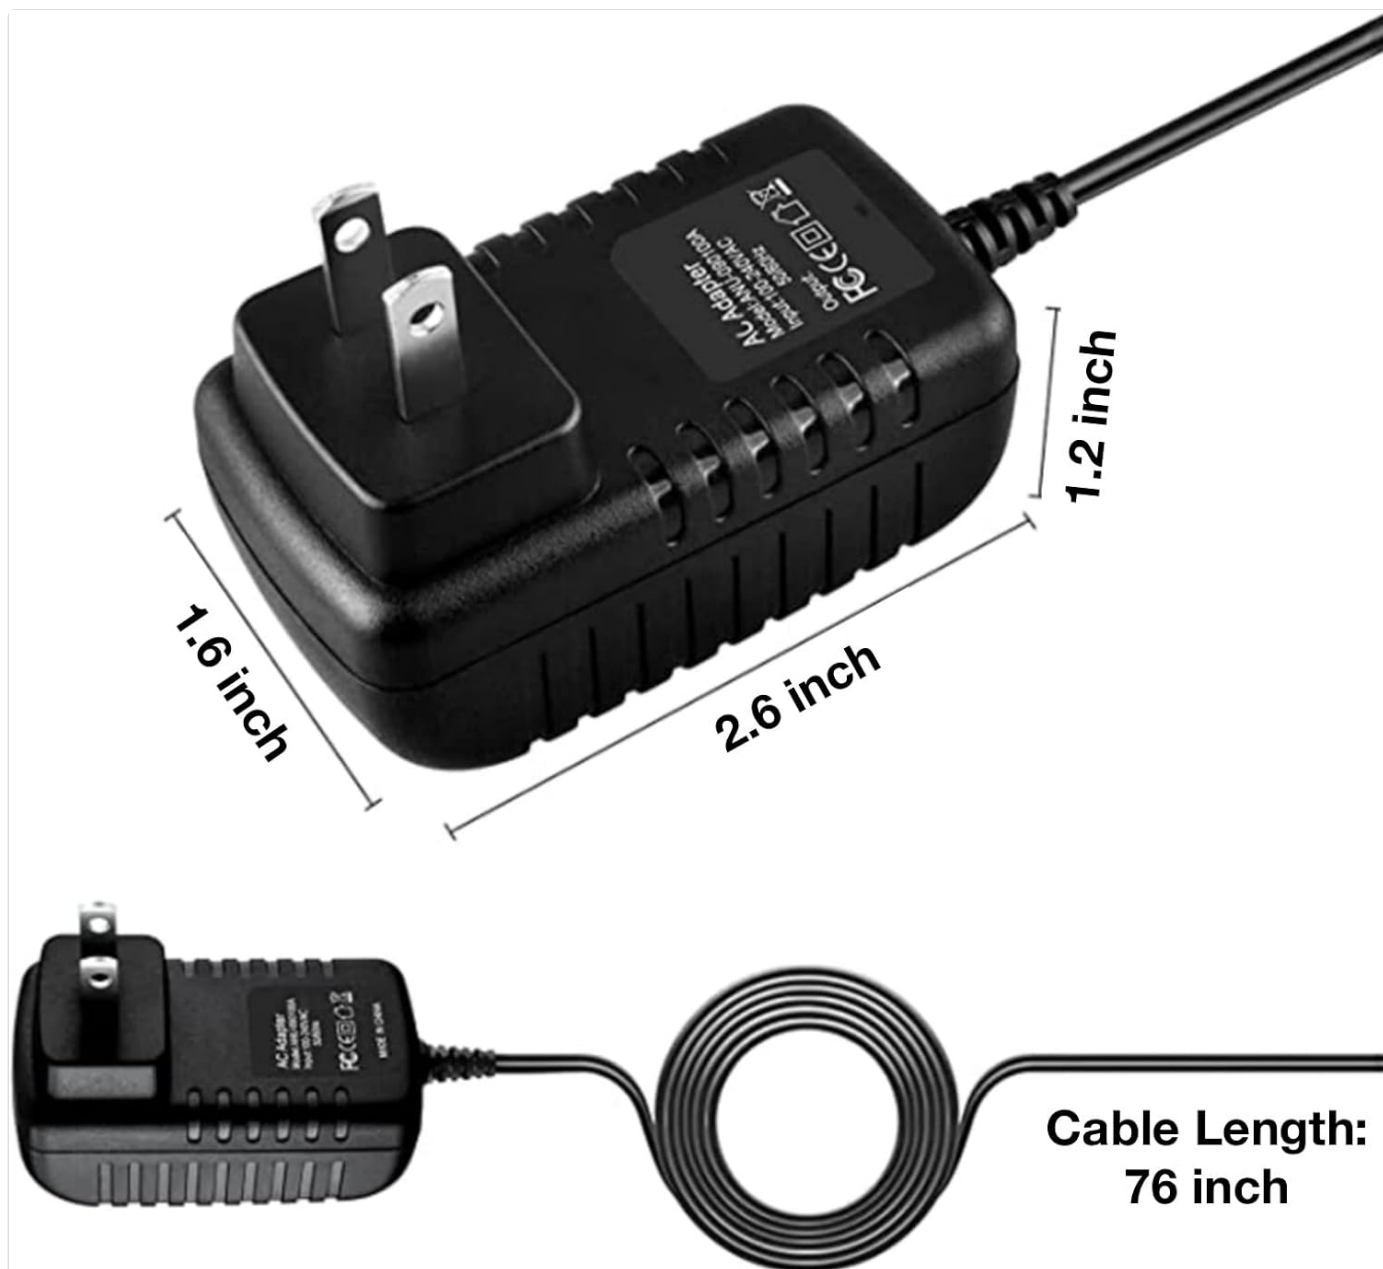


Image: Visual representation of the adapter's dimensions (2.6 x 1.6 x 1.2 inches) and cable length (76 inches).

8. WARRANTY AND SUPPORT

Information regarding specific warranty terms or direct customer support for this onerbl product is not available in the provided documentation. For warranty claims or technical assistance, please refer to the retailer or the manufacturer's official website if available.

© 2026 onerbl. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question