

[Manuals.plus](#) /

› [PAXA](#) /

› PAXA M100 Clip On Ear Headphones User Manual

## PAXA PAXA-M100AI

# PAXA M100 Clip On Ear Headphones User Manual

Model: PAXA-M100AI

## INTRODUCTION

The PAXA M100 Clip On Ear Headphones offer a unique open-ear design combined with advanced audio technology for a comfortable and immersive listening experience. Featuring Bluetooth 5.4 connectivity, a smart touchscreen charging case, and a lightweight, secure fit, these headphones are designed for active lifestyles and everyday use. This manual provides detailed instructions for setup, operation, and maintenance of your M100 headphones.



Image: PAXA M100 Clip On Ear Headphones and their charging case. The headphones are purple and feature a clip-on design, while the case has a prominent LCD touchscreen display.

## WHAT'S IN THE BOX

- Clip On Earbuds (1 pair)
- Clip On Headphones Case (1 unit)
- User Manual (this document)

## PRODUCT FEATURES

**1.3" Touchscreen Case:** Control music playback, capture photos (Android/iOS), and access mini-games directly from

the earbud case. This feature allows for phone-free control during various activities.

# LED Smart Touch Screen

Easy Touch Control, No Phone Needed




Image: The PAXA M100 charging case displaying its LED smart touchscreen with various control options like music playback, camera control, and games.

**Ultra-Lightweight & Secure Open-Ear Design:** Weighing only 4.1g per ear, these ergonomic clip-on earbuds provide zero-pressure comfort. The open-ear design promotes natural airflow, preventing ear canal fatigue and allowing situational awareness, ideal for outdoor activities.


# Ergonomic Design for All Day Comfort



Cartilage Pain

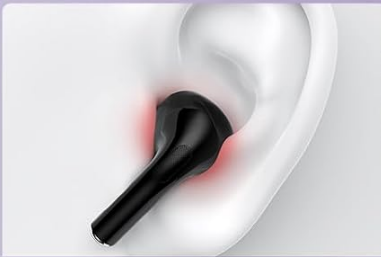

Eardrum Discomfort

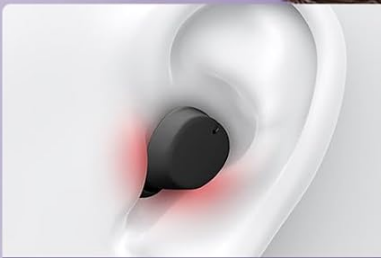


Unstable Fit



Image: A diagram illustrating the ergonomic design of the PAXA M100 earbuds, highlighting how they avoid common discomforts like cartilage pain, eardrum discomfort, and unstable fit associated with traditional earbuds.

# Open-Ear Clip-On Design

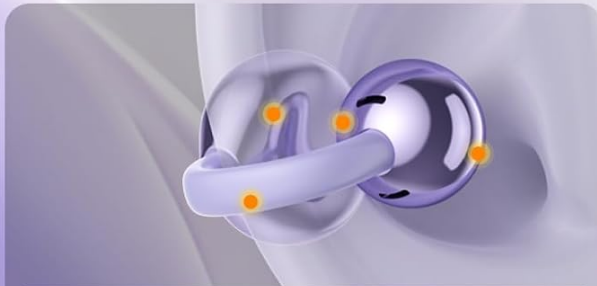

**Anti-Drop**  
Four-Point Support Design



**Adaptive Fit**  
Flexible C-Bridge

Image: A detailed view of the open-ear clip-on design, showcasing the anti-drop four-point support and the adaptive flexible C-bridge for a secure and comfortable fit.

**Immersive Hi-Fi Sound & Crystal-Clear Calls:** Equipped with 16.3mm dynamic drivers and ENC noise reduction, these headphones deliver high-fidelity audio with deep bass and clear vocals. Directional audio technology minimizes sound leakage, and dual microphones reduce 90% of background noise for clear calls.



## Immersive Dual-Core Stereo

Dual audio processors deliver cinematic clarity and explosive dynamic range, with real-time sound tuning that adapts to action movies, competitive gaming, and playlists – pulling you deeper into every scene.

Image: An exploded view of the earbud's internal components, highlighting the 14.2mm driver and dual audio processors for immersive stereo sound.

**Bluetooth 5.4 & 50H Playtime:** Enjoy stable and fast connectivity with the latest Bluetooth 5.4 chip. The 500mAh charging case provides a total of 50 hours of playtime, ensuring your music lasts through long commutes and workouts.

## Bluetooth V5.4

Advanced fast connection chip for ultra-low latency, enhanced processing power and energy-efficient performance.



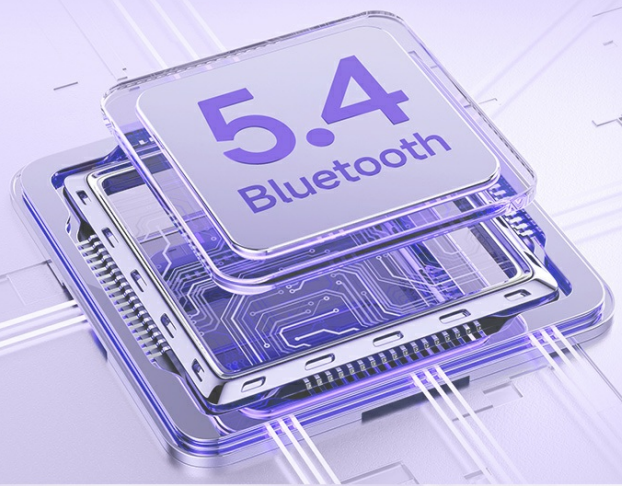


Image: An illustration detailing the battery life of the PAXA M100, showing 6 hours of single charge playtime and 60 hours total with the charging case, along with 15-minute fast charging via Type-C.

## Wearing Tips

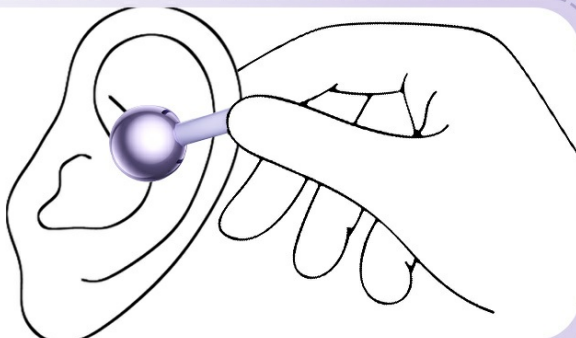

① Clip on earbuds to the thinnest part of your ear.

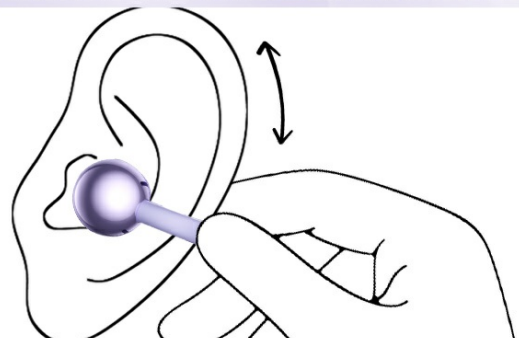

② Adjust to align the ear tips with your ear canal for optimal audio performance

Image: A graphic representing the Bluetooth V5.4 chip, emphasizing its advanced fast connection, ultra-low latency, enhanced processing power, and energy-efficient performance.

**Waterproof & Sweatproof Durability:** Built with nano-coating technology and rigid seams, these headphones are designed to withstand heavy rain, sweat, and dust, making them suitable for intense workouts and outdoor adventures.

## SETUP

### 1. Charging the Headphones and Case

Before first use, fully charge your PAXA M100 headphones and charging case. Connect the provided USB Type-C cable to the charging port on the case and a compatible USB power source. The LCD touchscreen will indicate the charging status.

A full charge takes approximately 2-3 hours. The earbuds provide 4-5 hours of playback on a single charge, and the charging case extends total playtime up to 50 hours.

### 2. Pairing with Your Device

1. Ensure the earbuds are in the charging case and the case has sufficient power.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth.
4. Search for available Bluetooth devices and select "M100" from the list.
5. Once connected, the earbuds will indicate successful pairing, and the case display may show a Bluetooth icon.

### 3. Wearing Tips

For optimal audio performance and comfort, follow these wearing instructions:

1. Clip the earbuds onto the thinnest part of your ear, ensuring the speaker is positioned towards your ear canal.
2. Gently adjust the ear tips to align with your ear canal for a secure and comfortable fit. This ensures the best sound quality and minimizes sound leakage.

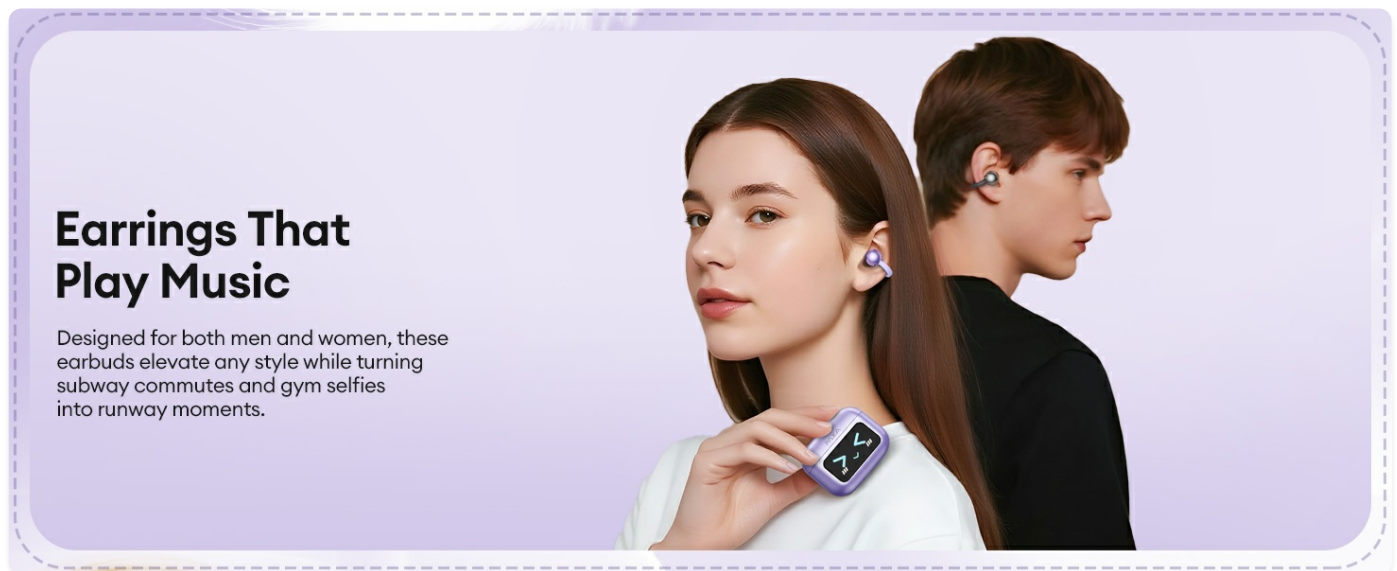 


Image: A visual guide demonstrating the correct way to wear the PAXA M100 clip-on earbuds for optimal fit and audio performance.

## OPERATING INSTRUCTIONS

### 1. Earbud Touch Controls

The PAXA M100 earbuds feature intuitive touch controls for managing music and calls:

| Action                                               | Function                  |
|------------------------------------------------------|---------------------------|
| Single tap L/R button                                | Volume up/down            |
| Double tap L/R button                                | Play/Pause                |
| Triple tap L/R button                                | Previous/Next track       |
| Double tap L/R button (incoming call)                | Answer call               |
| Press and hold L/R button for 2s (incoming call)     | Answer call               |
| Five taps L/R button (after disconnecting Bluetooth) | Reset to factory settings |



Image: A diagram illustrating the various touch control gestures on the earbuds for music playback and call management.

2. LCD Full-Color Smart Touch Screen (Case)

The charging case features a smart touchscreen for additional controls and information:

- **Music Control:** Play, pause, skip tracks directly from the case.
- **Battery Level:** View the remaining battery percentage for both the case and individual earbuds.
- **Settings:** Adjust equalizer settings, screen brightness, language, and wallpaper.
- **Find My Earphone:** Locate misplaced earbuds.
- **Camera Control:** Trigger your phone's camera for selfies (Android/iOS compatible).
- **Mini-Games:** Engage with built-in mini-games.



Image: A visual representation of the LCD full-color smart touchscreen interface on the charging case, showing various menu options and controls.

MAINTENANCE

- **Cleaning:** Regularly wipe the earbuds and charging case with a soft, dry, lint-free cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the headphones in their charging case to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.
- **Water Exposure:** While waterproof and sweatproof, avoid prolonged submersion in water. Ensure the charging port is dry before charging.

TROUBLESHOOTING

| Problem                                | Possible Solution                                                                                                                                                                                                                        |
|----------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Earbuds not pairing                    | Ensure earbuds are charged. Place them back in the case, close, then open again to re-enter pairing mode. Check your device's Bluetooth settings and try reconnecting.                                                                   |
| No sound or low volume                 | Check earbud and device volume levels. Ensure earbuds are properly seated in your ears. Re-pair the earbuds with your device.                                                                                                            |
| Intermittent connection                | Ensure your device is within the Bluetooth range (typically 10 meters/33 feet). Avoid obstacles between the earbuds and your device. Try resetting the earbuds to factory settings (five taps L/R button after disconnecting Bluetooth). |
| Charging case touchscreen unresponsive | Ensure the case is charged. Try restarting the case by closing and opening it. If issues persist, contact customer support.                                                                                                              |

SPECIFICATIONS

| Feature               | Detail                                                |
|-----------------------|-------------------------------------------------------|
| Model Number          | PAXA-M100AI                                           |
| Connectivity          | Bluetooth 5.4                                         |
| Earbud Weight         | 4.1g per earbud                                       |
| Driver Size           | 16.3mm dynamic drivers                                |
| Charging Case Battery | 500mAh                                                |
| Total Playtime        | Up to 50 hours (with charging case)                   |
| Water Resistance      | Waterproof & Sweatproof (Nano-coating technology)     |
| Control Method        | App, Touch                                            |
| Included Components   | Clip On Earbuds, Clip On Headphones Case, User Manual |

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official PAXA website or contact your retailer. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question