

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [WHATOOK](#) /

› [WHATOOK H05 Portable Handheld Turbo Fan User Manual](#)

WHATOOK H05

WHATOOK H05 Portable Handheld Turbo Fan

User Instruction Manual

1. PRODUCT OVERVIEW

The WHATOOK H05 Portable Handheld Turbo Fan is a versatile personal cooling device designed for various uses. It features a powerful brushless motor, 5 adjustable speed settings, an LED display for battery and speed indication, and a 4000mAh rechargeable battery. Its foldable design allows for handheld, desk, or neck-worn operation.



Image 1.1: The WHATOOK H05 fan demonstrating its three usage modes: handheld, folded for desk use, and worn around the neck with the included lanyard.

2. PACKAGE CONTENTS

Upon opening the package, please ensure all items are present:

- 1 x WHATOOK H05 Portable Handheld Turbo Fan
- 1 x USB Type-C Charging Cable
- 1 x Adjustable Neck Lanyard
- 1 x User Manual (this document)

Video 2.1: An unboxing video demonstrating the contents of the WHATOOK Portable Handheld Mini Fan package, including the fan, charging cable, and lanyard.

3. SETUP

3.1 Charging the Fan

Before first use, fully charge the fan. The fan is equipped with a 4000mAh battery and charges via a USB Type-C port.

1. Locate the Type-C charging port on the side of the fan.
2. Connect the provided USB Type-C cable to the fan and to a compatible USB power source (e.g., wall charger, power bank, laptop, car charger).
3. The LED display will show the battery percentage. When charging, the digits on the screen will flash. When fully charged (approximately 2.5 hours), the digital screen will display 100% constantly.



Image 3.1: The WHATOOK H05 fan highlighting its 4000mAh large capacity battery and the LED display showing battery percentage and speed.

3.2 Attaching the Neck Lanyard

For hands-free use, attach the adjustable neck lanyard:

1. Locate the small loop on the side of the fan's handle.
2. Thread the thin string of the lanyard through this loop.
3. Secure the lanyard by passing the clip end through the string loop and pulling tight.

- Adjust the lanyard length for comfortable wearing around your neck.

4. OPERATING INSTRUCTIONS


4.1 Power On/Off

- To power on: Press the power button once. The fan will start at Speed 20%.
- To power off: Long press the power button for 2 seconds.

4.2 Adjusting Fan Speed

The fan has 5 speed settings, indicated by the LED display (20%, 40%, 60%, 80%, 100%).

- While the fan is on, single-press the power button to cycle through the speeds.
- Each press will increase the speed by one level (20% → 40% → 60% → 80% → 100%).
- After 100%, pressing the button again will return the fan to Speed 20%.

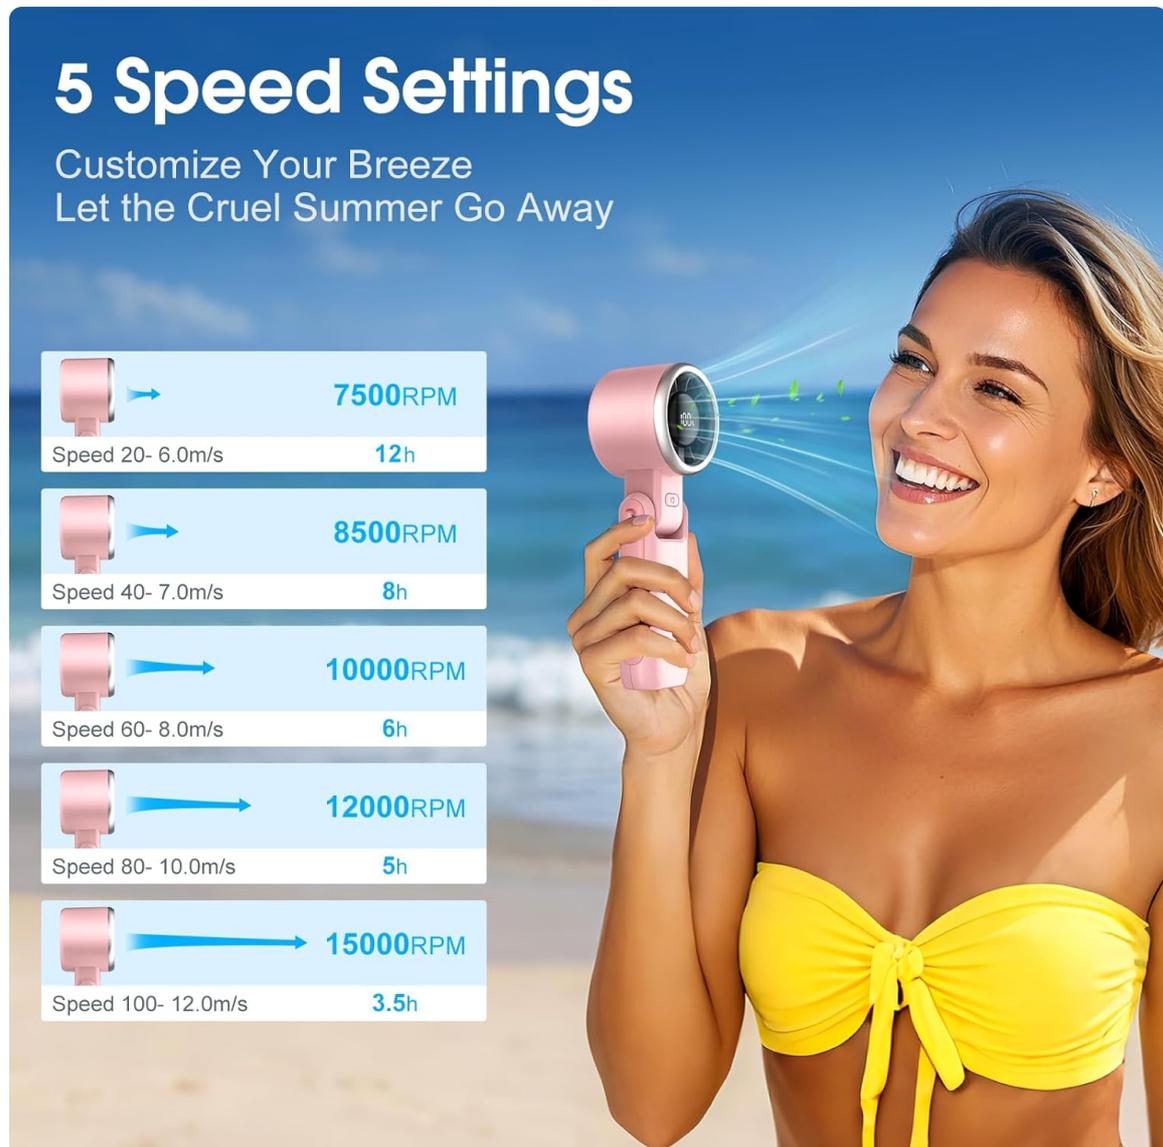

5 Speed Settings

Customize Your Breeze
Let the Cruel Summer Go Away

	7500RPM
Speed 20- 6.0m/s	12h
	8500RPM
Speed 40- 7.0m/s	8h
	10000RPM
Speed 60- 8.0m/s	6h
	12000RPM
Speed 80- 10.0m/s	5h
	15000RPM
Speed 100- 12.0m/s	3.5h

Image 4.1: The WHATOOK H05 fan's 5 speed settings, detailing RPM and wind speed for each level.

4.3 Usage Modes

The fan's 180° foldable design allows for three convenient usage modes:

- **Handheld Fan:** Use the fan in its extended form for direct cooling.
- **Desk Fan:** Fold the handle to create a stable base, allowing the fan to stand on a flat surface like a desk or nightstand.
- **Neck Fan:** Attach the lanyard and wear the fan around your neck for hands-free cooling.

Video 4.2: A demonstration of the WHATOOK Portable Handheld Mini Fan in various usage scenarios, including handheld and desk modes.

5. MAINTENANCE

5.1 Cleaning

- Ensure the fan is powered off before cleaning.
- Wipe the exterior of the fan with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or immerse the fan in water.
- Gently clean the fan grille with a soft brush or cotton swab to remove dust.

5.2 Storage

When not in use, store the fan in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the battery is partially charged (around 50%) before long-term storage to maintain battery health.

6. TROUBLESHOOTING

- **Fan not turning on:** Check if the battery is charged. Connect the fan to a power source using the Type-C cable and allow it to charge for a few minutes before attempting to power it on again.
- **Weak airflow:** Ensure the fan is set to a higher speed. Check the LED display for the current speed setting. Verify that there are no obstructions blocking the air intake or outlet.
- **Unusual noise:** A slight humming sound is normal during operation, especially at higher speeds. If the noise is excessive or unusual, ensure no foreign objects are caught in the fan blades.
- **Battery not holding charge:** Ensure you are using the provided Type-C cable and a compatible power adapter. If the issue persists, contact customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	WHATOOK
Model Name	H05
Product Dimensions	6.2"D x 1.8"W x 2.2"H
Item Weight	6.4 ounces
Power Source	Battery Powered (4000mAh)
Charging Time	2.5 hours
Working Time	Up to 12 hours (depending on speed)
Electric Fan Design	Table Fan
Special Feature	Foldable
Number of Power Levels	5
Motor Type	Brushless
Noise Level	50 Decibels
Control Method	Touch
Max Wind Speed	12m/s
Max Rotational Speed	15000 RPM

Upgraded Powerful Brushless Motor

Five times more powerful than ordinary fans

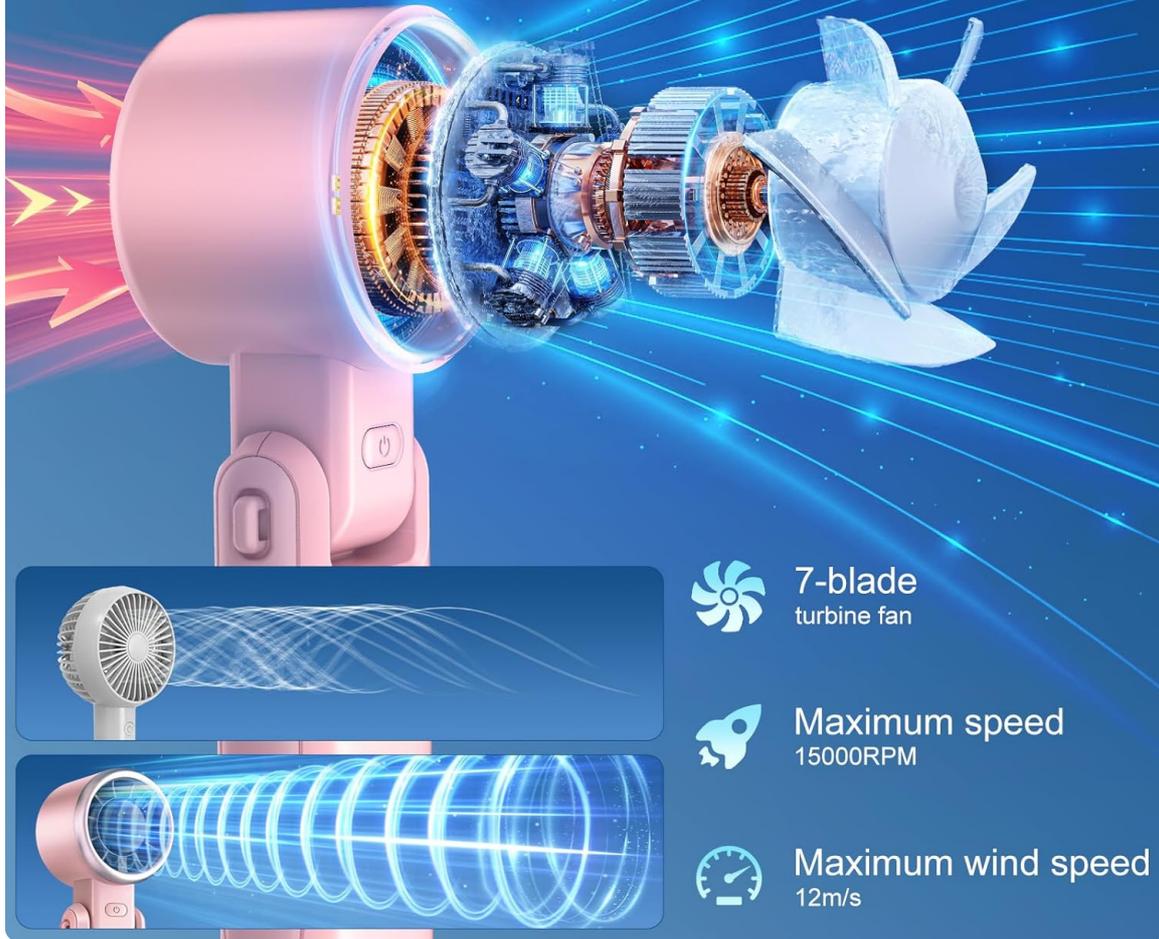


Image 7.1: Internal view of the WHATOOK H05 fan, showcasing its upgraded brushless motor, 7-blade turbine fan, and performance metrics.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official WHATOOK website or contact the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.