

## Techly 621185

# Techly 621185 Wireless Keyboard User Manual

Model: 621185 | Italian Layout | Black

## INTRODUCTION

Thank you for choosing the Techly 621185 Wireless Keyboard. This manual provides essential information for setting up, operating, and maintaining your new keyboard. Please read these instructions carefully before use to ensure optimal performance and longevity of your device.

The Techly 621185 is an ergonomic wireless keyboard with an Italian layout, designed for comfortable and silent typing. It features multimedia keys and 'chocolate keys' technology for a superior typing experience, making it ideal for office and educational use. It is compatible with Windows operating systems.

## PACKAGE CONTENTS

- Techly 621185 Wireless Keyboard (ICTWC006)
- 2 x AAA Batteries
- User Manual (this document)



Image: The retail packaging for the Techly 621185 Wireless Keyboard, showing the keyboard and key features.

## SETUP

---

### 1. Install Batteries

- Locate the battery compartment on the underside of the keyboard.
- Open the compartment cover.
- Insert the two AAA batteries, ensuring correct polarity (+/-).
- Close the battery compartment cover securely.

### 2. Connect to Your Computer (Plug and Play)

- Locate the USB receiver, typically stored within the battery compartment or a dedicated slot on the keyboard.
- Plug the USB receiver into an available USB port on your computer.
- Your computer should automatically detect and install the necessary drivers. This is a Plug and Play device, so no manual driver installation is usually required.
- Turn on the keyboard using the power switch (if available, usually on the back or side).



Image: Top-down view of the Techly 621185 Wireless Keyboard, showcasing the Italian layout and full key set.

## OPERATING INSTRUCTIONS

---

### Basic Use

- Ensure the keyboard is powered on and the USB receiver is connected to your computer.
- The keyboard is ready for use once recognized by your operating system.

### Multimedia Keys

The keyboard features dedicated multimedia keys for quick access to functions such as volume control, play/pause, and track skipping. These keys are typically located along the top row of the keyboard (F1-F12 or dedicated buttons).

### Adjustable Feet

For comfortable typing, you can adjust the tilt of the keyboard using the foldable feet located on the underside. Extend them for a more angled position or fold them in for a flatter profile.



Image: A user's hands typing on the Techly 621185 Wireless Keyboard, demonstrating its use in an office setting.

## MAINTENANCE

---

### Cleaning

- Disconnect the keyboard from your computer before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the surface of the keyboard.
- Avoid using harsh chemicals, abrasive cleaners, or solvents.
- For cleaning between keys, use compressed air to remove dust and debris.

### Battery Replacement

- When the keyboard's performance degrades or it stops responding, it may be time to replace the batteries.
- Follow the battery installation steps in the Setup section to replace the two AAA batteries.

## TROUBLESHOOTING

---

### Keyboard Not Responding

- **Check Batteries:** Ensure the batteries are correctly installed and not depleted. Replace if necessary.
- **Check Connection:** Make sure the USB receiver is securely plugged into a working USB port on your computer. Try a different USB port.
- **Power Switch:** Verify that the keyboard's power switch is in the 'ON' position.
- **Interference:** Move the keyboard closer to the USB receiver and away from other wireless devices that might cause interference.
- **Re-pair:** Some wireless keyboards have a re-pairing button on the receiver and/or keyboard. Consult the manufacturer's website if this is an option for your model.

### Keys Not Functioning Correctly

- **Clean Keys:** Dust or debris under the keys can cause issues. Use compressed air to clean around and under the affected keys.
- **Software Issues:** Restart your computer to resolve any temporary software glitches.

## SPECIFICATIONS

---

Feature	Detail
Brand	Techly
Model Number	621185 (ICTWC006)
Connectivity	Wireless
Layout	Italian
Color	Black
Special Features	Ergonomic, Silent Typing, High-Quality Chocolate Keys
Compatible Devices	PC
Compatible Operating Systems	Windows
Power Source	Battery (2x AAA included)
Dimensions (L x W x H)	438 mm x 144 mm x 21 mm

## WARRANTY AND SUPPORT

---

### Warranty Information

Techly products are designed and manufactured to the highest quality standards. This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your product or visit the official Techly website for detailed warranty terms and conditions.

### Customer Support

If you encounter any issues or have questions regarding your Techly 621185 Wireless Keyboard that are not addressed in this manual, please contact Techly customer support. You can find contact information on the official Techly website or through your retailer.