

### eKids B0DZPJ6D9W

# eKids Ms. Rachel Sing-Along Microphone Instruction Manual

Model: B0DZPJ6D9W

[Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

## 1. SETUP

### 1.1 Battery Installation

The eKids Ms. Rachel Sing-Along Microphone requires 2 AAA (R03) batteries for operation. Batteries are included with the product. Adult supervision is required for battery installation.

1. Locate the battery compartment on the back of the microphone.
2. Using a Phillips screwdriver, open the battery compartment door.
3. Insert 2 AAA (R03) batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment door and tighten the screw securely.

**Note:** Do not attempt to recharge non-rechargeable batteries. Rechargeable batteries should only be charged under adult supervision. Do not mix old and new batteries, or different types of batteries. Remove exhausted batteries promptly. Remove batteries if the unit will not be used for an extended period.





## Learn & Grow with Ms. Rachel!

Hi Friends!

I'm a passionate educator who creates research-based videos and products to help children and their families learn, **bond**, and **thrive**. I believe all children are capable, brilliant, and important.

My videos and play-along products infuse songs, games, and nursery rhymes with strategies from experts to help children reach important milestones in the crucial early years of learning.

Play is the best way for littles to learn. I'm so excited for you to play along!



© 2025 Toys for Littles, LLC. All rights reserved. MS. RACHEL and all names, characters, images, logos are protected trademarks, copyrights and other intellectual property owned or licensed by Toys for Littles, LLC or its affiliates and used under license.



Toying with Great Ideas™

 
Distributed by KIDdesigns, Inc. • 1299 Main Street • Rahway, NJ 07065  
www.kiddesigns.com • MANUFACTURED IN CHINA.

**CONSUMER INFORMATION • PRODUCT:** Sing-Along Microphone. • **WARRANTY:** One year limited warranty. Visit [www.kiddesigns.com/support](http://www.kiddesigns.com/support) for details. Valid only in U.S.A. • **CONTENTS:** Microphone. • **AGE GRADE:** Over 18 months. • **REQUIRES:** 2 x "AAA" (R03) batteries (included). The batteries included in this box are for demonstration purposes only. • Do not mix old and new batteries, and do not mix alkaline, carbon-zinc, or rechargeable nickel-cadmium batteries. • Insert batteries with correct polarity (+/-) as indicated. • Do not attempt to recharge non-rechargeable batteries. • To prevent battery leakage or damage, remove batteries from product if it will not be used for a month or longer. • Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eyes with gently flowing, lukewarm water for at least 30 minutes. If skin contact occurs, wash skin with clean water for at least 15 minutes. Seek medical attention if any symptoms occur. • Follow applicable laws and local regulations for the disposal and transportation of batteries. • **DO NOT DISPOSE OF BATTERIES IN A FIRE; BATTERIES MAY EXPLODE OR LEAK.** Product specifications and colors may vary from photo. Packaging should be kept as it contains important information.

### BATTERY INSTALLATION

Note: Batteries should always be installed by an adult.

1. Use a Phillips screwdriver to open the battery compartment door located on the back of the unit.
2. Install 2 x "AAA" (R03) batteries with + and - terminals as indicated in the compartment.
3. Replace the compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten the screw.

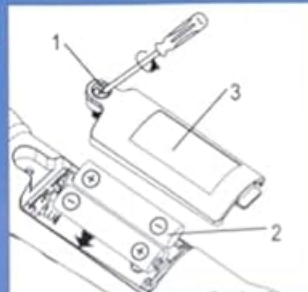

RA-070.EMv25ECB



22L4F0

Image: Back packaging of the microphone, illustrating battery installation steps and safety warnings.

## 2. OPERATION

The eKids Ms. Rachel Sing-Along Microphone is designed for interactive play, allowing children to sing along and amplify their voice.

### 2.1 Controls

- **Microphone Button:** Press this button to activate the voice amplification feature. Speak or sing into the microphone to hear your voice amplified.
- **Song Button:** Press this button to play built-in songs. The microphone includes three pre-recorded songs: "Old MacDonald," "Wheels on the Bus," and "I'm So Happy." Flashing lights will accompany the music.



Image: A diagram illustrating the microphone's components, including the microphone button, song button, dynamic speaker, and flashing lights.

### 2.2 Voice Amplification

To use the voice amplification feature, hold the microphone close to your mouth and press the Microphone Button. Your voice will be amplified through the built-in speaker.

### 2.3 Built-in Music and Lights

Press the Song Button to play one of the three built-in songs. The microphone's head will illuminate with flashing lights, enhancing the musical experience.



Image: A graphic showcasing the key features of the microphone: sing-along capability, flashing lights, and a real working microphone function.

### 3. MAINTENANCE

#### 3.1 Cleaning

To clean the microphone, wipe it with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water. Keep the microphone dry and away from moisture.

#### 3.2 Battery Care

Refer to the battery installation instructions in Section 1.1 for proper battery handling. Always ensure batteries are inserted with correct polarity. Remove batteries if the product will not be used for an extended period to prevent leakage.

### 4. TROUBLESHOOTING

Problem	Possible Cause	Solution
Microphone does not turn on or play music.	Batteries are low, incorrectly installed, or missing.	Check battery polarity. Replace with fresh AAA batteries.
Voice amplification is not working.	Microphone button not pressed, or batteries are low.	Ensure the Microphone Button is pressed. Replace batteries if needed.

Problem	Possible Cause	Solution
Sound is distorted or has feedback.	Microphone is too close to the speaker, or hand is covering the microphone head.	Maintain a slight distance from the speaker. Avoid covering the microphone head with your hand.
Lights are not flashing with music.	Batteries are low.	Replace with fresh AAA batteries.

## 5. SPECIFICATIONS

- **Model:** B0DZPJ6D9W
- **Product Dimensions:** 8.19 x 1.99 x 2.04 inches
- **Item Weight:** 4.2 ounces
- **Manufacturer Recommended Age:** 18 months - 6 years
- **Batteries:** 2 x AAA (R03) batteries (included)
- **Manufacturer:** KIDdesigns
- **UPC:** [0092298963587](#)

## 6. WARRANTY & SUPPORT

### 6.1 Limited Warranty

This product is covered by a **One Year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. For full warranty details and conditions, please refer to the product packaging or contact customer support.

### 6.2 Customer Support

For technical assistance, warranty claims, or product inquiries, please contact KIDdesigns customer support. You can find contact information on the product packaging or visit the eKids brand store:

[Visit the eKids Brand Store](#)




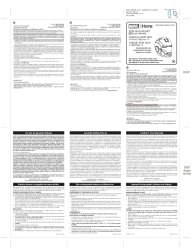 
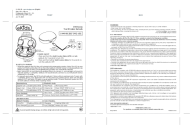 
**Manufacturer:** KIDdesigns Inc., 1290 Main Street, Rahway, NJ 07065, USA.

## 7. PRODUCT VIDEOS

No official product videos from the seller were available in the provided data to embed in this manual.



## Related Documents - B0DZPJ6D9W

	<p><a href="#">Marvel Guardians of the Galaxy Dancing Groot GG-408 User Manual and Safety Information</a></p> <p>Comprehensive guide for the Marvel Guardians of the Galaxy Dancing Groot (Model GG-408) by eKids, covering setup, operation, maintenance, safety precautions, and battery information.</p>
	<p><a href="#">Pokémon Walkie Talkies PK-207.EXv24 User Guide</a></p> <p>User guide for the Pokémon Walkie Talkies PK-207.EXv24, featuring static-free extended range and an easy push-to-talk button. Includes setup, battery installation, and FCC compliance information.</p>
	<p><a href="#">eKids Bluetooth Karaoke Microphone with EZ Link Technology (Model: Di-B24EN.EXv1M) - User Guide</a></p> <p>User guide for the eKids Bluetooth Karaoke Microphone with EZ Link Technology (Model: Di-B24EN.EXv1M). Learn about setup, charging, Bluetooth connection, EZ Link app usage, controls, warranty, and troubleshooting.</p>
	<p><a href="#">eKids 554 Series Bluetooth Karaoke with EZ Link User Manual</a></p> <p>This manual provides instructions for the eKids 554 Series Bluetooth Karaoke with EZ Link, covering setup, operation, maintenance, and troubleshooting. Learn how to connect via Bluetooth, use USB mode, record audio, and utilize the EZ Link app for music playlists.</p>
	<p><a href="#">eKids Iron Man Helmet 1:2 Scale Speaker User Manual and Safety Guide</a></p> <p>User manual and safety instructions for the eKids Iron Man Helmet 1:2 Scale Speaker, model Vi-B72IM. Learn how to charge, connect via Bluetooth, use speakerphone, and find important safety and warranty information.</p>
	<p><a href="#">eKids B18 Series True Wireless Earbuds User Guide</a></p> <p>This guide provides instructions for setting up, pairing, and using the eKids B18 Series True Wireless Earbuds, including details on power, Bluetooth connectivity, speakerphone functions, voice assistant, and LED indicators.</p>