

[Manuals.plus](#) /

› [vynsnp](#) /

› vynsnp Extractor Blade Replacement Part Instruction Manual for NutriBullet 600W 900W Blenders (NB-101B, NB-101S, NB-201)

vynsnp 762203337856

vynsnp Extractor Blade Replacement Part Instruction Manual

For NutriBullet 600W & 900W Blenders (NB-101B, NB-101S, NB-201)

1. INTRODUCTION

This manual provides essential information for the safe and effective use, installation, and maintenance of your vynsnp Extractor Blade Replacement Part. This blade is designed to restore the blending performance of compatible NutriBullet blenders. Please read these instructions thoroughly before use.

2. COMPATIBILITY INFORMATION

This extractor blade replacement part is specifically designed for the following NutriBullet blender models:

- NutriBullet 600-Watt (Model NB-101B)
- NutriBullet Pro 900-Watt (Models NB-101S, NB-201)

Important: This blade is **NOT COMPATIBLE** with Nutri Ninja, NutriBullet RX, Magic Bullet, or Baby Bullet blenders. Using this blade with incompatible models may result in damage to the appliance or personal injury.


COMPATIBLE



NOT COMPATIBLE



NOT COMPATIBLE



NOT COMPATIBLE

An image illustrating compatible NutriBullet 600W and 900W blenders (NB-101B, NB-101S, NB-201) and incompatible models such as Nutri Ninja, Magic Bullet, and Baby Bullet.

3. SAFETY INFORMATION

- Always unplug the blender base from the power outlet before installing, removing, or cleaning the blade.
- Handle the extractor blade with care as the blades are sharp. Avoid direct contact with the cutting edges.
- Ensure the blade is securely attached to the cup and the cup is properly seated on the blender base before operating.
- Do not operate the blender if the blade appears damaged or loose.
- Keep hands and utensils out of the blending cup while the blender is in operation.

4. SETUP AND INSTALLATION

Follow these steps to replace your old blade with the new vynsnp Extractor Blade:

1. **Unplug the Blender:** Ensure your NutriBullet blender base is unplugged from the electrical outlet.

2. **Remove Old Blade:** Carefully unscrew and remove the existing blade assembly from your blending cup.
3. **Inspect New Blade:** Examine the new vynsnp extractor blade. It includes a pre-installed rubber gear and gasket. All rubber gears are reverse threaded for secure attachment.



A close-up view of the vynsnp extractor blade replacement part, featuring four stainless steel blades within a gray plastic base.

4. **Attach New Blade:** Place the new extractor blade onto the open end of your blending cup. Twist the blade clockwise until it is securely tightened. Ensure the gasket forms a tight seal to prevent leaks.



An underside view of the vynsnp extractor blade, highlighting the six-point rubber gear and gasket for secure attachment to the blender base.

5. **Ready for Use:** Your blender is now ready for operation with the new extractor blade.

5. OPERATING INSTRUCTIONS

Once the vynsnp Extractor Blade is securely attached to your blending cup, operate your NutriBullet blender as follows:

1. Fill the blending cup with your desired ingredients, ensuring not to exceed the MAX fill line.
2. With the extractor blade firmly screwed onto the cup, invert the cup and place it onto the NutriBullet power base.
3. Press down and twist the cup to activate the blender. Blend until your desired consistency is achieved.
4. Once blending is complete, release the cup from the power base and carefully unscrew the extractor blade.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your extractor blade:

- **Immediate Cleaning:** After each use, rinse the blade under running water to remove any food residue.

- **Dishwasher Safe:** The vynsnp extractor blade is dishwasher safe. Place it on the top rack of your dishwasher for cleaning.
- **Hand Washing:** If hand washing, use warm, soapy water and a brush to clean around the blades. Exercise extreme caution due to sharp edges.
- **Drying:** Ensure the blade is completely dry before storing to prevent rust or mildew.
- **Inspection:** Periodically inspect the rubber gasket and gear for any signs of wear, cracks, or damage. Replace the blade if significant wear is observed.

7. TROUBLESHOOTING

If you encounter issues with your new extractor blade, consider the following:

- **Leaking:** Ensure the blade is tightly screwed onto the blending cup and the gasket is properly seated and undamaged.
- **Blade Not Spinning:** Check that the blending cup with the blade is correctly seated and twisted onto the power base. Ensure the blender is plugged in and receiving power.
- **Unusual Noise:** This could indicate an issue with the blade's bearings or the blender's motor. Discontinue use and inspect the blade for any visible damage.
- **Difficulty Blending:** Ensure you are not overfilling the cup or using ingredients that are too large or hard for the blender.

8. SPECIFICATIONS

Feature	Detail
Compatibility	NutriBullet 600W (NB-101B), NutriBullet Pro 900W (NB-101S, NB-201)
Blade Material	Stainless Steel
Base Material	BPA-free Plastic
Blade Dimensions	1.5 inches (Height) x 4 inches (Diameter)
Gear Type	Reverse Threaded Rubber Gear
Cleaning	Dishwasher Safe



The vynsnp extractor blade replacement part shown with overlaid measurements indicating a 4-inch diameter and 1.5-inch height.

9. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your vynsnp Extractor Blade Replacement Part, please contact the manufacturer directly through your purchase platform. Please refer to your purchase documentation for specific warranty details, as warranty terms may vary.

© 2025 vynsnp. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question