

## Nafewin DT2W-1

# Nafewin 2 Burner Electric Cooktop (Model DT2W-1) Instruction Manual

Your guide to safe and efficient use of your new electric cooktop.

## 1. INTRODUCTION

---

Thank you for choosing the Nafewin 2 Burner Electric Cooktop, Model DT2W-1. This manual provides essential information for the safe installation, operation, and maintenance of your appliance. Please read it thoroughly before use and keep it for future reference.

This electric cooktop features two independent heating zones, 9 power levels, knob controls, a timer, and safety features like a child safety lock and residual heat warning. It is designed for both countertop and built-in use.



Figure 1: Nafewin 2 Burner Electric Cooktop

## 2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, burns, or injury.

- **Electrical Connection:** Ensure the cooktop is connected to a 110V-120V electrical outlet. Do not use extension cords or adapters.
- **Surface Heat:** The ceramic glass surface will become hot during and after use. Avoid touching hot surfaces. Use pot holders or oven mitts.
- **Residual Heat Warning:** The cooktop features a residual heat indicator ('H' display) to warn you when the surface is still hot after being turned off. Do not touch the surface until the indicator disappears.
- **Overheat Protection:** The appliance is equipped with built-in overheat protection to prevent damage from excessive temperatures.
- **Child Safety Lock:** Activate the child safety lock to prevent accidental operation by children.
- **Proper Cookware:** Use only pots and pans with flat bottoms that are compatible with electric cooktops.
- **Ventilation:** Ensure adequate ventilation around the cooktop, especially if built-in, to allow the cooling fan to operate effectively.
- **Cleaning:** Disconnect power before cleaning. Allow the cooktop to cool completely. Do not use abrasive

cleaners or sharp objects that could scratch the glass surface.

## HOT WARNING

"H" to remind you that the temperature is too high, do not touch it.



Figure 2: Residual Heat Warning ('H' indicator)

# CHILD SAFTY LOCK

99 Minutes Timer



Figure 3: Child Safety Lock Feature

## 3. SETUP AND INSTALLATION

The Nafewin 2 Burner Electric Cooktop can be used as a portable countertop unit or installed as a built-in appliance.

### 3.1 Countertop Use

Place the cooktop on a stable, flat, heat-resistant surface. Ensure there is sufficient space around the unit for proper ventilation. Plug the 110V-120V plug into a suitable electrical outlet.

### 3.2 Built-in Installation

If installing as a built-in unit, ensure the countertop opening meets the specified dimensions. The product dimensions are approximately 11.34"D x 20.08"W x 3.15"H. Refer to the detailed diagram below for precise cutout measurements.

# BUILT-IN SIZE



Figure 4: Built-in Dimensions

Ensure proper clearance for the bottom cooling fan to prevent overheating and extend the appliance's lifespan.

# Easy to Clean



Figure 5: Bottom Radiator Fan

## 4. OPERATING INSTRUCTIONS

The cooktop features independent controls for each burner, allowing flexible cooking.

### 4.1 Powering On/Off

1. Plug the cooktop into a 110V-120V power outlet.
2. To power on a burner, press and hold the power button located near the corresponding knob. The LED display will illuminate.
3. To power off, press and hold the power button again.

### 4.2 Adjusting Power Levels

Each burner has 9 power levels (P1-P9) controlled by a dedicated knob. Turn the knob clockwise to increase the power level and counter-clockwise to decrease it. The selected power level will be shown on the LED display.

# LED TOUCH CONTROL

Quick and Easy Use



Figure 6: Knob and LED Controls

## 4.3 Timer Function

The cooktop includes a timer function (0-99 minutes) for precise cooking control. To set the timer:

1. With the burner powered on, press the timer button.
2. Use the corresponding knob to adjust the desired cooking time.
3. The cooktop will automatically shut off once the timer expires.

## 4.4 Child Safety Lock

To activate the child safety lock, press and hold the lock button. An indicator light will show that the lock is active, preventing accidental changes to settings. To deactivate, press and hold the lock button again.

## 4.5 Cookware Compatibility

This electric cooktop is compatible with all types of flat-bottomed cookware, including iron, ceramic, glass, aluminum, stainless steel, and copper pots and pans.

# COMPATIBLE ALL COOKWARE

Any pots/pans with flat bottoms are suitable



Figure 7: Compatible Cookware Types

## 4.6 Official Product Video

Watch this video for a visual demonstration of the Nafewin 2 Burner Electric Cooktop in use:

*Video 1: Nafewin 2 Burner Electric Cooktop 2100W Electric Stove Top demonstration.*

## 5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your cooktop.

- **Daily Cleaning:** After each use, allow the cooktop to cool completely. Wipe the ceramic glass surface with a damp cloth and mild detergent. Dry thoroughly with a soft cloth.
- **Stubborn Stains:** For tougher stains, use a non-abrasive ceramic cooktop cleaner. Apply a small amount to the cooled surface and gently scrub with a soft cloth or sponge.
- **Avoid Abrasives:** Do not use abrasive pads, steel wool, or harsh chemical cleaners, as these can scratch or damage the glass surface.
- **Spills:** Clean spills immediately once the surface has cooled to prevent them from baking onto the surface.
- **Cooling Fan:** Ensure the cooling fan vents on the bottom of the unit remain clear of obstructions.

# Easy to Clean



Figure 8: Easy to Clean Ceramic Glass Surface

## 6. TROUBLESHOOTING

If you encounter issues with your cooktop, refer to the following common problems and solutions:

- **Cooktop not turning on:** Check if the power cord is securely plugged into a working 110V-120V outlet. Ensure the power button for the desired burner is pressed and held to activate.
- **Burner not heating:** Verify that the power level is set above '0'. Ensure the cookware is properly placed on the heating zone.
- **'H' indicator remains on:** This indicates residual heat. The surface is still hot. Wait for the indicator to disappear before touching or cleaning.
- **Cooktop shuts off unexpectedly:** This may be due to the overheat protection activating. Allow the unit to cool down before attempting to restart. Ensure proper ventilation.
- **Child safety lock engaged:** If controls are unresponsive, check if the child safety lock is active. Press and hold the lock button to deactivate it.

If problems persist after attempting these solutions, please contact customer support.

## 7. SPECIFICATIONS

---

| Feature                        | Specification  |
|--------------------------------|--|
| Model Number                   | DT2W-1   |
| Brand                          | Nafewin  |
| Color                          | Black  |
| Material                       | Ceramic Glass  |
| Product Dimensions (D x W x H) | 11.34" x 20.08" x 3.15"  |
| Wattage                        | 3000 watts (Total)   |
| Voltage                        | 220 Volts (Note: Product title states 110V, specifications state 220V. Please verify with product labeling.) |
| Heating Elements               | 2 (Radiant Burners)  |
| Controls Type                  | Knob & Touch   |
| Special Features               | Kid Safety Lock, Over Temperature Protection, Residual Heat Warning, Temperature Control, Timer              |
| Included Components            | 2 Burner Electric Cooktop 2100W  |

## 8. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Nafewin website. Keep your proof of purchase for any warranty claims.