

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PGST](#) /

› [PGST P92R-3 Smart Infrared Motion Sensor Instruction Manual](#)

PGST P92R-3

PGST P92R-3 Smart Infrared Motion Sensor Instruction Manual

Model: P92R-3

1. INTRODUCTION

The PGST P92R-3 Smart Infrared Motion Sensor is a passive infrared (PIR) detector designed to enhance the security of your home or office. It detects movement by sensing changes in infrared radiation within its detection area. This sensor is compatible with various PGST home alarm systems, including models A103F, A105F, A107F, A108F, A109F, A01F, A02F, and A519W, providing reliable anti-theft protection.



This image displays three PGST P92R-3 Smart Infrared Motion Sensors, showcasing their compact, white design suitable for discreet placement.

2. PRODUCT OVERVIEW

2.1 Key Features

- Wide Detection Range:** Offers a 110-degree detection angle to cover significant areas.
- Motion Detection:** Utilizes PIR technology to accurately detect human movement.
- Low Battery Report:** Automatically notifies the alarm host when the battery level is low, ensuring continuous protection.
- Wireless Connectivity:** Integrates seamlessly with compatible PGST alarm systems.
- Easy Installation:** Designed for simple wall-mount setup.



A PGST P92R-3 motion sensor is shown mounted on a wall, illustrating its key features: a 110-degree detection range, active motion detection capabilities, and a low battery reporting function for timely alerts.

2.2 Components

Familiarize yourself with the main components of the P92R-3 sensor:

- **Detection Window:** The area through which the sensor detects infrared changes.
- **Installation Bracket:** Used for mounting the sensor securely to a wall.
- **Power Switch:** Located on the back of the device to turn the sensor on or off.
- **Battery Compartment:** Houses the required batteries.

Non solo una sirena wireless, ma anche un host di allarme

Può anche essere collegato al telecomando, sensore porta, sensore di movimento a infrarossi, come host.



A detailed diagram of the PGST P92R-3 sensor, pointing out its main components: the detection window, the installation bracket for mounting, and the power switch located on the back.

3. SETUP

3.1 Battery Installation

1. Open the battery compartment cover on the back of the sensor.
2. Insert the included 1 AA battery and 1 Lithium Polymer battery, ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.

Product Introduction



This image provides a view of the back of the PGST P92R-3 sensor, revealing the battery compartment and the power switch.

3.2 Mounting the Sensor

The P92R-3 sensor is designed for wall mounting to optimize its detection capabilities.

1. Choose a suitable location for installation, typically in a corner or on a wall where it can cover the desired area without obstruction. Avoid direct sunlight or heat sources.
2. Use the provided screws and wall anchors to securely attach the installation bracket to the wall.
3. Slide the sensor onto the mounted bracket until it clicks into place. Ensure it is firmly attached.



The PGST P92R-3 sensor is displayed alongside its mounting accessories, including screws and wall anchors, ready for installation.

3.3 Pairing with PGST Alarm System

Refer to your specific PGST alarm system's manual (e.g., A103F, A105F, A107F, A108F, A109F, A01F, A02F, A519W) for detailed instructions on how to add new wireless sensors. Generally, the process involves:

1. Accessing the 'Add Sensor' or 'Zone Settings' menu on your PGST alarm host.
2. Activating the sensor (e.g., by triggering it or pressing a pairing button if available) to send a signal to the host.
3. Confirming the sensor is successfully added to a zone on the alarm system.

4. OPERATING INSTRUCTIONS

4.1 Activating the Sensor


Once batteries are installed and the sensor is mounted, switch the power button on the back of the sensor to the 'ON' position. The sensor will typically perform a self-test and enter standby mode.

4.2 Motion Detection

When the alarm system is armed, the P92R-3 sensor will monitor its detection area for changes in infrared heat signatures. Upon detecting movement, it will transmit a signal to the connected PGST alarm host, triggering the alarm according to your system's settings.

Allarme batteria sensore wireless batteria scarica

Il magnete della porta, la bassa tensione a infrarossi invia segnali all'host, e l'host invia le informazioni all'utente tramite l'APP

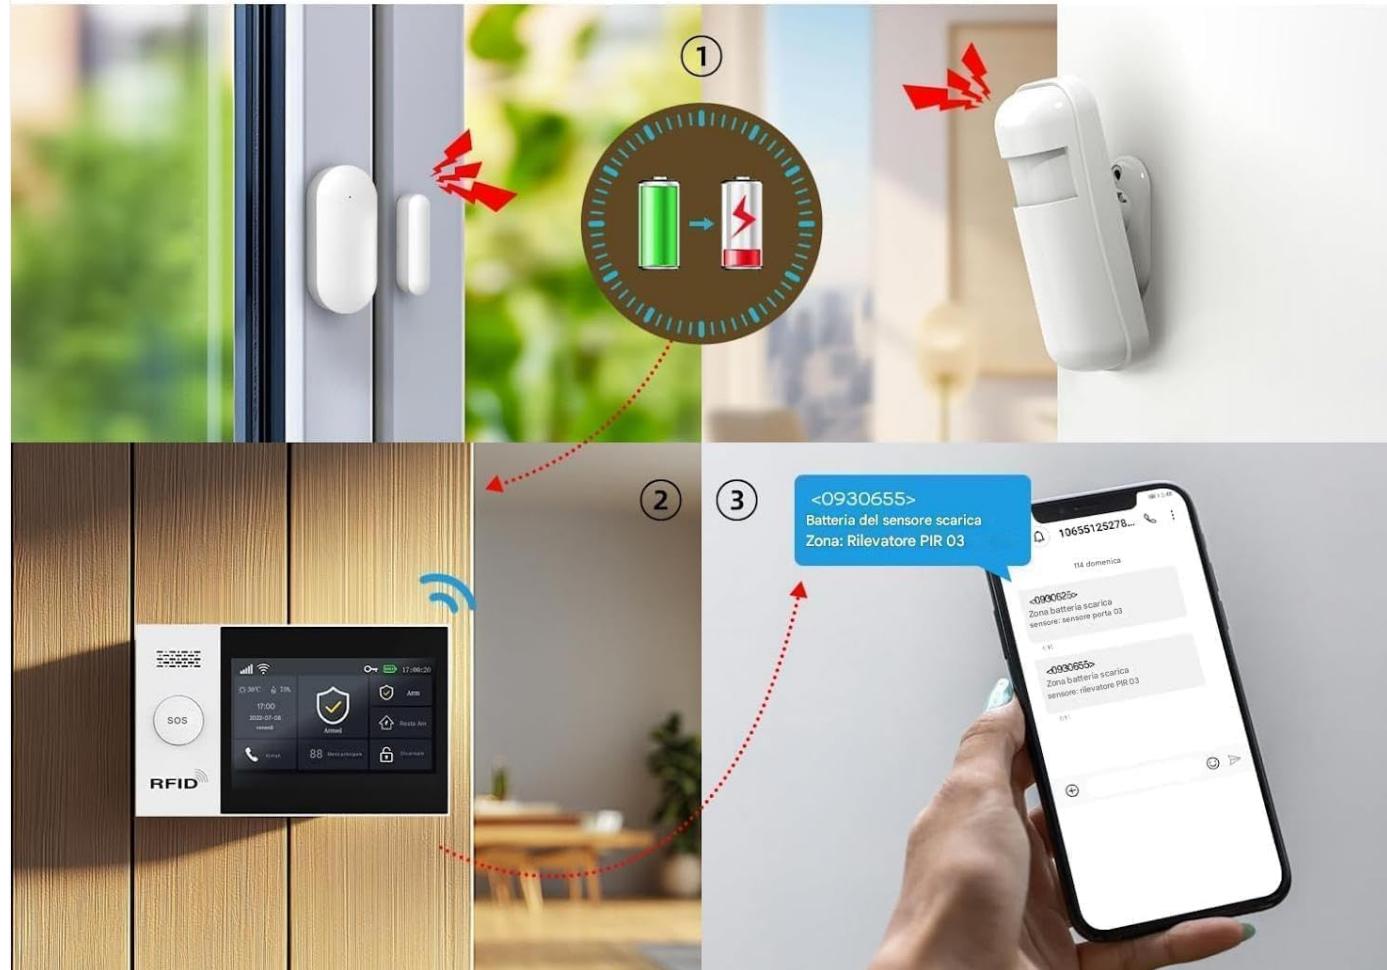

This image depicts a PGST P92R-3 motion sensor actively detecting movement within a room, indicated by a red infrared beam covering a 120-degree angle and a range of 12 meters.

4.3 Low Battery Notification

The sensor continuously monitors its battery level. When the battery is low, it will send a signal to the alarm host, which will then notify you through the alarm panel or associated mobile application. Replace batteries promptly to ensure uninterrupted security.



A multi-panel diagram showing the sequence of a low battery alert: the sensor detects low power, sends a signal to the host alarm system, which then forwards a notification to the user's mobile application.

5. MAINTENANCE

5.1 Battery Replacement

When a low battery alert is received, replace both the AA and Lithium Polymer batteries immediately. Use only recommended battery types. Follow the steps in Section 3.1 for battery installation.

5.2 Cleaning

Periodically clean the detection window with a soft, dry cloth to ensure optimal performance. Avoid using abrasive cleaners or solvents, as these can damage the sensor.

6. TROUBLESHOOTING

- **Sensor not detecting motion:**

- Check if the sensor is powered on.
- Ensure batteries are correctly installed and not depleted.
- Verify the detection window is clean and unobstructed.
- Confirm the sensor is within range of the alarm host.
- Check the alarm system's zone settings to ensure the sensor is active.

- **False alarms:**

- Ensure the sensor is not placed near heat sources (e.g., vents, direct sunlight) or moving objects (e.g., curtains near a window).
- Verify the mounting is secure and the sensor is not vibrating.
- Adjust the sensor's position if necessary to avoid pets or drafts.

- **Sensor not connecting to alarm host:**

- Ensure the sensor is powered on and batteries are good.
- Re-attempt the pairing process as described in your alarm system's manual.
- Check for any interference or distance issues between the sensor and the host.

7. SPECIFICATIONS

Brand	PGST
Model Number	P92R-3
Power Source	Battery Powered
Battery Type	1 AA and 1 Lithium Polymer (included)
Maximum Range	5 Meters (detection)
Detection Angle	110 degrees
Mounting Type	Wall Mount

Compatible Devices	PGST Home Security System (A103F, A105F, A107F, A108F, A109F, A01F, A02F, A519W)
Product Dimensions	1"D x 1"W x 1"H (approximate)
Item Weight	7.8 ounces
UPC	704444502471

8. WARRANTY AND SUPPORT

PGST products are manufactured with quality and reliability in mind. For warranty information, technical support, or further assistance, please refer to the documentation provided with your PGST alarm system or visit the official PGST website. Keep your purchase receipt for warranty claims.

© 2025 PGST. All rights reserved.