

## Dzaki S2

# Dzaki S2 Cordless Vacuum Cleaner User Manual

Model: S2

## INTRODUCTION

---

Thank you for choosing the Dzaki S2 Cordless Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your new vacuum. Please read it thoroughly before first use and keep it for future reference.



Image: The DZAKI S2 Cordless Vacuum Cleaner shown with its main body, extension tube, motorized floor brush, crevice tool, and 2-in-1 brush attachment.

## IMPORTANT SAFETY INSTRUCTIONS

---

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.

- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Store your appliance indoors in a cool, dry area.

## PACKAGE CONTENTS

---

Verify that all components are present and in good condition upon opening the package:

- Main Motor (Handheld Vacuum)
- Motorized Cleaner Brush (LED Roller Brush)
- Retractable Metal Tube (Scalable Tube)
- Battery
- Long Crevice Tool (Crevice Nozzle)
- 2-in-1 Brush (2 in 1 Dust Brush)
- Charger (Adapter)
- Wall Bracket (Wall Mount)
- Cleaning Gadget
- Dust Cup
- User Guide
- User Manual (This document)
- 1 Extra HEPA Filter

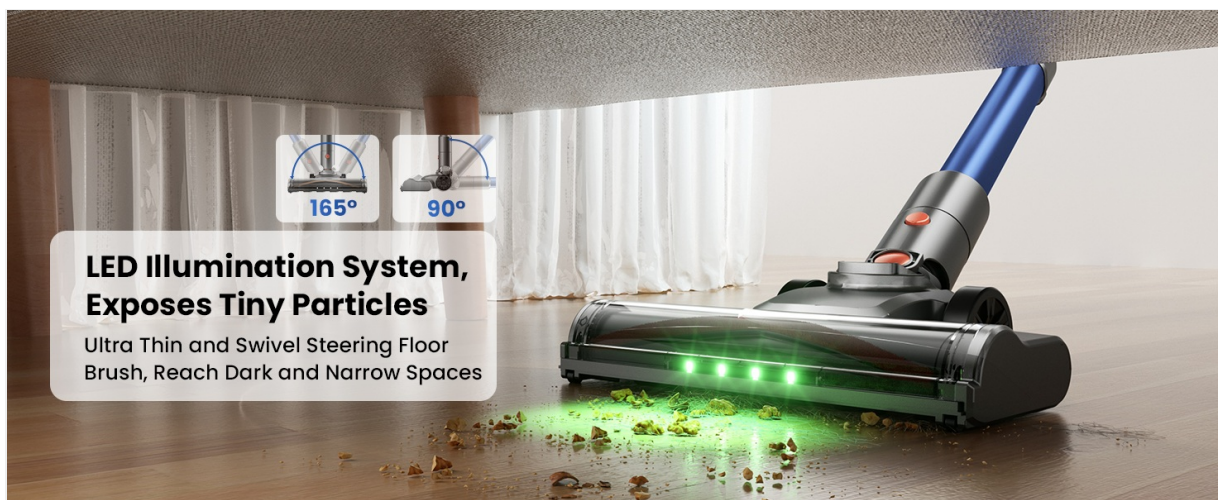


Image: An illustration detailing all components included in the Dzaki S2 Cordless Vacuum Cleaner package.

## ASSEMBLY

---

The Dzaki S2 is designed for quick and easy assembly without the need for tools.

1. **Attach the Floor Brush:** Align the motorized cleaner brush with the bottom of the retractable metal tube and push until it clicks securely into place.
2. **Connect the Main Motor:** Attach the main motor (handheld unit) to the top of the retractable metal tube, ensuring it clicks firmly.
3. **Insert the Battery:** Slide the battery into the designated slot on the main motor until it locks.
4. **Attach Accessories:** For specific cleaning tasks, attach the crevice tool or 2-in-1 brush directly to the main motor for handheld use, or to the end of the retractable metal tube.



Image: A step-by-step visual guide demonstrating the assembly process of the vacuum cleaner.

## OPERATION

### Charging the Battery

Before first use, fully charge the battery. Connect the charger to the battery and plug it into a power outlet. The LED display will indicate charging status. A full charge provides up to 55 minutes in Eco Mode or 25 minutes in Max Mode.

# Entire Home Cleaning Without Interruption



**50min**  
ECO Mode



**25min**  
MAX Mode



**Cleaning**  
Cordless

Image: The detachable battery pack, illustrating its capacity for extended cleaning sessions.

## Powering On/Off and Suction Modes

Press the power button to turn the vacuum on. The Smart LED Display will activate. Press the suction adjustment button to cycle between Eco Mode (standard suction) and Max Mode (powerful suction for deep cleaning).

# ALL-in-One LED Display



Image: The Smart LED Display providing real-time information on battery level and selected suction mode.

## Smart LED Display

The intuitive LED display provides real-time information:

- **Battery Indicator:** Shows the remaining battery level.
- **Suction Mode Indicator:** Displays whether the vacuum is in Eco or Max mode.
- **Maintenance Alerts:** May indicate issues such as clogs or full dustbin.

## Using Attachments and Handheld Mode

The Dzaki S2 comes with versatile attachments for various cleaning needs:

- **Motorized Cleaner Brush:** Ideal for floors, carpets, and tiles. Features LED headlights to illuminate dust.
- **Long Crevice Tool:** Perfect for narrow gaps, corners, and edges.
- **2-in-1 Brush:** Suitable for upholstery, curtains, and delicate surfaces.

To switch to handheld mode, detach the retractable metal tube and attach the desired accessory directly to the main motor unit. This allows for easy cleaning of cars, furniture, and elevated surfaces.

## Switch to Handheld

### Suitable for Multiple Scenarios



Image: Examples of using the vacuum in handheld configuration for various cleaning tasks.

## LED Headlights

The motorized cleaner brush is equipped with green LED headlights that illuminate dust and debris in dark areas, such as under furniture or along baseboards, ensuring thorough cleaning.



Image: The vacuum's LED headlights revealing hidden dust on a floor.

### **Self-Standing Design**

The Dzaki S2 features a self-standing design, allowing it to stand upright on its own without needing to be leaned against a wall or placed in a dock. This provides convenience during cleaning breaks.

# Self-Standing & Easy to Store

Can Put It Anywhere You Want,  
Without Any Support



Image: The vacuum standing independently, showcasing its self-standing capability.

## MAINTENANCE

---

### Emptying the Dust Cup

To maintain optimal suction, empty the dust cup regularly, ideally after each use. Press the release button on the dust cup to open the bottom flap and empty contents into a trash bin. The dust cup has a capacity of 1.2 liters.

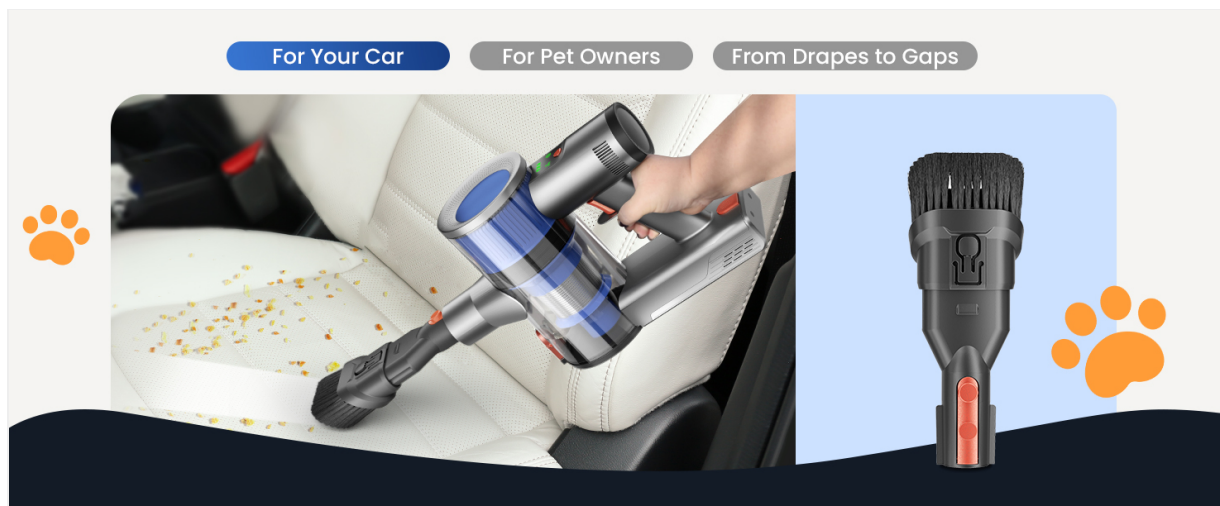


Image: The one-click dust cup emptying mechanism.

## Cleaning Filters

The Dzaki S2 features a 5-layer high-efficiency filtration system, including a HEPA filter, stainless filter, and cyclone filter. Regular cleaning of these filters is crucial for performance and air quality.

- **HEPA Filter:** Remove the HEPA filter from the dust cup. Tap it gently to remove loose dust. **Do not wash the HEPA filter with water.** Replace the HEPA filter every 3-6 months, or as needed. An extra HEPA filter is included.
- **Stainless Filter & Cyclone Filter:** These can be rinsed with water. Ensure they are completely dry before reassembling them into the dust cup.



Image: Exploded view of the vacuum's multi-layer filtration system.

### **Cleaning the Roller Brush**

The anti-tangle roller brush minimizes hair wrap. However, periodic inspection and cleaning are recommended. To remove the roller brush, locate the release tab on the side of the motorized cleaner brush head, unlock it, and slide out the brush. Remove any tangled hair or debris using the cleaning gadget provided. Reinsert the brush and lock the tab.

### **TROUBLESHOOTING**

---

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure battery is fully charged and correctly inserted.
Low suction power.	Dust cup is full; filters are clogged; blockage in the tube or brush head.	Empty dust cup. Clean all filters. Check for and remove any blockages.
Roller brush not rotating.	Hair or debris tangled in the brush; brush head is blocked.	Turn off the vacuum and remove any obstructions from the roller brush.
Short battery runtime.	Battery not fully charged; operating in Max Mode continuously.	Ensure battery is fully charged. Use Eco Mode for longer runtime.

## SPECIFICATIONS

---

**Brand:** Dzaki

**Model Name:** S2

**Special Features:** Smart LED Display, Strong Suction, Anti-hair Tangle, Large Capacity Dustcup, 2 Suction Modes, Versatile Head, Adjustable Telescopic Pole, Lightweight, Rechargeable

**Filter Type:** HEPA Filter

**Cordless:** Yes

**Dust Cup Capacity:** 1.2 Liters

**Wattage:** 350 watts

**Recommended Uses:** Hardwood Floors, Low Pile Carpets, Tile, Upholstery, Car Cleaning

**Form Factor:** Stick

**Product Dimensions:** 12"L x 7.5"W x 7.5"H

**Battery Type:** Lithium-Ion (6x2500mAh detachable)

**Noise Level:** 68 Decibels

**Battery Life:** Up to 55 minutes (Eco Mode), 25 minutes (Max Mode)

**Motor Horsepower:** 0.46135 horsepower

**Control Method:** Push Button

**Number of Power Levels:** 2

**Item Weight:** 3.5 pounds

## WARRANTY AND SUPPORT

---

Your Dzaki S2 Cordless Vacuum Cleaner is covered by a manufacturer's warranty. For specific warranty details, please refer to the warranty card included in your package or contact our customer support.

If you have any questions, issues, or require assistance with your S2 vacuum cleaner, our dedicated support team is available to help. Please reach out using the contact details provided in your user manual.

We aim to respond within 24 hours to ensure your satisfaction.

For further assistance, please visit our official website or contact us directly.

