



[Manuals.plus](#) /

› [EYESUN](#) /

› EYESUN EV-200 1400W Bagged Canister Vacuum Cleaner User Manual

EYESUN EV-200

EYESUN EV-200 1400W Bagged Canister Vacuum Cleaner User Manual

Model: EV-200 | Brand: EYESUN

INTRODUCTION

Thank you for choosing the EYESUN EV-200 Bagged Canister Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new vacuum cleaner. Please read it thoroughly before first use and keep it for future reference.

WHAT'S INCLUDED

Your EYESUN EV-200 package includes the following components:

- 1x EYESUN Canister Vacuum Cleaner Unit
- 1x Universal Floor Brush
- 1x Telescoping Metal Wand
- 1x Flexible Hose
- 1x Crevice Tool
- 1x Accessory Rack
- 1x Sofa Nozzle
- HEPA Filters (pre-installed and/or spares)
- Dust Bags (pre-installed and/or spares)
- User Manual



Image: All included accessories for the EYESUN EV-200 vacuum cleaner, including the main unit, hose, telescoping wand, floor brush, crevice tool, sofa nozzle, and filters.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. Read all instructions before using this vacuum cleaner.

- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

SETUP AND ASSEMBLY

Follow these steps to assemble your EYESUN EV-200 vacuum cleaner:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all listed components are present.
2. **Attach Hose:** Insert the flexible hose into the suction inlet on the main unit until it clicks securely into place.
3. **Connect Wand and Brush:** Attach the telescoping metal wand to the end of the flexible hose. Then, connect the universal floor brush or desired accessory to the end of the wand.
4. **Check Dust Bag and Filters:** Ensure the dust bag is correctly installed and the HEPA filters are in place before operation.



Image: The EYESUN EV-200 Bagged Canister Vacuum Cleaner fully assembled, ready for use.

OPERATING INSTRUCTIONS

The EYESUN EV-200 is designed for powerful and versatile cleaning across various surfaces.

Powering On and Suction Control

- **Plug In:** Extend the 20-foot power cord and plug it into a suitable electrical outlet. The vacuum offers a generous 33-foot cleaning radius.
- **Power On/Off:** Press the power button located on the main unit to turn the vacuum on or off.
- **Adjust Suction:** Use the stepless speed regulation dial on the main unit to adjust the suction power from minimum to maximum, adapting to different cleaning needs.

Cleaning Different Surfaces

The universal floor brush is designed for effortless transitions between carpets and hard floors. For specific tasks, utilize the included specialized tools:

- **Universal Floor Brush:** Ideal for low-pile carpets, area rugs, and hard floors. It effectively removes dust, dirt, and debris.
- **Crevice Tool:** Perfect for reaching tight spaces, corners, and edges, such as between sofa cushions or along baseboards.
- **Sofa Nozzle:** Designed for cleaning upholstery, curtains, and other delicate fabric surfaces.



23.5 Kpa

100000 RPM

1400W Rated Power

455AW Input Power

POWERFUL SUCTION FOR DEEP CLEANING

High-efficiency motor delivers strong suction to effectively remove dirt, dust, and debris from every surface.

Image: The EYESUN EV-200 in action, showcasing its powerful suction for deep cleaning on various surfaces.



Multi-Surface Clean

VERSATILE UNIVERSAL BRUSH

Effortlessly Transitions Between Carpets and Hard Floors

Image: The versatile universal brush of the EYESUN EV-200, designed for effective cleaning on both carpets and hard floors.

Automatic Cord Rewind

When cleaning is complete, simply step on the pedal located on the main unit to automatically retract the power cord. This ensures neat and hassle-free storage.



Image: Automatic cord rewind feature for quick and tidy storage.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your EYESUN EV-200 vacuum cleaner.

Dust Bag Replacement

The EYESUN EV-200 uses a large-capacity, replaceable dust bag system. Replace the dust bag when the 'Dust Bag Full' indicator is visible or when suction power decreases significantly. This design ensures hygienic disposal

with no direct contact with dust.



AIRCLEAN FILTER BAGS

Automatic Sealing for Maximum Hygiene

Image: AirClean filter bags with automatic sealing for maximum hygiene and easy replacement.

HEPA Filter Cleaning/Replacement

The fully sealed system includes a high-efficiency HEPA filter that traps fine dust, pollen, and allergens, preventing them from re-entering the air. For optimal performance, regularly check and clean or replace the HEPA filter as needed. The HEPA filter captures 99.98% of dust as small as 0.2 microns.

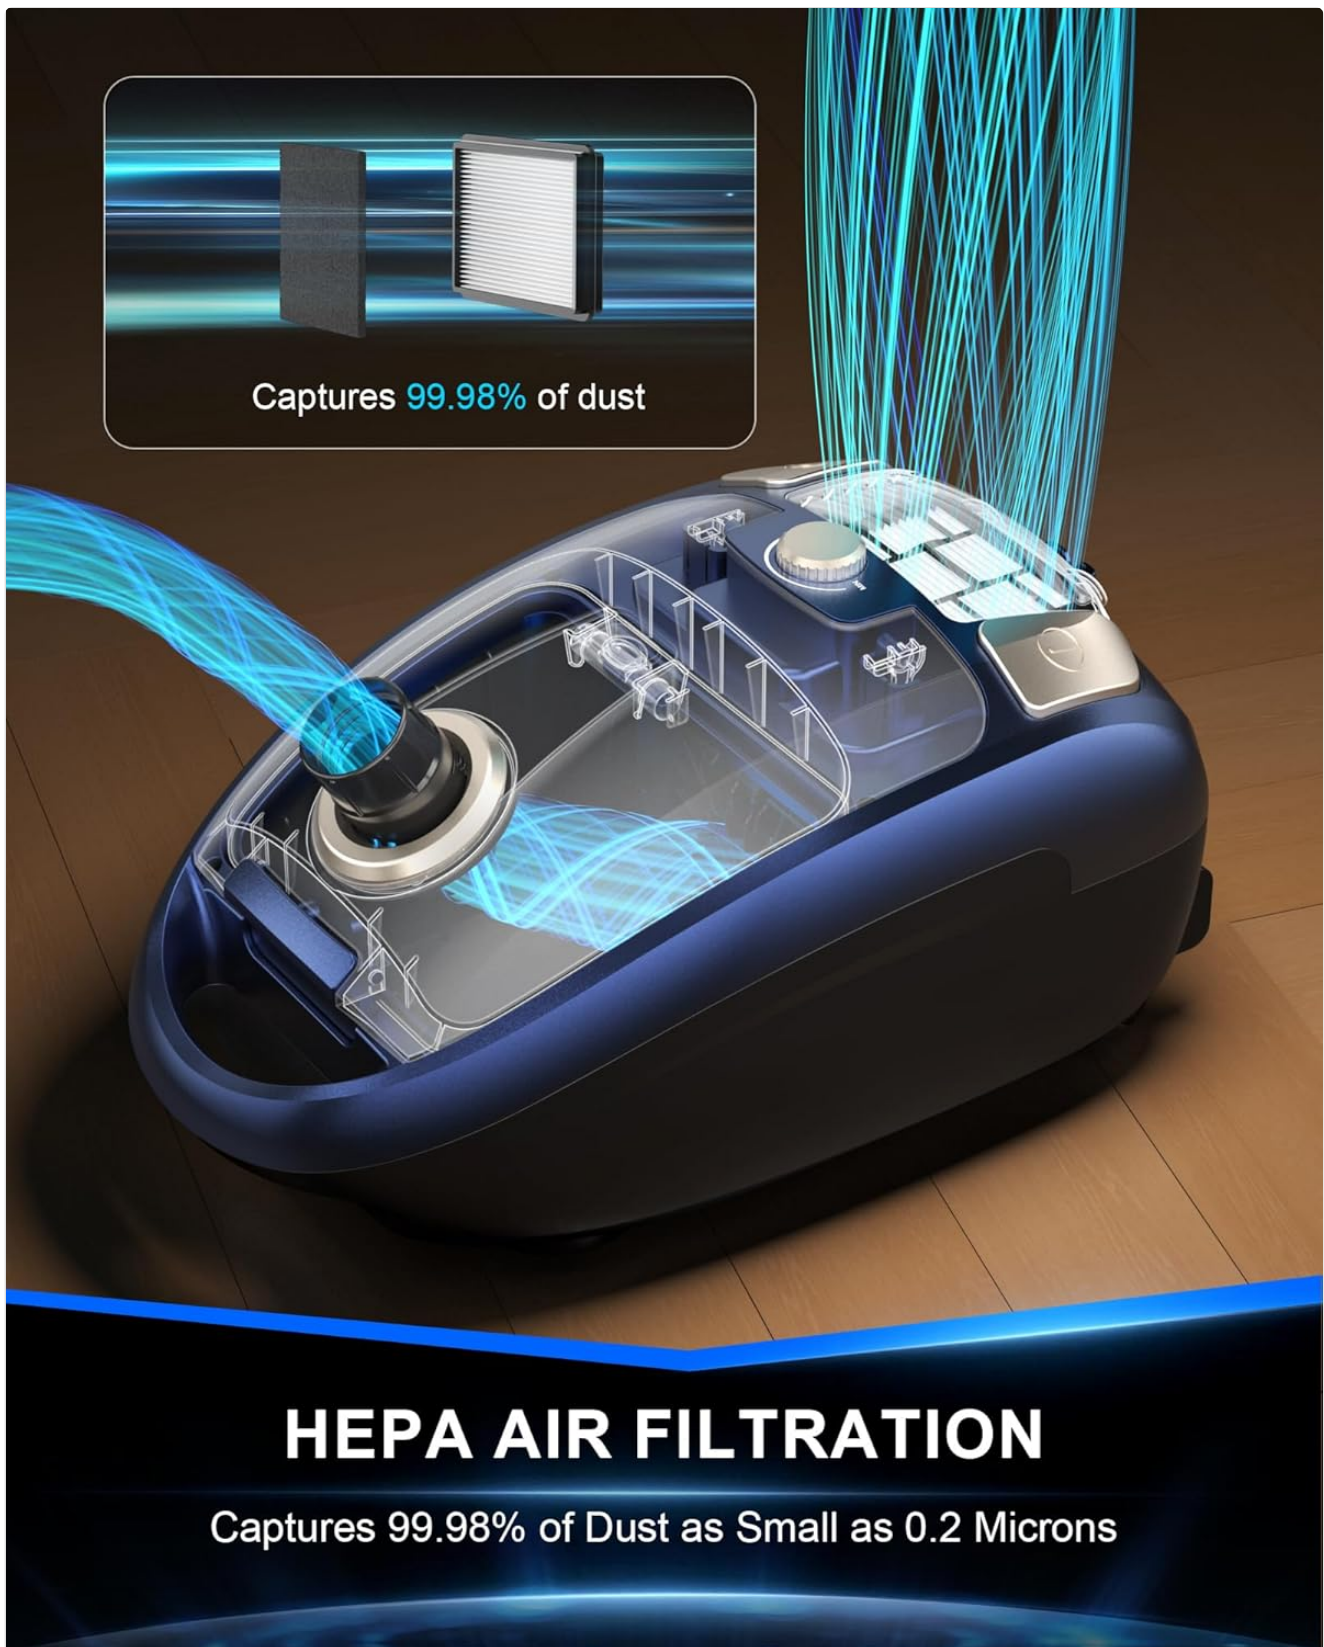


Image: HEPA air filtration system, capturing 99.98% of dust particles.

TROUBLESHOOTING

If you encounter any issues with your EYESUN EV-200 vacuum cleaner, please refer to the following common problems and solutions:

- **No Power:** Check if the power cord is securely plugged into the outlet. Ensure the outlet is functional. Check for tripped circuit breakers.
- **Reduced Suction:** Verify that the dust bag is not full and is correctly installed. Check if the HEPA filters are

clean and properly seated. Inspect the hose, wand, and attachments for any blockages.

- **Unusual Noise:** Turn off and unplug the vacuum. Check for any foreign objects caught in the brush head, hose, or main unit.
- **Overheating:** If the vacuum automatically shuts off, it may be due to overheating. Unplug the unit and allow it to cool down for at least 30 minutes. Check for blockages or a full dust bag/clogged filter, which can cause overheating.

For issues not covered here, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	EYESUN
Model Number	EV-200
Power Source	Corded Electric
Rated Power	1400W
Suction Power	23.5KPa
Dust Bag Capacity	3.7QT
Filter Type	HEPA Filter
Cord Length	20 feet
Cleaning Radius	33 feet
Surface Recommendation	All floors (Low-Pile Carpets & Hard Floors)
Special Features	Automatic Cord Rewind, Stepless Speed Regulation, Multi-Surface Clean

WARRANTY AND CUSTOMER SUPPORT

EYESUN provides a 24-month worry-free warranty for your EV-200 vacuum cleaner. For any questions, technical assistance, or warranty claims, please contact our friendly customer service team.

Customer Service Email: support@eyesun.net

Our support team is available 24/7 to assist you.