

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Teamson Home](#) /

› [Teamson Home 38.5" Faux Slate Outdoor LED Waterfall Fountain FT0424RR Instruction Manual](#)

## Teamson Home FT0424RR

# Teamson Home 38.5" Faux Slate Outdoor LED Waterfall Fountain

Model: FT0424RR

## INTRODUCTION

Thank you for purchasing the Teamson Home 38.5" Faux Slate Outdoor LED Waterfall Fountain. This manual provides essential information for the safe assembly, operation, and maintenance of your new fountain. Please read all instructions carefully before use and retain this manual for future reference.

This fountain features a contemporary design with a red rock frame and textured facade, illuminated by LED lights. Water gently cascades into a pebbled base, creating a soothing ambiance for outdoor spaces.

## IMPORTANT SAFETY INFORMATION

### WARNING: To reduce the risk of electric shock, fire, or injury, always follow these basic safety precautions.

- Ensure the fountain is placed on a stable, level surface to prevent tipping.
- Always unplug the fountain from the electrical outlet before performing any maintenance, cleaning, or when adding/removing water.
- Do not operate the fountain if the power cord or pump is damaged. Contact customer support for replacement parts.
- Keep the power cord away from heat sources, sharp edges, and moving parts.
- This product is designed for outdoor use. Ensure the electrical outlet is a grounded outdoor outlet and protected by a Ground Fault Circuit Interrupter (GFCI).
- Do not allow children or pets to play with the fountain unsupervised.
- Do not attempt to disassemble or repair the pump or electrical components yourself. Refer all servicing to qualified personnel.
- During freezing temperatures, drain all water from the fountain and store it indoors to prevent damage.

## PACKAGE CONTENTS

Please check to ensure all parts are present before assembly:

- Fountain Unit (Main body with faux slate waterfall)

- Water Pump with LED lights
- Power Adapter
- Pebbles (for base decoration)
- Instruction Manual





Image: The complete Teamson Home 38.5" Faux Slate Outdoor LED Waterfall Fountain, showcasing its design and illuminated features.

## SETUP AND ASSEMBLY

---

Follow these steps to assemble your fountain:

- 1. Unpack Components:** Carefully remove all parts from the packaging and place them on a soft, clean surface to avoid scratches.
- 2. Position the Fountain:** Place the fountain unit on a firm, level surface in your desired outdoor location. Ensure it is close enough to a grounded outdoor electrical outlet.



Image: The fountain positioned in an outdoor garden, demonstrating suitable placement.

3. **Install the Pump:** Locate the water pump. Connect the tubing from the fountain to the pump's outlet. Ensure a secure connection.
4. **Connect LED Lights:** If the LED lights are separate from the pump, connect their wiring to the corresponding connectors. Ensure all electrical connections are dry and secure.



LED  
Lights

Faux  
Slate

Textured  
Red Rock

Pebble  
Base



Image: A detailed view highlighting the LED lights, faux slate texture, red rock finish, and the pebble base of the fountain.

5. **Add Water:** Fill the fountain reservoir with distilled water until the pump is fully submerged. Do not overfill. The water capacity is approximately 1.98 gallons.
6. **Arrange Pebbles:** Carefully place the provided pebbles into the base of the fountain around the pump. This adds to the aesthetic and helps stabilize the pump.



Image: A close-up shot of the fountain's base, showing the decorative pebbles and the integrated LED lights illuminating the water.

7. **Plug In:** Once assembly is complete and the reservoir is filled, plug the power adapter into a grounded outdoor electrical outlet.

## OPERATION

Operating your Teamson Home fountain is straightforward:

- **Power On/Off:** The fountain will start operating once plugged into a live electrical outlet. Unplug to turn off.
- **Water Level:** Regularly check the water level. Due to evaporation, you will need to add water periodically to ensure the pump remains fully submerged. Operating the pump without sufficient water can cause damage.
- **Adjustable Water Flow:** The pump includes an adjustable water control unit. You can regulate the water flow

to your preference. Refer to the pump's specific instructions for adjustment.

- **LED Lights:** The built-in LED lights will illuminate when the fountain is powered on, enhancing the visual appeal.



Image: Diagram illustrating the dimensions of the fountain: 38.58 inches (97.99 cm) in height, 13.39 inches (34.01 cm) in length, and 8.66 inches (22 cm) in width.

## MAINTENANCE

Proper maintenance will extend the life of your fountain:

- **Regular Cleaning:** Clean the fountain and pump regularly (e.g., bi-weekly or monthly) to prevent mineral buildup, algae, and slime. Unplug the fountain, drain the water, and clean all surfaces with a soft brush and mild soap. Rinse thoroughly.
- **Pump Cleaning:** Disassemble the pump according to its instructions and clean any debris from the impeller and housing. This ensures optimal water flow.
- **Water Quality:** Use distilled water to minimize mineral deposits. Consider adding a fountain algaecide or clarifier (follow product instructions) to prevent algae growth.

- **Winterization:** Before the first freeze, drain all water from the fountain. Clean and dry the unit completely. Store the fountain and pump indoors in a dry, frost-free location. Do not allow water to freeze in the fountain, as this can cause severe damage.



Image: The fountain glowing at night on an outdoor patio, demonstrating its visual effect in low light conditions.

## TROUBLESHOOTING

If your fountain is not operating correctly, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Fountain does not operate.	Not plugged in. No power to outlet. Pump clogged or damaged. Water level too low.	Ensure power cord is securely plugged into a grounded GFCI outlet. Check circuit breaker or test outlet with another device. Unplug, clean pump impeller, and check for damage. Add water until pump is fully submerged.
Water flow is weak or inconsistent.	Water level too low. Pump or tubing clogged. Flow control on pump set too low.	Add water. Unplug, clean pump and tubing. Adjust the flow control switch on the pump to a higher setting.
Excessive splashing.	Water flow too high. Fountain not level.	Adjust the flow control switch on the pump to a lower setting. Ensure the fountain is on a perfectly level surface.
LED lights not working.	Loose connection. Light unit damaged.	Check all light connections. Contact customer support for a replacement light unit.

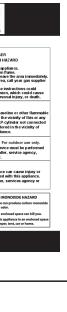
## SPECIFICATIONS

- Model Number:** FT0424RR
- Dimensions (L x W x H):** 13.39" x 8.66" x 38.58" (34.01 cm x 22 cm x 97.99 cm)
- Water Capacity:** 1.98 gallons
- Material:** Polyresin
- Power Source:** Corded Electric
- Special Feature:** Weather Resistant, Built-in LED Lights
- Item Weight:** 13.8 Pounds (6.26 kg)
- UPC:** 810136543872

## WARRANTY AND SUPPORT

Teamson Home products are manufactured with quality and care. For warranty information, replacement parts, or technical support, please contact Teamson Home customer service. Please have your model number (FT0424RR) and proof of purchase available when contacting support.

Contact information can typically be found on the manufacturer's website or on the product packaging.

	<p><a href="#">Teamson Home FT5024GR Outdoor Cascading Bowls and Stacked Stone Waterfall Fountain with LED Lights, Gray - Assembly and Care Guide</a></p> <p>This guide provides assembly instructions, care and maintenance tips, troubleshooting advice, and warranty information for the Teamson Home FT5024GR Outdoor Cascading Bowls and Stacked Stone Waterfall Fountain with LED Lights, Gray.</p>
	<p><a href="#">Peaktop Solar Powered Wall Fountain with Two Bowls - PT-SF0002 Assembly and Operation Guide</a></p> <p>Detailed guide for the Peaktop Solar Powered Wall Fountain with Two Bowls (PT-SF0002) by Teamson Home, covering setup, operation, maintenance, troubleshooting, and technical specifications.</p>
	<p><a href="#">Peaktop Solar Powered 4-Tier Flowing Bowls Fountain (PT-SF0003) - Assembly &amp; User Guide</a></p> <p>Detailed assembly instructions, overview, and technical specifications for the Peaktop Solar Powered 4-Tier Flowing Bowls Fountain (Model PT-SF0003) by Teamson Home. Learn how to set up, operate, and maintain your solar fountain.</p>
	<p><a href="#">Teamson Home HF42191AA Outdoor Rectangular Propane Gas Fire Pit Owner's Manual</a></p> <p>Comprehensive owner's manual for the Teamson Home HF42191AA Outdoor Rectangular Propane Gas Fire Pit. Includes safety information, part lists, assembly instructions, operation guidelines, maintenance tips, troubleshooting, and warranty details.</p>
	<p><a href="#">Teamson Home Hatteras 2-Door Wall Cabinet Assembly Instructions and Warranty</a></p> <p>Assembly instructions, warranty details, and customer support information for the Teamson Home Hatteras 2-Door Wall Cabinet (Models THF4425NA, THF4425BK, THF4425WA). Includes parts list, hardware guide, and step-by-step assembly.</p>
	<p><a href="#">TEAMSON HOME Hatteras Sideboard with 4 Doors - Assembly Instructions &amp; Warranty</a></p> <p>Comprehensive assembly instructions and warranty details for the TEAMSON HOME Hatteras Sideboard with 4 Doors (Models THF4925NA, THF4925BK, THF4925WA). Includes parts list, hardware guide, and customer support information.</p>