

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bunfly](#) /
- › [Bunfly S1 Cat and Dog Clipper Replacement Blades Instruction Manual](#)

Bunfly S1

Bunfly S1 Cat and Dog Clipper Replacement Blades Instruction Manual



INTRODUCTION

This manual provides essential instructions for the proper installation, use, and maintenance of your Bunfly S1 Cat and Dog Clipper Replacement Blades. Please read this guide thoroughly before use to ensure optimal performance and longevity of the product.

PRODUCT OVERVIEW

The Bunfly S1 Replacement Blades are designed for use with compatible Bunfly pet grooming clippers. These blades are crafted to provide efficient and safe grooming for both cats and dogs.

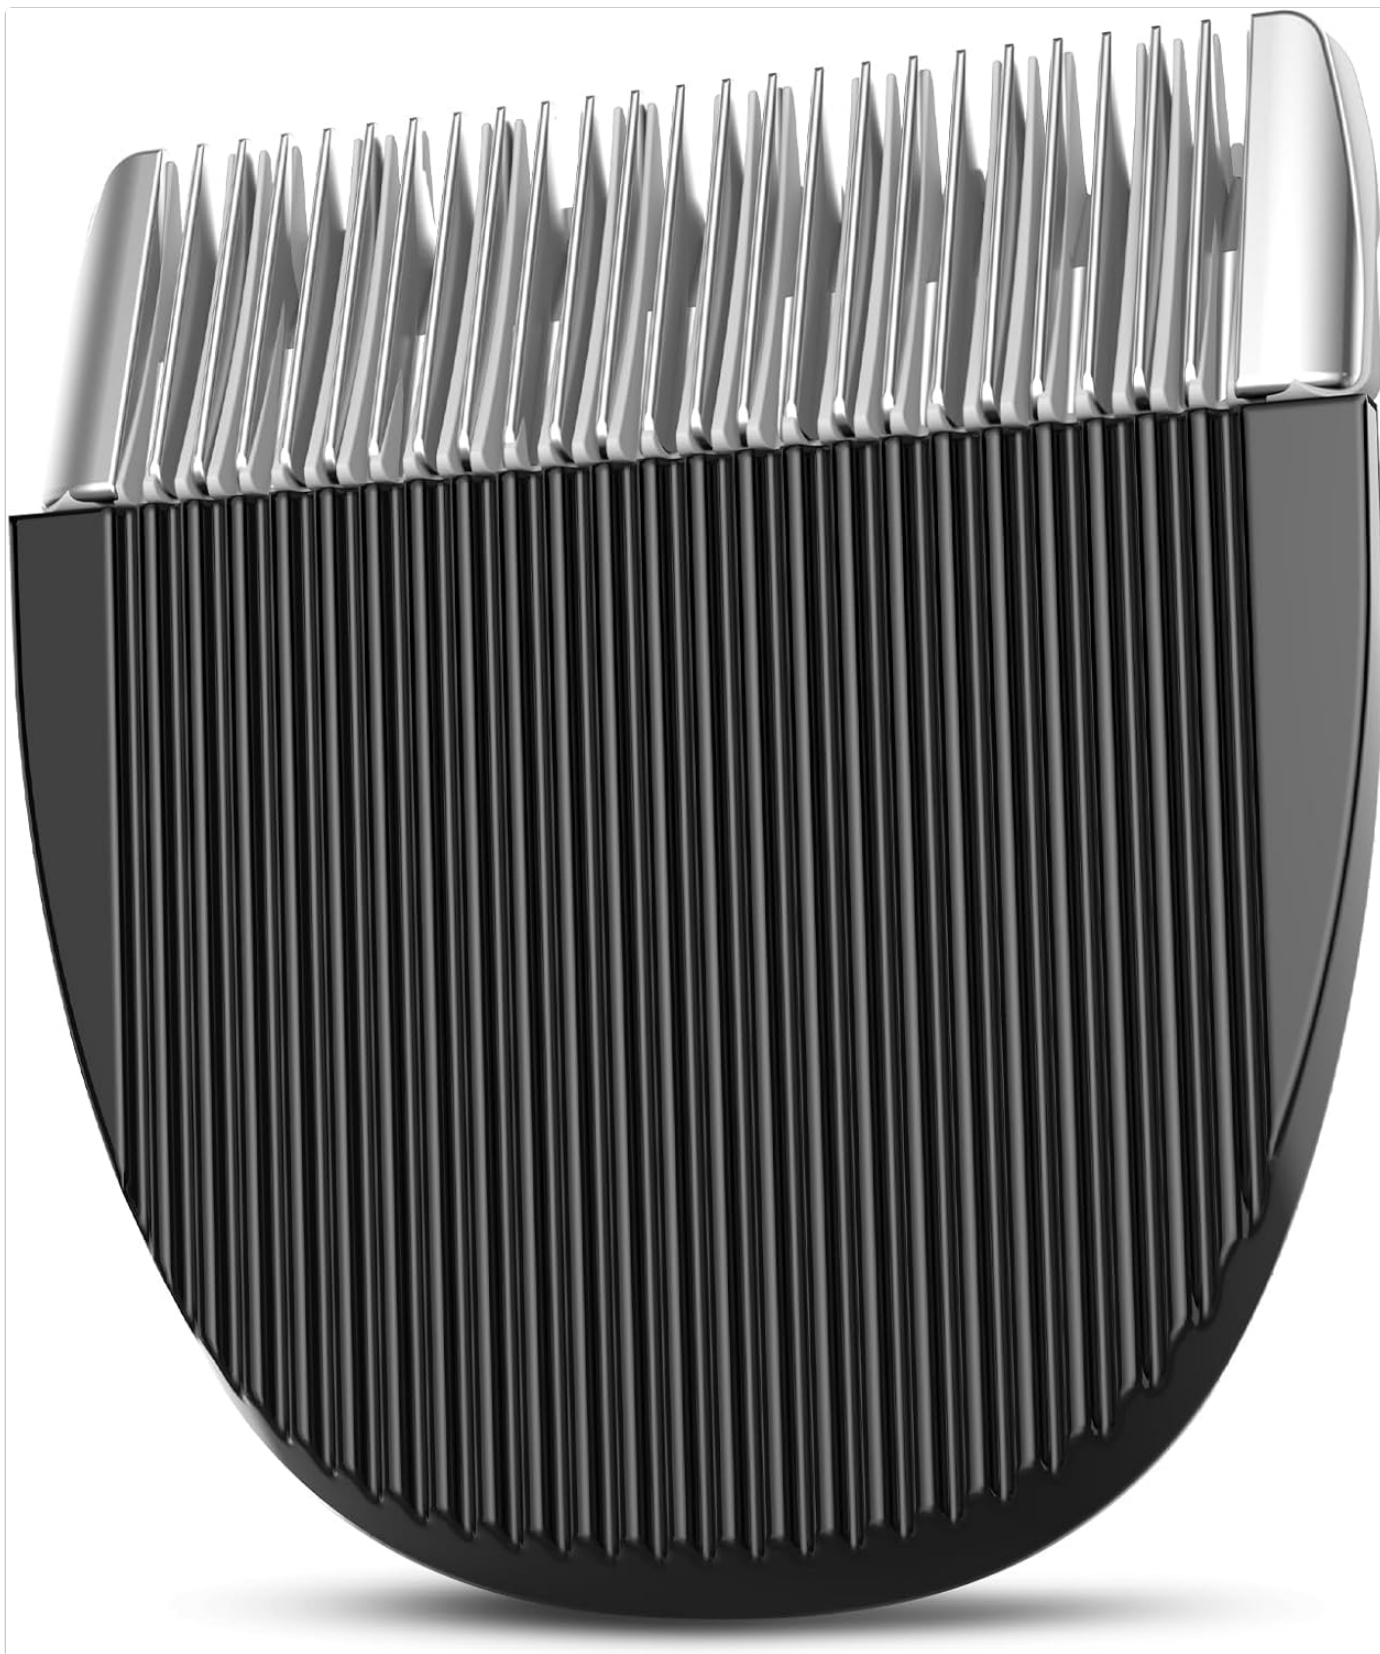


Image 1: Front view of the Bunfly S1 Replacement Blade, showing the cutting teeth and black housing.

SETUP AND INSTALLATION

Proper installation is crucial for the functionality of the replacement blade. Follow these steps carefully:

1. **Preparation:** Ensure your Bunfly pet clipper is turned off and unplugged from any power source before attempting to replace the blade.
2. **Removing the Old Blade:** Gently press the release button or mechanism on your clipper (refer to your clipper's original manual if unsure) to detach the existing blade.

3. Installing the New Blade:

- Align the Bunfly S1 Replacement Blade with the clipper head.
- Press the blade firmly into place until you hear a click, indicating it is securely fastened.
- Verify that the blade is seated correctly and does not wobble.

4. **Compatibility Check:** After installation, visually inspect the connection. The blade should sit flush, and the internal white connector (if present on your clipper) must properly engage with the clipper's actuator. Incorrect engagement may prevent the blade from operating.





Image 2: Diagram illustrating the Bunfly S1 Replacement Blade being fitted onto a compatible Bunfly vacuum clipper system.

Important Note: This replacement blade is specifically designed for Bunfly S1 compatible clippers. Using it with incompatible models may result in improper fit or malfunction.

OPERATING INSTRUCTIONS

Once the replacement blade is securely installed, you can operate your pet clipper as usual. Always ensure the blade is clean and properly oiled before each grooming session for optimal performance and to prevent overheating.

- Turn on the clipper and allow it to run for a few seconds to ensure smooth operation.
- Begin grooming your pet, moving the clipper smoothly through their fur.
- Avoid applying excessive pressure, as this can cause discomfort to your pet and dull the blades.

MAINTENANCE

Regular maintenance extends the life of your blades and ensures consistent grooming results.

1. **Cleaning:** After each use, remove the blade from the clipper. Use a small brush (often included with clippers) to remove any trapped hair from between the teeth.
2. **Oiling:** Apply 1-2 drops of clipper oil (not included) to the blade teeth and the friction points on the underside of the blade. Run the clipper for a few seconds to distribute the oil. This reduces friction and heat.
3. **Storage:** Store blades in a clean, dry place when not in use.

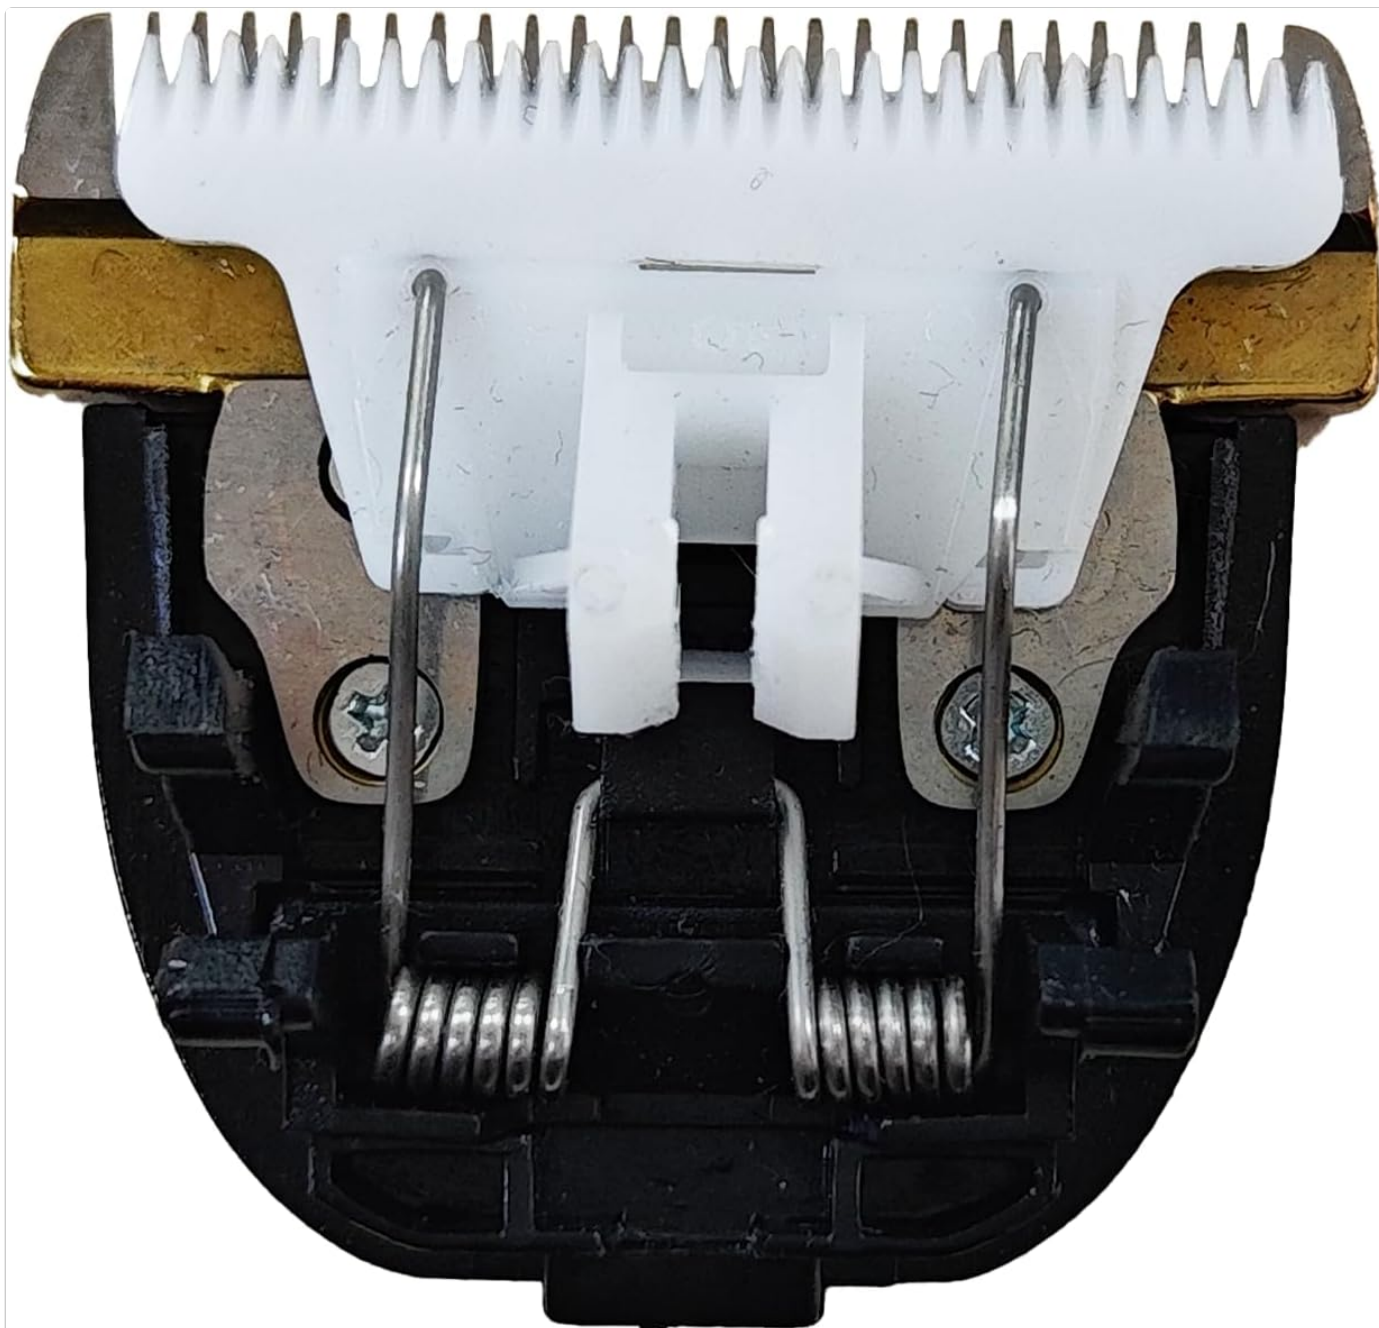


Image 3: Underside view of the Bunfly S1 Replacement Blade, showing the internal springs and connection points for maintenance and cleaning.

TROUBLESHOOTING

If you encounter issues with your Bunfly S1 Replacement Blades, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Blade does not fit or operate	<ul style="list-style-type: none"> • Incorrect model compatibility. • Blade not fully engaged with clipper actuator. 	<ul style="list-style-type: none"> • Verify your clipper model is compatible with Bunfly S1 blades. • Ensure the blade is pressed firmly until it clicks into place and the internal connector engages.
Blade pulls hair or cuts poorly	<ul style="list-style-type: none"> • Blade is dull or dirty. • Insufficient oiling. 	<ul style="list-style-type: none"> • Clean the blade thoroughly and apply clipper oil. • If dull, consider replacing the blade.

Problem	Possible Cause	Solution
Blade gets hot quickly	<ul style="list-style-type: none">Lack of lubrication.Excessive friction from hair buildup.	<ul style="list-style-type: none">Apply clipper oil generously.Clean the blade frequently during extended grooming sessions.

SPECIFICATIONS

Model: S1

Brand: Bunfly

Included Components: Replacement Blades (1 count)

Item Weight: 1.13 ounces (approximately 32 grams)

Package Dimensions: 3.23 x 2.48 x 0.91 inches (L x W x H)

Specific Uses: Replacement Blades for Pet Grooming Clippers

Target Audience: House Cats, Dogs

WARRANTY INFORMATION

Bunfly replacement blades are manufactured to high standards. For specific warranty details, please refer to the documentation provided with your original Bunfly pet clipper or contact Bunfly customer support. Keep your purchase receipt as proof of purchase.

CUSTOMER SUPPORT

If you have any questions or require further assistance regarding your Bunfly S1 Replacement Blades, please visit the official Bunfly store on Amazon or contact their customer service directly. You can find contact information on the Bunfly brand page or through your purchase platform.

[Visit the Bunfly Store on Amazon](#)

