

Midea MDF24JG

Midea MDF24JG Silent 3-Speed Table Fan User Manual

Model: MDF24JG (FG15-25J)

1. INTRODUCTION

Thank you for choosing the Midea MDF24JG Silent 3-Speed Table Fan. This fan is designed to provide efficient and quiet air circulation, making it ideal for various indoor environments. Featuring multidirectional oscillation and three adjustable speeds, it ensures comfort and freshness throughout your space.

Please read this manual carefully before using the product to ensure proper operation, maintenance, and safety.

2. SAFETY INSTRUCTIONS

- Always ensure the fan is placed on a stable, flat surface to prevent it from tipping over.
- Do not insert fingers or any objects through the grille when the fan is operating.
- Keep the fan away from water or other liquids. Do not use it in wet environments like bathrooms.
- Unplug the fan from the power outlet before cleaning or performing any maintenance.
- Do not operate the fan with a damaged cord or plug. Contact qualified service personnel for repairs.
- This appliance is for indoor use only.
- Keep out of reach of children.

3. PRODUCT OVERVIEW

The Midea MDF24JG fan features a compact design with a powerful motor and multidirectional oscillation for optimal air distribution.

TU COMPAÑERO PERFECTO ESTE VERANO



3
Velocidades



15
Metros de
alcance



Oscilación
multidirección 90°



Silencioso



Figure 3.1: Front view of the Midea MDF24JG Table Fan, showcasing its compact design and grille.

Key Components:

- **Front Grille:** Protects the blades and directs airflow.
- **Fan Blades:** Designed for efficient air movement.
- **Control Knob:** For power, speed selection, and oscillation control.
- **Base:** Provides stability for the fan.
- **Power Cord:** For connecting to an electrical outlet.

UN VENTILADOR, MÚLTIPLES USOS

Diseñado para funcionar en distintos ambientes, mejorando la circulación del aire en cualquier habitación



Figure 3.2: Close-up of the control knob, indicating settings for speed and oscillation.

4. SETUP

The Midea MDF24JG fan is designed for immediate use right out of the box. No assembly is required.

1. **Unpack:** Carefully remove the fan and all packaging materials from the box.
2. **Placement:** Place the fan on a firm, level surface in the desired location. Ensure there is adequate space around the fan for optimal airflow and oscillation.
3. **Connect Power:** Plug the power cord into a standard electrical outlet (230V).

5. OPERATING INSTRUCTIONS

The fan is controlled via a single rotary knob located on the base.

1. **Power On/Off:** Turn the control knob clockwise from the '0' (Off) position to select a speed setting. To turn off the

fan, rotate the knob counter-clockwise back to '0'.

2. **Adjusting Fan Speed:** The fan offers 3 speed settings:

- **Setting 1:** Low speed for gentle airflow.
- **Setting 2:** Medium speed for stable and comfortable airflow.
- **Setting 3:** High speed for powerful and refreshing airflow.

3. **Activating Oscillation:** The fan features multidirectional oscillation. The control knob allows you to select oscillation modes:

- **Horizontal Oscillation:** The fan head automatically sweeps from side to side (up to 90°). This is typically activated by turning the knob to a setting that includes oscillation (e.g., '1' with oscillation symbol).
- **Vertical Tilt Adjustment:** The fan head can be manually tilted vertically (up to 90°) to direct airflow precisely where needed. Adjust the fan head by hand to the desired angle.



Figure 5.1: The fan's multidirectional oscillation capabilities, showing both automatic horizontal sweep and manual vertical tilt.

3 VELOCIDADES AJUSTABLES

Elige la intensidad perfecta para cada momento del día



Figure 5.2: Visual representation of the three adjustable fan speeds.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your fan. The blades and grille are easily detachable for cleaning.

1. **Disconnect Power:** Always unplug the fan from the power outlet before cleaning.
2. **Disassemble:** Carefully remove the front grille and the locking nut to access the fan blades. Refer to the diagram below for guidance.
3. **Clean Components:** Wipe the fan blades and grilles with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used. Ensure all parts are completely dry before reassembly.
4. **Wipe Exterior:** Clean the exterior of the fan with a soft, dry cloth. Do not use abrasive cleaners or solvents.
5. **Reassemble:** Reattach the fan blades, locking nut, and front grille securely.

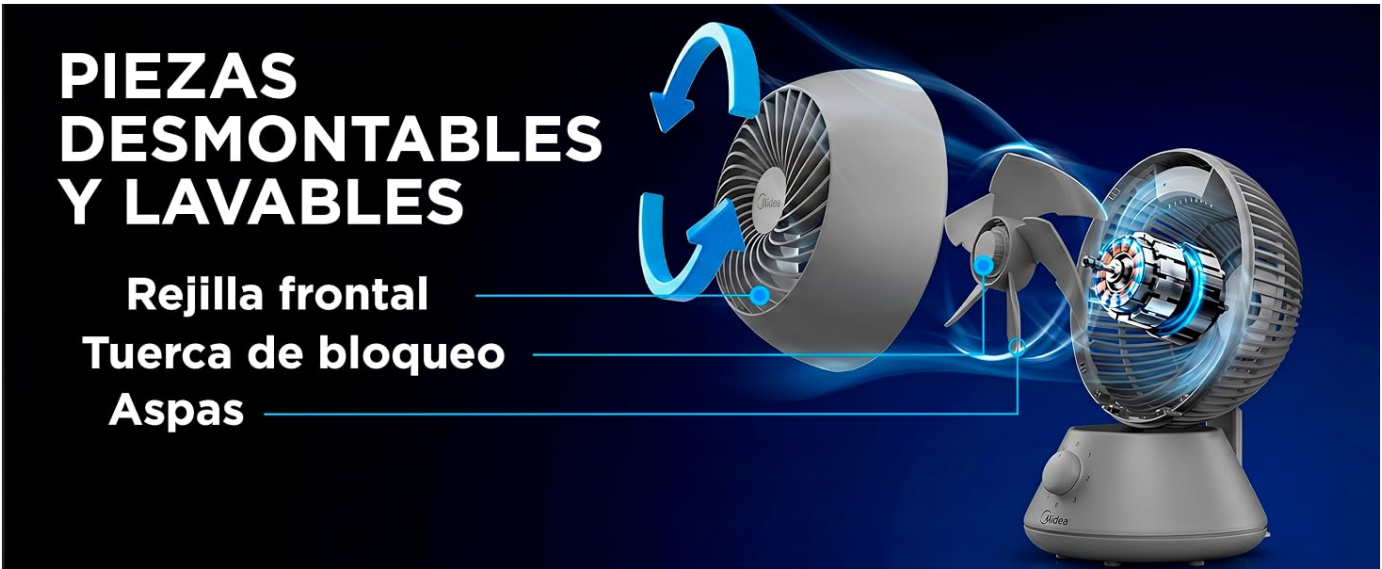


Figure 6.1: Detachable parts for easy cleaning, including the front grille, locking nut, and blades.

7. TROUBLESHOOTING

If you encounter any issues with your Midea MDF24JG fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply. Fan not plugged in correctly. Control knob is in '0' (Off) position.	Check if the power cord is securely plugged into a working outlet. Ensure the control knob is turned to a speed setting (1, 2, or 3).
Weak airflow.	Fan speed is too low. Grille or blades are dirty. Obstruction blocking airflow.	Increase the fan speed using the control knob. Clean the fan blades and grilles as per maintenance instructions. Remove any objects blocking the front or rear of the fan.
Fan is noisy.	Loose parts. Fan not on a stable surface. Debris inside the fan.	Check if all parts (grille, blades) are securely fastened. Place the fan on a flat, stable surface. Unplug and inspect for any foreign objects inside the fan.
Oscillation not working.	Oscillation function not selected. Obstruction.	Ensure the control knob is set to an oscillation speed. Check for any objects preventing the fan head from moving.

If the problem persists after trying these solutions, please contact Midea customer support or your retailer for assistance.

8. SPECIFICATIONS

Detailed technical specifications for the Midea MDF24JG Table Fan:

Feature	Specification
Brand	Midea
Model Name	MDF24JG

Feature	Specification
Model Number	FG15-25J
Color	Grey
Electric Fan Design	Table Fan
Power Source	Corded Electric
Product Dimensions (D x W x H)	22.7 cm x 21.1 cm x 32.7 cm
Item Weight	2.29 Kilograms
Special Features	Silent Operation, Adjustable Tilt
Recommended Uses	Ventilation
Mounting Type	Table Mount
Controller Type	Push Button Control (Rotary Knob)
Number of Speeds	3
Noise Level	28 Decibels
Wattage	30 watts
Number of Blades	5
Airflow Capacity	11 Cubic meters per minute (660 m³/h)
Voltage	230 Volts
Indoor/Outdoor Use	Indoor
Material	Plastic
Blade Material	Plastic
Year of Manufacture	2025
Country of Origin	China

COMPACTO Y SUPER LIGERO

Medidas y peso perfecto para llevarlo a todas partes



Figure 8.1: Dimensions and weight of the Midea MDF24JG Table Fan.

POTENTE Y ULTRASILENCIOSO

Motor avanzado con tecnología Vortex, que refresca espacios de forma rápida y silenciosa, ideal para un descanso más placentero



Figure 8.2: Illustration of the fan's ultra-quiet operation at 28 dB.

9. WARRANTY AND SUPPORT

Warranty Information:

This Midea product comes with a **3-year warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use. Please retain your proof of purchase for warranty claims.

Customer Support:

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Midea customer support or your authorized retailer. You may need to provide your product model number (MDF24JG or FG15-25J) and proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question