

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Chipolo](#) /

› [Chipolo POP Tracker Tag User Manual - C24W](#)

## Chipolo C24W

# Chipolo POP Tracker Tag User Manual - Model C24W

## 1. INTRODUCTION TO CHIPOLO POP

The Chipolo POP Tracker Tag is a versatile Bluetooth item finder designed to help you locate your personal belongings. It features a loud sound, broad compatibility with both Apple Find My and Google's Find My Device networks, and a durable, water-resistant design. This manual provides essential information for setting up, operating, and maintaining your Chipolo POP.



Image 1.1: The Chipolo POP Tracker Tag in Red.

## 2. SETUP GUIDE

### 2.1 Initial Activation & App Download

1. **Activate Chipolo POP:** Gently press and hold the center of your Chipolo POP until you hear a short beep, indicating it's powered on and ready for pairing.
2. **Download the App:** Depending on your device, download the appropriate app:
  - For Apple devices (iOS): Use the pre-installed **Apple Find My** app.
  - For Android devices: Download the **Google Find My Device** app from the Google Play Store.

### 2.2 Pairing Your Chipolo POP

1. **Enable Bluetooth:** Ensure Bluetooth is enabled on your smartphone or tablet.


2. **Open the App:** Launch either the Apple Find My app or the Google Find My Device app.
3. **Add Item:** Follow the on-screen instructions within the app to add a new item. Your Chipolo POP should appear as a discoverable device.
4. **Confirm Pairing:** Select your Chipolo POP from the list and confirm the pairing process. You may be prompted to press the Chipolo POP button again to finalize the connection.



Image 2.1: Pairing the Chipolo POP with a smartphone using the Find My app.


## Loud Sound

 120 dB

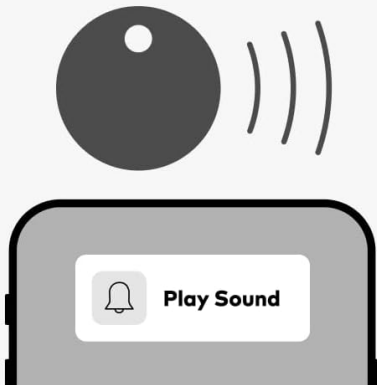

## Find phone & more

 extra features in the free companion Chipolo app

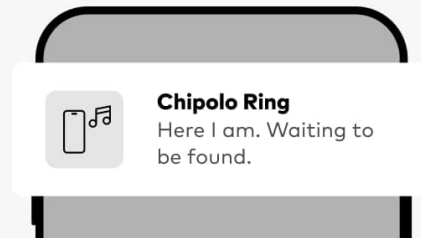

## Colorful

6 vibrant colors





Image 2.2: Chipolo POP features displayed on a smartphone screen.

### 3. OPERATING YOUR CHIPOLO POP

#### 3.1 Finding Nearby Items

 
If your Chipolo POP is within Bluetooth range (up to 300 ft / 90 m), you can make it ring loudly to locate your item. Open the Apple Find My app or Google Find My Device app, select your Chipolo POP, and choose the

#### Related Documents - C24W

	<p><a href="#">Chipolo POP User Manual: Setup and Battery Replacement Guide</a></p> <p>A concise, SEO-optimized HTML guide for setting up and replacing the battery in your Chipolo POP item tracker. Includes instructions for Apple Find My and Google Find My Device, along with essential regulatory information.</p>
	<p><a href="#">Chipolo One Spot User Manual and Features</a></p> <p>Comprehensive guide to the Chipolo One Spot item finder, covering setup with Apple Find My, key features like sound alerts and lost mode, battery replacement, and personalization options.</p>



[Chipolo LOOP C240 UK PSTI Statement of Compliance](#)  
Official Statement of Compliance for the Chipolo LOOP (Model C240) regarding UK Product Security and Telecommunications Infrastructure Regulations 2023, detailing support period and manufacturer information.

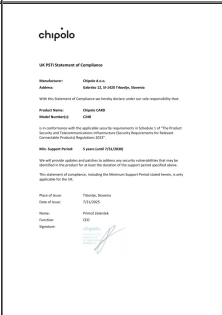

[Chipolo CARD UK PSTI Statement of Compliance](#)  
Statement of Compliance for the Chipolo CARD (Model C24R) regarding UK Product Security and Telecommunications Infrastructure Regulations 2023, including minimum support period.