



Manuals.plus /

› HOMEZAY /

› HOMEZAY Nugget Ice Maker User Manual

HOMEZAY HOMEZAY-36T-US-2

HOMEZAY Nugget Ice Maker User Manual

Model: HOMEZAY-36T-US-2

INTRODUCTION

Thank you for choosing the HOMEZAY Nugget Ice Maker. This appliance is designed to provide you with soft, chewable pellet ice quickly and efficiently, perfect for a variety of beverages and occasions. Please read this manual thoroughly before operating your ice maker to ensure safe and optimal performance. Keep this manual for future reference.



Image: The HOMEZAY Nugget Ice Maker, showcasing its compact design, a glass filled with a beverage, and a scoop of fresh nugget ice.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not immerse cord, plug, or any part of the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Ensure the appliance is placed on a stable, level surface.
- Use only potable water in the ice maker.
- Unplug the appliance from the outlet when not in use and before cleaning.

WHAT'S IN THE BOX

- HOMEZAY Nugget Ice Maker Machine
- Ice Scoop
- User Manual (this document)

SPECIFICATIONS

Feature	Detail
Model Name	Nugget Ice Maker
Model Number	HOMEZAY-36T-US-2
Brand	HOMEZAY
Product Dimensions	11.3"D x 8.5"W x 12.6"H
Weight	22.75 Pounds
Daily Ice Production	Up to 33 lbs
Water Tank Capacity	1.1 Liters
Ice Basket Capacity	1 Liter
Voltage	115 Volts

SETUP

1. **Unpack the Ice Maker:** Carefully remove the ice maker from its packaging. Remove all packing materials, tape, and any protective film.
2. **Placement:** Place the ice maker on a flat, stable, and level surface away from direct sunlight and heat sources. Ensure there is at least 4 inches of clearance around the unit for proper ventilation.
3. **Initial Cleaning:** Before first use, clean the interior of the ice maker. Refer to the "Maintenance" section for detailed cleaning instructions.
4. **Power Connection:** Plug the ice maker into a grounded 115V electrical outlet.
5. **First Use Recommendation:** For the first cycle, it is recommended to discard the first batch of ice to ensure optimal taste and hygiene.

OPERATING INSTRUCTIONS

Filling the Water Tank

Open the top lid and fill the water reservoir with potable water up to the MAX fill line. Do not overfill.

Making Ice

1. Ensure the water tank is filled.
2. Press the multi-purpose button (labeled "ICE CLEAN") once to start the ice making process. The indicator light will show the "Making Ice" status.

3. The ice maker will begin producing nugget ice in approximately 8-12 minutes.
4. When the ice basket is full, the "Ice Basket Full" indicator will illuminate, and the ice making process will pause. Remove ice to resume.
5. When the water level is low, the "Add Water" indicator will illuminate, and the ice making process will stop. Add more water to resume.

LED-Lit Controls



Clear Ice Status





-  Making Ice
-  Ice Basket Full
-  Self-Cleaning
-  Add Water

Image: Detailed view of the LED-lit control panel, showing indicators for "Making Ice", "Ice Basket Full", "Self-Cleaning", and "Add Water".

Indicator Lights Explained

- **Gray Light:** Making Ice
- **Green Light:** Ice Basket Full
- **Blue Light:** Self-Cleaning
- **Red Light:** Add Water

Continuous Ice Supply

33 LBS/DAY



Image: The ice maker highlighting its continuous ice supply capability, producing up to 33 lbs of ice per day.

MAINTENANCE

Self-Cleaning Function

The ice maker features a convenient self-cleaning function to maintain hygiene and ice quality.

1. Ensure the ice basket is empty.
2. Fill the water reservoir with water up to the MAX fill line. For enhanced cleaning, you may add a small amount of food-grade vinegar (e.g., 1 part vinegar to 10 parts water).
3. Press and hold the "ICE CLEAN" button for 3 seconds to activate the self-cleaning cycle. The indicator light will turn blue.
4. The cleaning cycle will run for approximately 20 minutes.
5. Once the cycle is complete, place a container under the drain plug (usually located at the bottom or back of the unit) and remove the plug to drain the water.
6. Replace the drain plug securely.
7. Run one or two cycles with fresh water only to rinse the system, draining the water after each rinse.

Convenient Self-Cleaning



Image: An internal view illustrating the water circulation during the self-cleaning process.

Descaling


Mineral deposits from hard water can affect ice quality and machine performance. Descale your ice maker regularly, especially if you live in an area with hard water.

- **Frequency:** Descale monthly in moderately hard water areas. Descale every two to three weeks in hard to very hard water areas.
- **Procedure:** Use a descaling solution specifically designed for ice makers or a mixture of white vinegar and water (e.g., 1:1 ratio). Follow the self-cleaning procedure, but use the descaling solution instead of plain water or

vinegar-water. After descaling, perform several rinse cycles with fresh water.

Hard Water Can Affect Your Ice Maker

Descal it once a month, or more often if you live in a hard water area

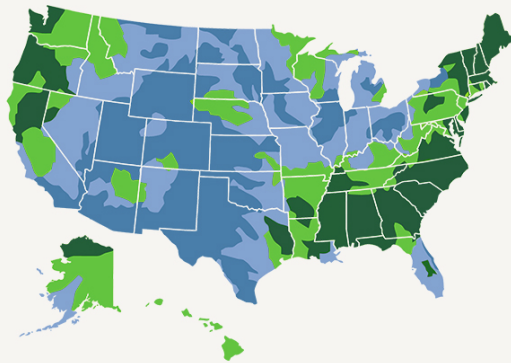


Descal **monthly** in moderately hard water areas




Descal **every two or three weeks** in hard to very hard water areas

Concentration of calcium carbonate in the water:

 Slightly Hard
1–60mg/L

 Moderately Hard
61–120mg/L

 Hard
121–180mg/L


 Very Hard
181–250mg/L

Image: A map indicating water hardness levels across the US, with corresponding descaling frequency recommendations.

External Cleaning

Wipe the exterior of the ice maker with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Ice maker not working.	No power.	Check if the power cord is properly plugged into the outlet. Check the circuit breaker.
"Add Water" indicator is on.	Water reservoir is empty or low.	Fill the water reservoir with potable water up to the MAX fill line.
"Ice Basket Full" indicator is on.	Ice basket is full.	Remove ice from the ice basket.
Ice tastes strange or has an odor.	First use, dirty water, or machine needs cleaning.	Discard the first few batches of ice. Perform a self-cleaning cycle. Use fresh, potable water.
Ice production is slow or ice is not forming.	Ambient temperature too high, poor ventilation, or mineral buildup.	Ensure proper ventilation around the unit. Operate in a cooler environment. Perform a descaling cycle.

CUSTOMER SUPPORT

For any questions, technical assistance, or warranty inquiries, please contact HOMEZAY customer support. Refer to your product packaging or the official HOMEZAY website for contact information.

Website: www.homezay.com (Example link, replace if actual URL is known)

Email: support@homezay.com (Example email, replace if actual email is known)

