

[Manuals.plus](#) /

› [TECURS](#) /

› TECURS WK015 Wireless Ergonomic AZERTY Keyboard User Manual

TECURS WK015

TECURS WK015 Wireless Ergonomic AZERTY Keyboard User Manual

Model: WK015 | Brand: TECURS

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your TECURS WK015 Wireless Ergonomic AZERTY Keyboard. Please read this manual thoroughly before using the product to ensure proper function and longevity.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1x TECURS Wireless AZERTY Keyboard (French Layout)
- 1x 2-in-1 USB & Type-C Receiver
- 1x USB Charging Cable
- 1x User Manual (this document)



Image: The TECURS WK015 keyboard shown with a smartphone in its integrated holder and the compact 2-in-1 USB and Type-C receiver.

SETUP

1. Charging the Keyboard

Before first use, fully charge the keyboard. Connect the provided USB charging cable to the keyboard's Type-C port and to a USB power source (e.g., computer USB port, USB wall adapter). The charging indicator light will show charging status.

Type C Rechargeable



2 Heures de Charge



365 Jours Standby



Mode Veille



1000mAh



Image: Close-up of the keyboard's Type-C charging port with a charging cable inserted, indicating the rechargeable feature and 1000mAh battery capacity.

2. Connecting the Keyboard

The keyboard uses a 2.4G wireless connection via a 2-in-1 USB & Type-C receiver.

1. Locate the 2-in-1 USB & Type-C receiver. It is typically stored in a compartment on the keyboard or in the packaging.

2. Plug the receiver into an available USB-A or Type-C port on your computer (Windows 11/10/8/7/Vista/XP, Linux).
3. Turn on the keyboard using the power switch, usually located on the back or side of the keyboard.
4. Your computer should automatically detect and install the necessary drivers. The keyboard is ready for use once detected.

OPERATING INSTRUCTIONS

Power On/Off

Use the power switch on the keyboard to turn it on or off. Turning off the keyboard when not in use helps conserve battery life.

Backlight Control

The keyboard features a 7-color LED backlight with 3 adjustable brightness levels.

- **Change Color:** Press **Fn + End** to cycle through the 7 available backlight colors.
- **Increase Brightness:** Press **Fn + Page Up** to increase the backlight brightness.
- **Decrease Brightness:** Press **Fn + Page Down** to decrease the backlight brightness.


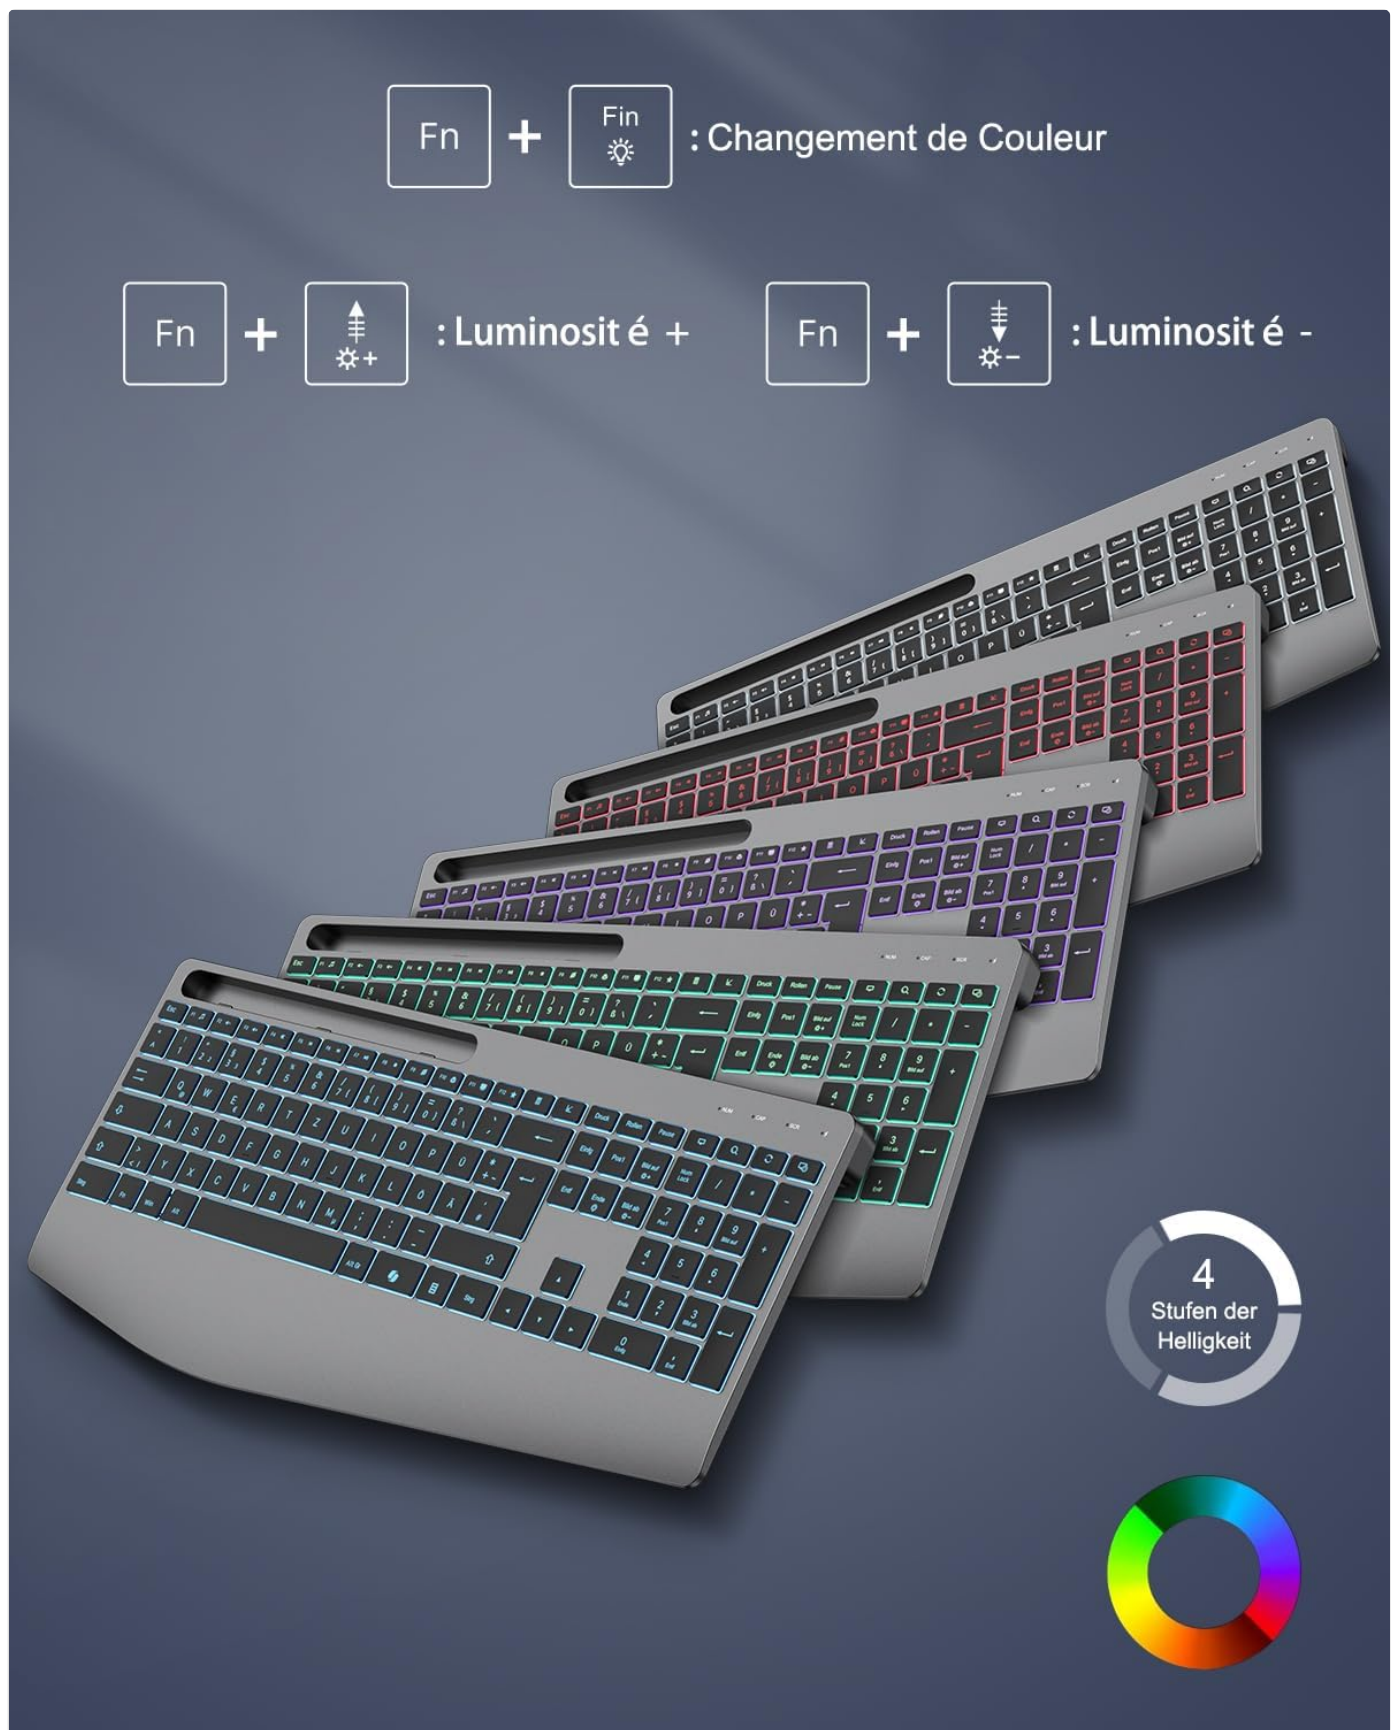


Image: Illustration showing the key combinations for controlling the keyboard's 7-color LED backlight and 3 brightness levels.

Copilot Key

The keyboard includes a dedicated Copilot key for quick access to AI-assisted tasks on Windows 11 and above. This feature is not available on Windows versions below 11.

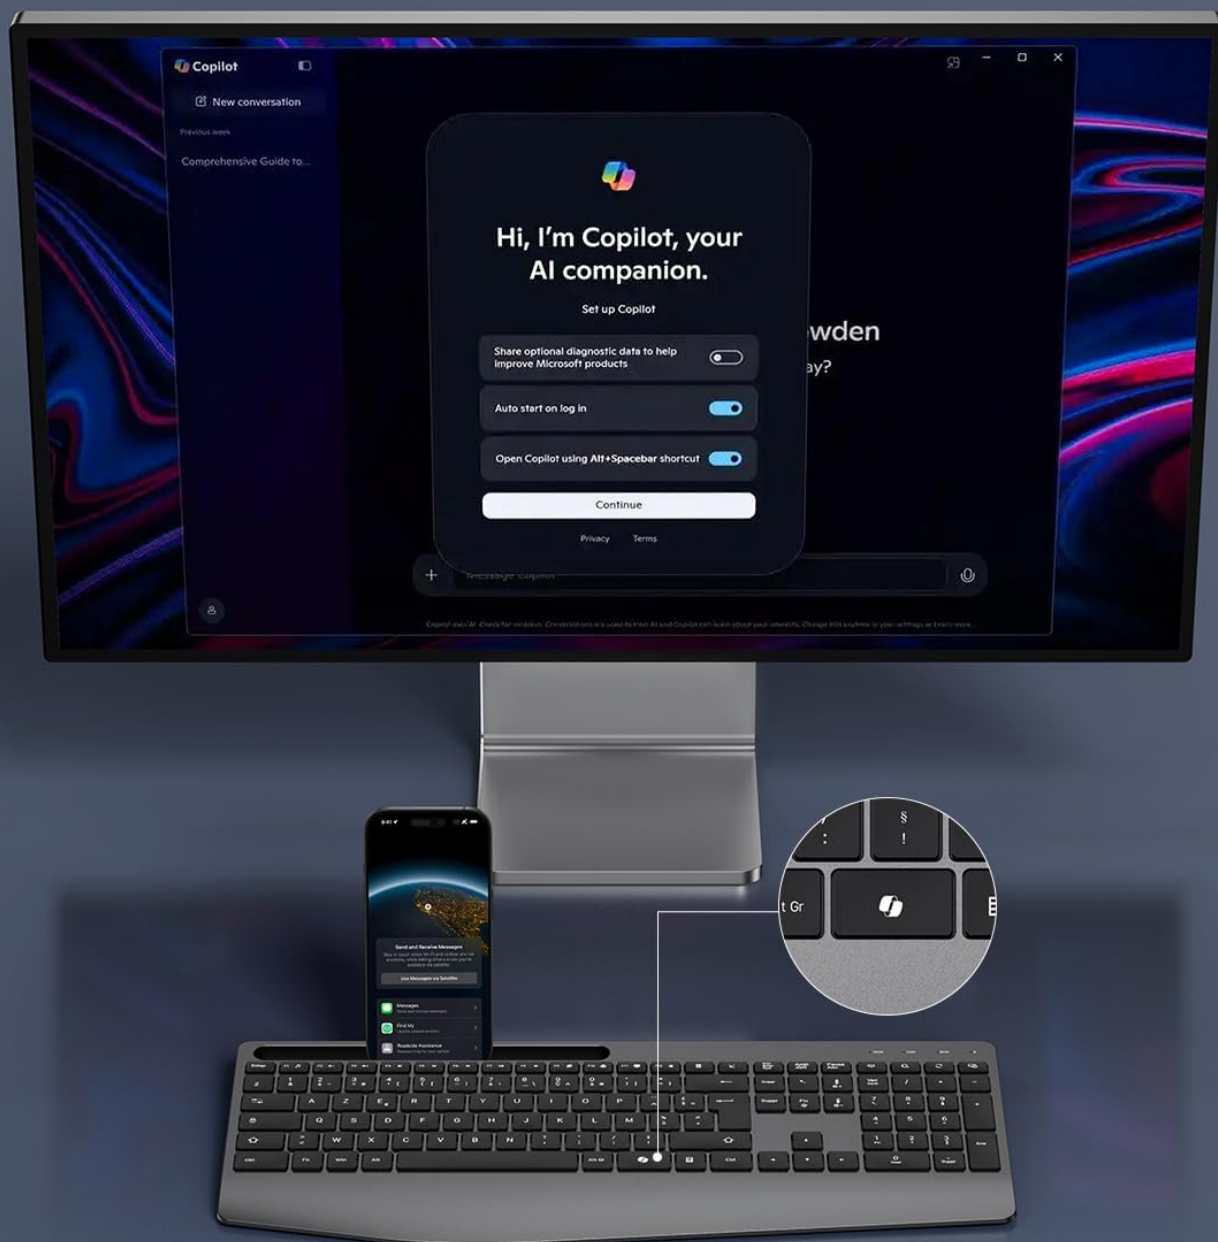

Accès en un clic à Copilot (Win 11 et Plus)

Non disponible pour les versions sous Win 11

Image: The TECURS WK015 keyboard with its dedicated Copilot key, demonstrating its function with the Copilot interface displayed on a monitor.

Multimedia and Shortcut Keys

The keyboard features independent shortcut keys and FN multimedia keys for enhanced productivity. Refer to the key layout for specific functions such as volume control, media playback, and application shortcuts.

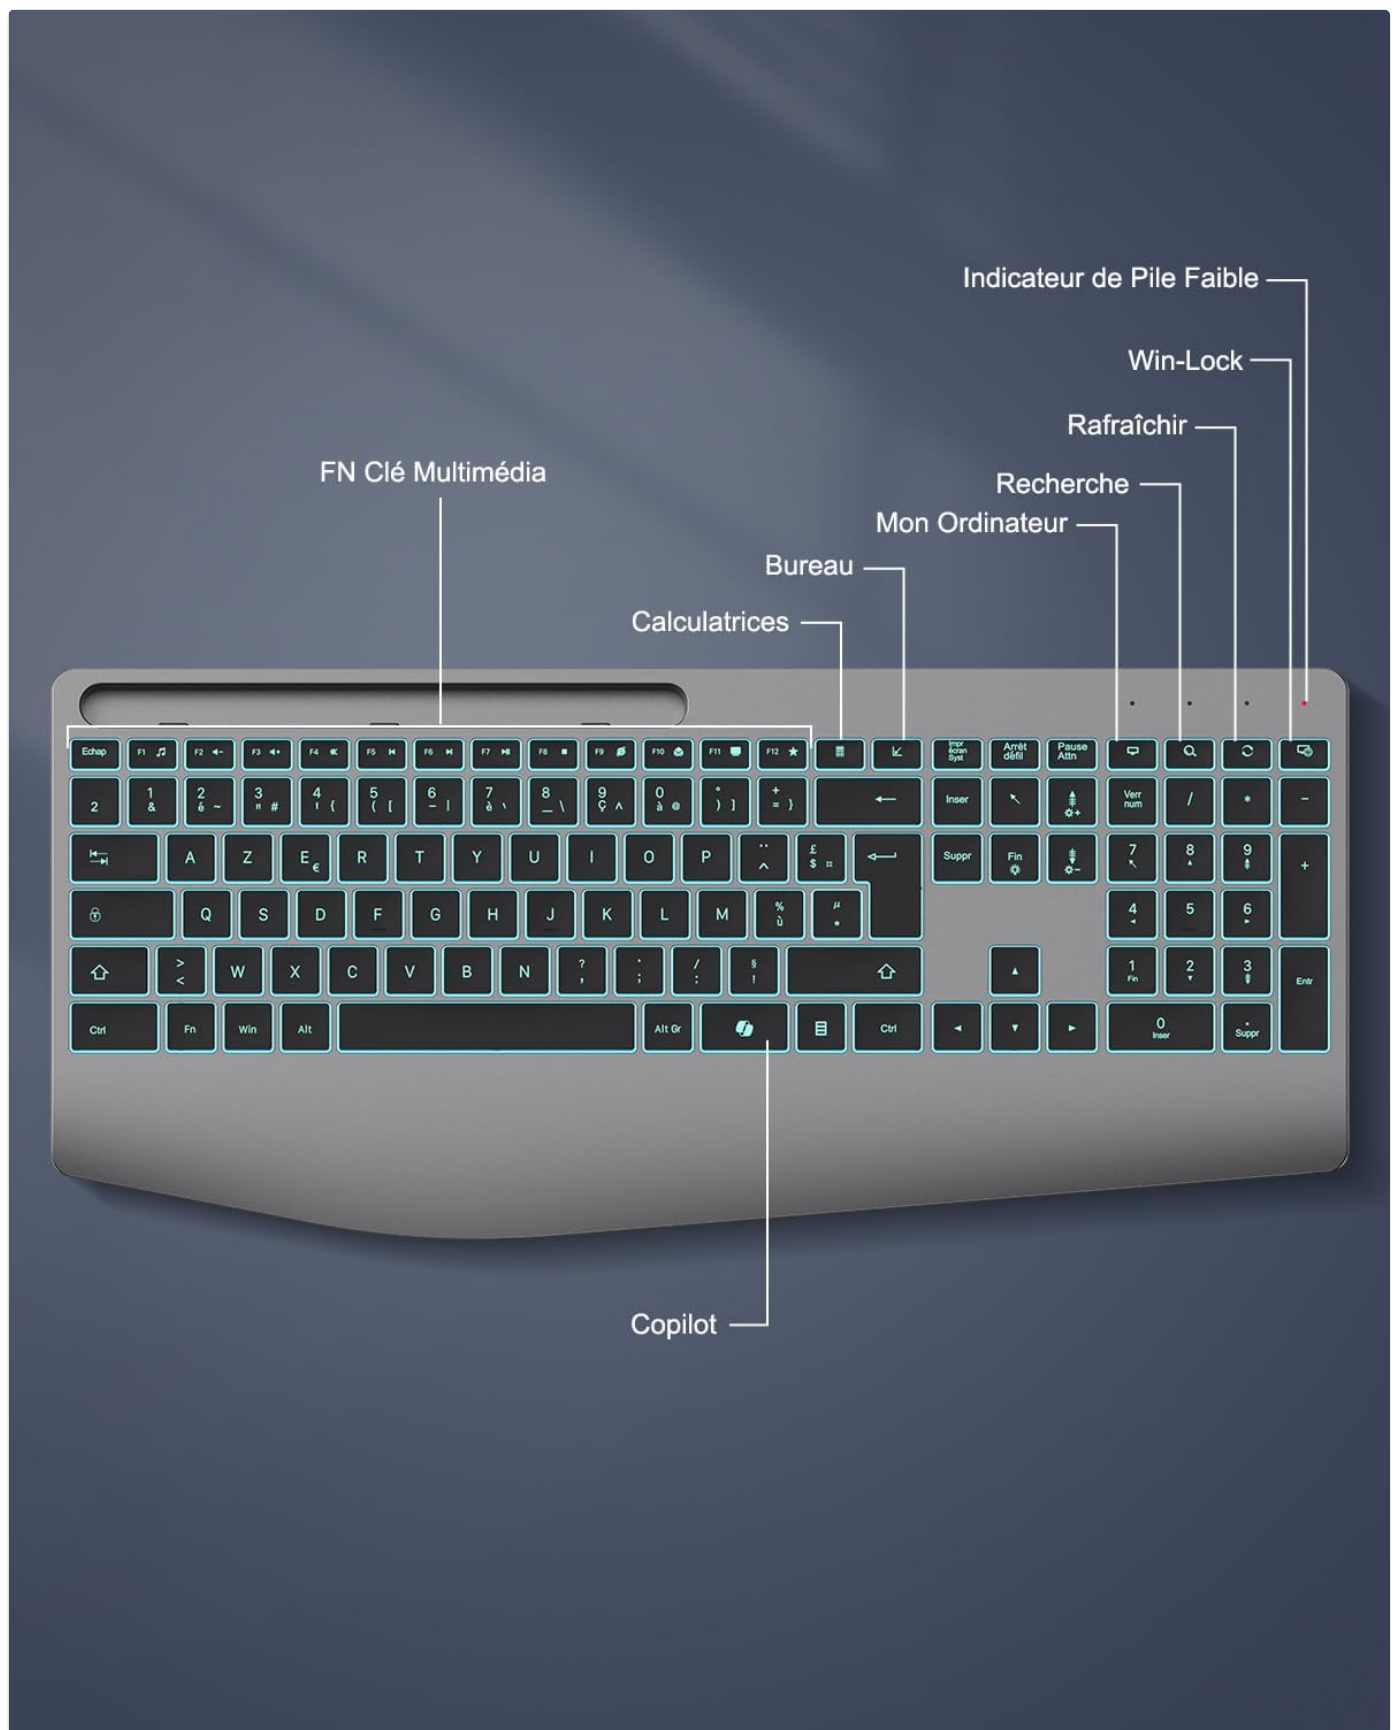 


Image: Detailed overview of the TECURS WK015 keyboard layout, highlighting various function keys including FN multimedia keys, Copilot, Win-Lock, and other dedicated shortcuts.

Ergonomic Design Features

The keyboard is designed for comfort during extended use:

- **Integrated Wrist Rest:** Provides support for your wrists, promoting a natural typing posture.
- **Adjustable Tilt Feet:** Allows you to adjust the keyboard angle for personalized comfort.

- **Integrated Phone Holder:** Keeps your smartphone conveniently accessible and your desk organized.

Repose-Poignet Ergonomique

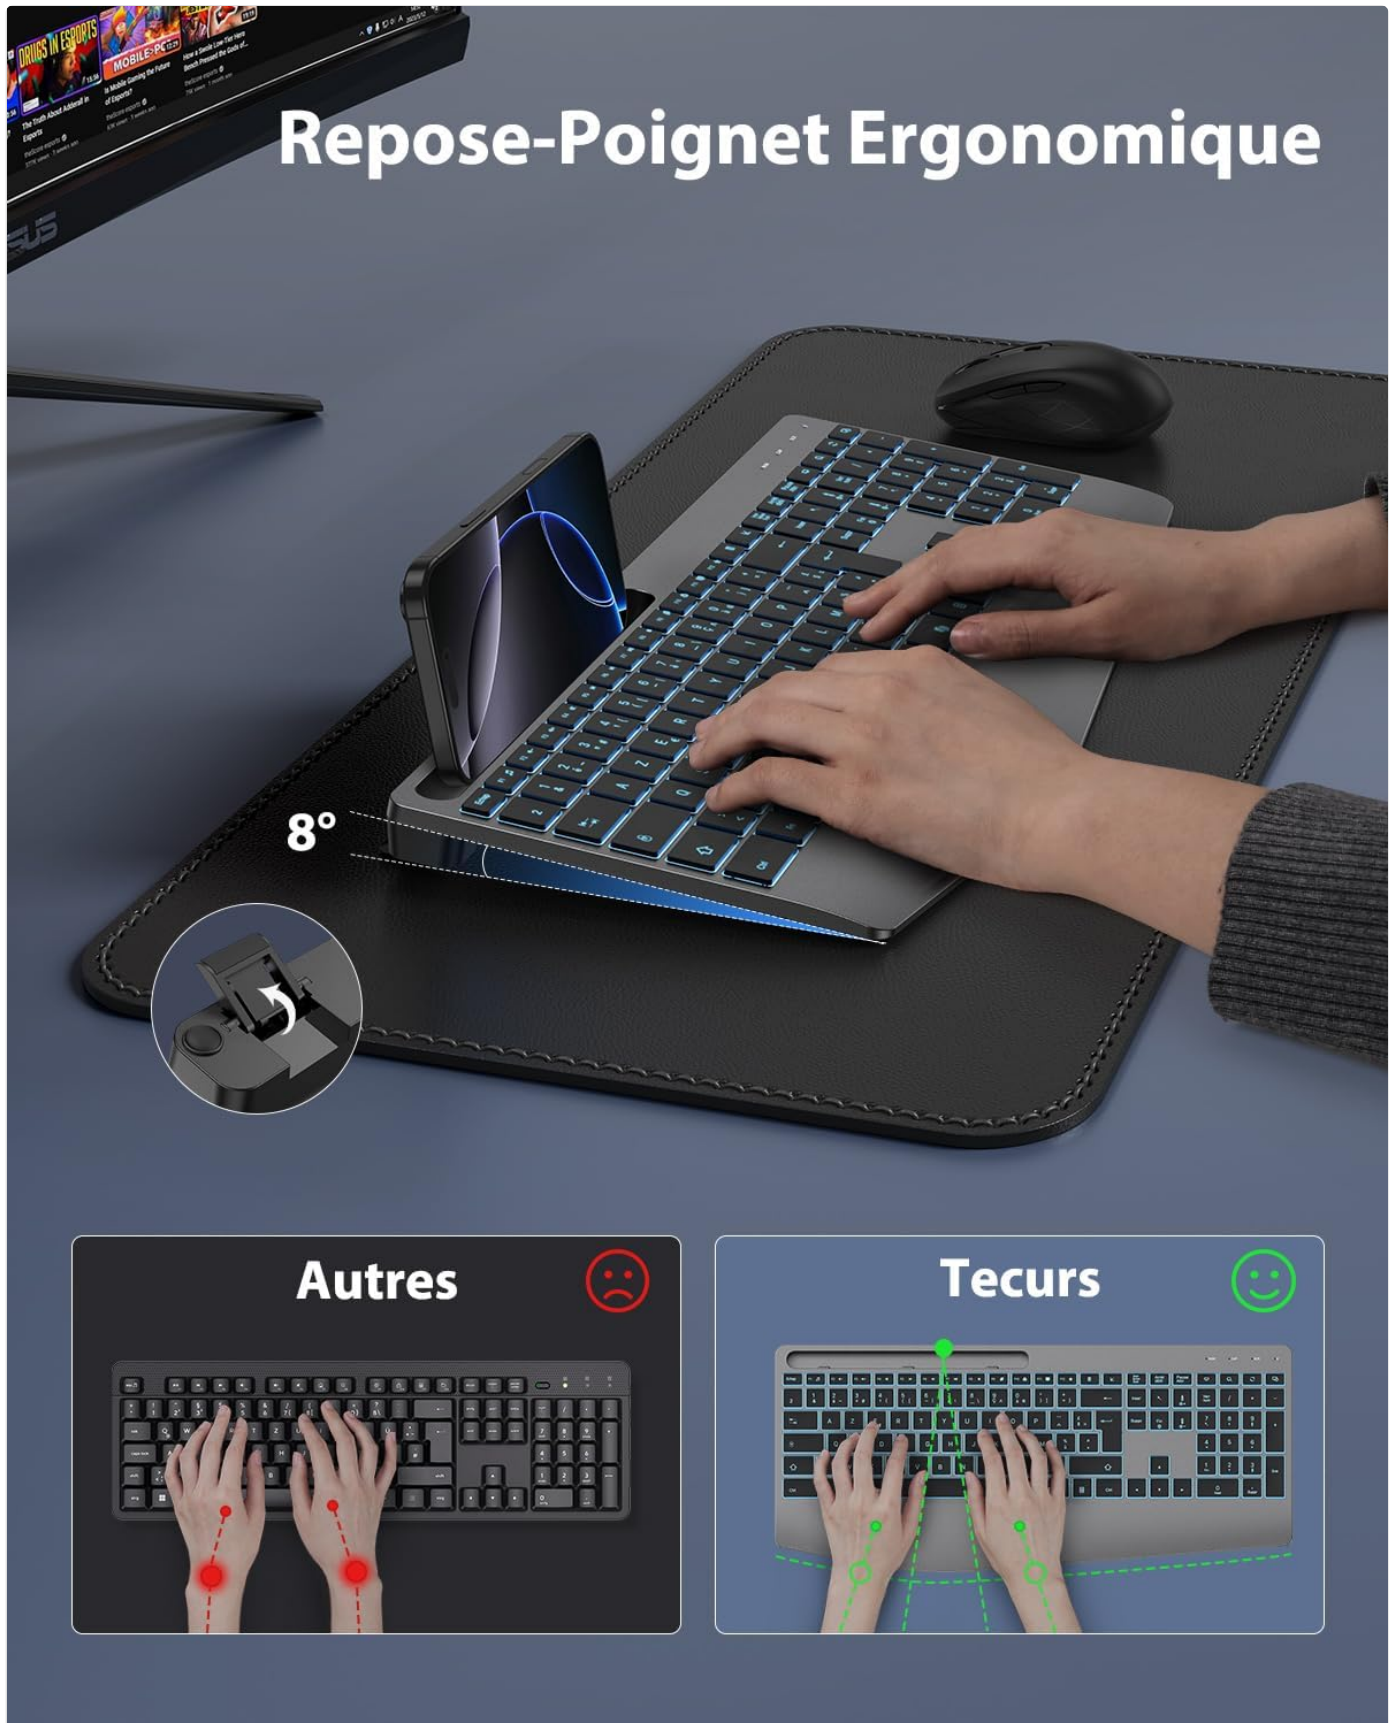 


Image: A user's hands positioned comfortably on the TECURS WK015 ergonomic keyboard, illustrating the benefits of the integrated wrist rest and adjustable 8-degree tilt for improved posture compared to standard keyboards.

Support de Téléphone Portable



Image: The TECURS WK015 keyboard featuring its integrated portable phone holder, with key dimensions of the keyboard overlaid for reference.

Silent Scissor-Switch Keys

The keyboard utilizes high-quality scissor-switch keys, reducing typing noise by up to 95% for a quiet working environment.

Un Clic Doux et Silencieux



Réduit le Bruit de 95%

Image: The TECURS WK015 keyboard in use, highlighting its quiet operation due to scissor-switch keys, suitable for environments where noise reduction is desired.

Smart Sleep Mode

To conserve energy, the keyboard automatically enters sleep mode and deactivates the backlight after a period of inactivity. To reactivate, press any key and wait for approximately 3 seconds.

For prolonged non-use, it is recommended to manually turn off the keyboard using the power switch to further extend battery life.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the keyboard surface. For stubborn dirt, a slightly damp cloth can be used, ensuring no liquid enters the keyboard.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Liquids:** Do not expose the keyboard to water or other liquids.
- **Avoid Drops:** Handle the keyboard with care to prevent damage from drops or impacts.

TROUBLESHOOTING

Problem	Solution
Keyboard not responding	• Ensure the keyboard is turned on. • Check if the receiver is securely plugged into a USB/Type-C port. • Try plugging the receiver into a different USB/Type-C port. • Recharge the keyboard if the battery is low (red LED indicator). • Restart your computer.
Backlight not working	• Ensure the keyboard is not in smart sleep mode. Press any key to wake it. • Check battery level; backlight may be disabled when battery is very low. • Adjust brightness using Fn + Page Up.
Keys are sticky or unresponsive	• Clean around the affected keys with compressed air or a soft brush. • Avoid spilling liquids on the keyboard.
Wireless connection issues	• Ensure the keyboard is within the effective range of the receiver (typically up to 10 meters). • Avoid placing the receiver near strong interference sources (e.g., Wi-Fi routers, other wireless devices). • Try re-pairing the keyboard if applicable (refer to specific pairing instructions if provided, though usually plug-and-play for 2.4G).

SPECIFICATIONS

Feature	Detail
Model Number	WK015
Connectivity Technology	2.4G Wireless
Keyboard Layout	AZERTY (French)
Number of Keys	112 (Full-size with numeric keypad)

Feature	Detail
Key Switch Type	Scissor Structure
Backlight	7-Color LED, RGB, 3 Brightness Levels
Battery Capacity	1000mAh Rechargeable
Battery Life (Backlight On)	Up to 10 hours
Battery Life (Backlight Off)	Up to 15 days
Charging Port	Type-C
Compatible Operating Systems	Windows 11/10/8/7/Vista/XP, Linux
Special Features	Ergonomic Design, Integrated Wrist Rest, Integrated Phone Holder, Copilot Key, Silent Keys, Smart Sleep Mode
Dimensions (L x W x H)	43.1 x 19.3 x 2.2 cm (16.96 x 7.6 x 0.88 inches)
Material	Plastic

Safety Information

- Do not attempt to disassemble or modify the keyboard. This may void the warranty and cause damage.
- Keep the keyboard away from heat sources, open flames, and direct sunlight.
- Dispose of the battery according to local regulations. Do not dispose of it in household waste.
- This product is not a toy. Keep out of reach of children.

Warranty and Support

For warranty information and technical support, please refer to the contact details provided by your retailer or visit the official TECURS website. Keep your proof of purchase for warranty claims.

Ask a Question About This Manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question