

[Manuals.plus](#) /

› [JakMean](#) /

› JakMean Toy Blaster and Dinosaur Blaster Instruction Manual (Model B0F12XZS5D)

JakMean B0F12XZS5D

JakMean Toy Blaster and Dinosaur Blaster Instruction Manual

Model: B0F12XZS5D

INTRODUCTION

Thank you for choosing the JakMean Toy Blaster and Dinosaur Blaster set. This manual provides important information for the safe and proper use, assembly, and maintenance of your new toy blasters. Please read this manual thoroughly before use and retain it for future reference.

Important Safety Warnings

- **Age Recommendation:** Suitable for children aged 6 years and older.
- **Eye Protection:** Always wear eye protection when using blasters. Do not aim at eyes or face.
- **Dart Safety:** Use only official JakMean foam darts. Do not modify darts or blasters.
- **Supervision:** Adult supervision is recommended during play.
- **Material Safety:** All blaster toys are made of high-quality ABS material, non-toxic, smooth, and round without burrs.

PRODUCT OVERVIEW

This set includes two distinct blasters designed for foam dart play:

1. Main Toy Blaster (Gatling Style)

This electric toy blaster features a Gatling-style design with a large dart capacity. It offers automatic dart loading and impressive shooting range.

- **Dart Capacity:** 30 darts (belt-fed).
- **Firing Mechanism:** Electric, automatic belt rotation for loading.
- **Shooting Distance:** Up to 65-100 feet.
- **Dart Velocity:** Approximately 65 feet per second (fps).



Image: The main toy blaster demonstrating its powerful shooting capabilities.

2. Dinosaur Blaster Toy

This pump-action dinosaur-themed blaster is designed for easy use and comes with an ample supply of soft foam darts.

- **Dart Capacity:** Up to 5 darts at a time.
- **Firing Mechanism:** Pump-action priming, no batteries required.
- **Shooting Distance:** Up to 35 feet (10.5 meters).
- **Dart Material:** Soft foam, safe for children.

Safe & Harmless Foam Material



Image: The dinosaur blaster and its safe foam darts.

SETUP AND ASSEMBLY

Main Toy Blaster

1. **Unpack:** Carefully remove all components from the packaging.
2. **Install Darts:** Load the foam darts into the 30-dart belt clip. Ensure darts are inserted correctly and securely.
3. **Attach Belt:** Connect the loaded dart belt to the blaster's feeding mechanism.
4. **Battery Installation:** (Note: The product description mentions "electric toy" but does not specify battery type or location. Please refer to the product packaging for battery requirements and installation instructions.)

Dinosaur Blaster Toy

1. **Unpack:** Remove the dinosaur blaster and foam darts from the packaging.
2. **No Assembly Required:** The dinosaur blaster comes pre-assembled.

OPERATING INSTRUCTIONS

Main Toy Blaster (Gatling Style)

1. **Power On:** Ensure batteries are installed (if applicable) and the blaster is switched on.
2. **Aim:** Point the blaster at a safe target, away from eyes and face.
3. **Fire:** Press the trigger to fire darts. The automatic belt rotation will load the next dart after each shot, allowing for rapid firing.



Image: The main toy blaster offers both single shot and multiple burst firing modes.

Dinosaur Blaster Toy

1. **Load Darts:** Insert up to 5 soft foam darts into the front barrel of the dinosaur blaster.
2. **Prime Blaster:** Pull the tail of the dinosaur blaster back firmly to prime the mechanism.
3. **Aim:** Point the blaster at a safe target, away from eyes and face.
4. **Fire:** Press the trigger to launch a dart.

SUPER EASY TO USE

1. Install soft darts



2. Pull the tail back to load



3. Pull the trigger



Image: Easy steps to load and fire the dinosaur blaster.

MAINTENANCE

- **Cleaning:** Wipe the blasters with a clean, damp cloth. Do not submerge in water.
- **Storage:** Store blasters and darts in a cool, dry place away from direct sunlight when not in use.
- **Dart Care:** Keep foam darts clean and free from debris to ensure optimal performance.
- **Battery Replacement (Main Blaster):** If the main blaster's performance decreases, replace batteries as per the instructions on the product packaging.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Main Blaster not firing or weak shots	Low batteries; Darts jammed; Belt not properly attached.	Replace batteries; Clear any jammed darts carefully; Re-attach dart belt securely.
Dinosaur Blaster not firing or weak shots	Blaster not primed; Darts not fully inserted; Damaged darts.	Pull the tail back completely to prime; Ensure darts are fully inserted; Use new, undamaged darts.
Darts not feeding correctly (Main Blaster)	Belt misaligned; Darts damaged or incorrect type.	Check belt alignment; Use only official JakMean foam darts in good condition.

SPECIFICATIONS

Feature	Main Toy Blaster	Dinosaur Blaster Toy
Model Number	B0F12XZS5D (Set)	
Brand	JakMean	
Age Recommendation	6+ Years	
Dart Capacity	30 Darts (Belt-fed)	Up to 5 Darts
Firing Mechanism	Electric, Automatic	Pump-Action
Power Source	Batteries (<i>Type not specified, refer to packaging</i>)	Manual (No Batteries)
Max. Shooting Distance	65-100 feet	35 feet (10.5 meters)
Dart Velocity	~65 fps	N/A
Material	High-quality ABS plastic, soft foam darts	

WARRANTY AND SUPPORT

For warranty information, technical support, or any questions regarding your JakMean Toy Blaster and Dinosaur Blaster set, please refer to the product packaging or contact the manufacturer directly through their official website or customer service channels.

You can also visit the [JakMean Store on Amazon](#) for more product information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question