

[Manuals.plus](#) /

› [Taishixing](#) /

› Taishixing HD Wireless Video Doorbell Camera with Chime (1080P) Instruction Manual

Taishixing J1

Taishixing HD Wireless Video Doorbell Camera with Chime (1080P) Instruction Manual

Model: J1

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Taishixing HD Wireless Video Doorbell Camera with Chime (1080P). Please read this manual thoroughly before using the product to ensure proper functionality and safety.

2. WHAT'S IN THE BOX

Verify that all components are present in your package:

- Doorbell Camera
- Chime
- 32GB Micro SD Card (pre-installed)
- Mounting Screws and Anchors
- USB Charging Cable
- User Manual



Image: Contents of the Taishixing Video Doorbell Camera package, including the doorbell unit, chime, and 32GB SD card.

3. KEY FEATURES

- **PIR Human Shape Detection and Real-time Alert:** Advanced human detection reduces false alarms from non-human movements, providing accurate notifications.
- **Wireless 2.4Ghz WiFi:** Designed for stable and clear real-time video, allowing flexible installation without complex wiring.
- **1080P HD Video and Clear Night Vision:** Captures clear 1080P HD video. Built-in infrared lights automatically activate for night vision, ensuring all-day security.
- **SD Card Storage and Cloud Storage:** Includes a built-in 32GB Micro SD card for local storage and supports optional cloud storage services.
- **IP65 Protection Rating:** Weatherproof design ensures reliable operation in various outdoor conditions, including rain, snow, and high temperatures.
- **Two-way Audio:** Enables direct communication with visitors through the built-in microphone and speakers.

- **Family Sharing:** Allows sharing live video feeds and alert messages with family and friends.



Image: Illustration of the human detection feature, distinguishing between human figures and other objects like pets.



Two-Way Audio

Talk and see who's ringing



Image: A smartphone screen showing a live view from the doorbell camera with a two-way audio icon, indicating communication with a visitor.



WI-FI

It only compliant with supporting 2.4GHZ



Image: Infographic detailing features such as 2.4G WiFi, 1080P HD, mobile detection, two-way audio, cloud storage, battery power, and included 32GB Micro SD card.



Image: Split view demonstrating the doorbell camera's clear day vision and automatic infrared night vision in 1080P resolution.

4. SETUP GUIDE

4.1 Charging the Doorbell Camera

Before initial use, fully charge the doorbell camera using the provided USB charging cable. The charging port is located on the side of the device. Ensure the device is removed from its mounting bracket for charging.

4.2 App Installation and Pairing

1. Download the official app (refer to the user manual for specific app name and QR codes) from your smartphone's app store (Android or iPhone).
2. Create an account and log in.
3. Follow the in-app instructions to add your new doorbell camera. This typically involves scanning a QR code on the device and connecting it to your 2.4Ghz Wi-Fi network.

4. Pair the indoor chime with the doorbell camera as per the app's instructions.

4.3 Mounting the Doorbell Camera

The doorbell camera can be mounted using screws or adhesive tape. Choose a location that provides a clear view of your entryway and is within Wi-Fi range.

1. Secure the mounting bracket to your desired location using the provided screws and anchors, or strong adhesive tape.
2. Slide the doorbell camera onto the mounting bracket until it clicks securely into place.

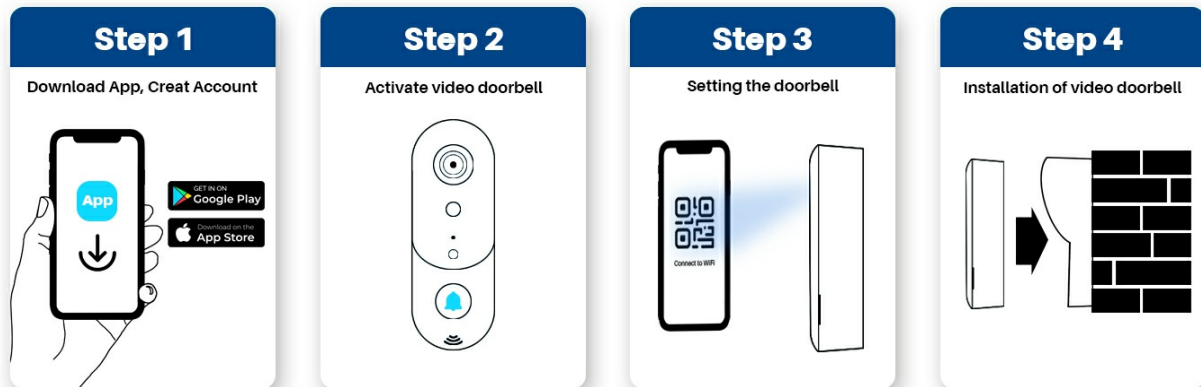


Image: A visual guide showing the four steps for setting up the doorbell: downloading the app, activating the doorbell, setting up the doorbell via QR code, and physical installation.

Your browser does not support the video tag.

Video: A demonstration of the wireless doorbell camera's features, including two-way audio, easy installation, cloud storage, wide-angle lens, night vision, and human detection.

Your browser does not support the video tag.

Video: A short preview demonstrating how to view videos stored on the SD card through the mobile application.

5. OPERATING INSTRUCTIONS

5.1 Live View and Two-Way Audio

- Open the app on your smartphone to access the live video feed from your doorbell camera.
- To speak with a visitor, tap the microphone icon in the app. Your voice will be transmitted through the doorbell's speaker, and you can hear their response through your phone.

5.2 Motion Detection and Alerts

- The doorbell camera uses PIR human shape detection to identify human activity.
- When motion is detected, you will receive real-time alerts on your smartphone.
- Adjust motion detection sensitivity settings within the app to minimize false alarms.

5.3 Night Vision

The camera automatically switches to infrared night vision mode in low-light conditions, providing clear black-and-white

video footage.

5.4 Video Storage and Playback

- Videos are stored locally on the built-in 32GB Micro SD card.
- You can access and review recorded footage through the app's playback feature.
- Optional cloud storage is available for enhanced security and accessibility.

Your browser does not support the video tag.

Video: A seller-provided video showcasing the 1080P video doorbell camera in action, highlighting its features and clarity.

6. MAINTENANCE

- **Battery Charging:** The doorbell camera is battery-powered. Monitor the battery level through the app and recharge as needed. Battery life can vary based on usage and environmental conditions.
- **Cleaning:** Gently wipe the camera lens and the doorbell's exterior with a soft, damp cloth to remove dust and debris. Avoid using harsh chemicals.
- **Firmware Updates:** Periodically check the app for available firmware updates to ensure optimal performance and access to new features.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Doorbell not connecting to Wi-Fi	Incorrect Wi-Fi password, 5Ghz network, or weak signal.	Ensure you are connecting to a 2.4Ghz Wi-Fi network. Verify the password. Move the doorbell closer to the router or use a Wi-Fi extender.
Frequent false alarms	High motion detection sensitivity, environmental factors (e.g., moving branches, passing cars).	Adjust the motion detection sensitivity settings in the app to a lower level. Utilize the human shape detection feature.
Poor video quality	Weak Wi-Fi signal, dirty lens.	Ensure a strong Wi-Fi connection. Clean the camera lens with a soft cloth.
Short battery life	Frequent motion detection, live view usage, cold weather.	Reduce motion detection sensitivity. Limit live view sessions. Battery performance can be affected by extreme temperatures.

8. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	Taishixing
Model Name	Video Doorbell Camera
Item Model Number	J1
Connectivity Technology	Wireless (2.4Ghz Wi-Fi)
Power Source	Battery Powered (2 Lithium Ion batteries included)
Video Capture Resolution	1080p
Special Features	2-Way Audio, 32GB local storage, HD Resolution, Motion Sensor, Night Vision
International Protection Rating	IP65 (Waterproof)
Compatible Devices	Android, iPhone
Control Method	App
Product Dimensions	5.51 x 1.77 x 1.18 inches
Item Weight	14 ounces

9. WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the contact details provided in the product packaging or on the manufacturer's official website. Keep your purchase receipt for warranty claims.