

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Generisch](#) /

› [Generisch jiangboyue-824011 Garden Bench User Manual](#)

Generisch jiangboyue-824011

Generisch jiangboyue-824011 Garden Bench User Manual

Model: jiangboyue-824011 | Brand: Generisch

1. INTRODUCTION

Thank you for purchasing the Generisch jiangboyue-824011 Garden Bench. This manual provides important information regarding the assembly, operation, maintenance, and troubleshooting of your new garden bench. Please read this manual thoroughly before assembly and retain it for future reference.

Safety Information

- Ensure all parts are present and undamaged before assembly.
- Assemble the bench on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly to avoid damaging the wood.
- Ensure the bench is placed on a stable, level surface before use.
- Do not exceed the maximum weight capacity.
- Keep children and pets away from the assembly area.



Figure 1.1: The Generisch jiangboyue-824011 Garden Bench, a 2-seater solid pine wood bench, shown in an outdoor garden environment.

2. PACKAGE CONTENTS

Please verify that all components listed below are included in your package. If any parts are missing or damaged, please contact customer support.

Item	Description	Quantity
A	Bench Seat Slats	1 set
B	Legs	4
C	Support Beams	Various
D	Hardware Pack (screws, bolts, wrench)	1



Figure 2.1: A clear front view of the unassembled or partially assembled garden bench, showing the solid pine wood construction.

3. SETUP AND ASSEMBLY

Follow these general steps for assembling your garden bench. Refer to the included assembly diagrams for detailed instructions specific to your model.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent damage.
2. **Identify Parts:** Compare the components with the parts list and assembly diagrams to ensure all pieces are present and correctly identified.
3. **Assemble Frame:** Begin by attaching the main support beams to the legs using the provided hardware. Do not fully tighten screws at this stage.
4. **Attach Seat Slats:** Secure the seat slats to the assembled frame. Ensure they are evenly spaced and aligned.
5. **Final Tightening:** Once all parts are assembled, carefully tighten all screws and bolts. Ensure the bench is stable and all connections are secure. Do not overtighten.
6. **Placement:** Place the assembled bench on a flat, stable surface in your desired outdoor location.



Figure 3.1: The assembled garden bench positioned in an outdoor setting, demonstrating its intended use.

4. OPERATING INSTRUCTIONS

The Generisch jiangboyue-824011 Garden Bench is designed for outdoor seating. To ensure safe and proper use, please observe the following guidelines:

- This bench is designed to comfortably seat two adults.
- The maximum weight capacity per seat is 110 kg (242 lbs). Do not exceed this limit.
- Ensure the bench is always placed on a stable and level surface to prevent tipping.
- Avoid standing or jumping on the bench.
- Do not use the bench as a step stool or ladder.
- Regularly inspect the bench for any loose screws or damaged parts.

5. MAINTENANCE AND CARE

Proper maintenance will extend the life and appearance of your solid pine wood garden bench.

Cleaning

- Clean the bench regularly with a soft cloth dampened with mild soap and water.
- Avoid using harsh chemicals, abrasive cleaners, or wire brushes, as these can damage the wood finish.
- Rinse thoroughly with clean water and dry immediately with a clean cloth to prevent water spots or wood swelling.

Wood Care

- As the bench is made of untreated solid pine wood, it is recommended to apply a wood treatment, stain, or sealant to protect it from weathering, UV rays, and moisture, especially if exposed to direct sunlight or rain.
- Periodically check and tighten all screws and bolts to ensure the bench remains stable.
- During harsh weather conditions (heavy rain, snow, extreme heat), consider covering the bench or storing it indoors to prolong its lifespan.



Figure 5.1: A detailed view of the natural grain and texture of the solid pine wood used in the bench construction.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your garden bench.

Problem	Possible Cause	Solution
Bench feels wobbly or unstable.	Loose screws or uneven ground.	Ensure all assembly screws are tightened. Move the bench to a flat, level surface.
Wood appears discolored or weathered.	Exposure to elements without protection.	Apply a suitable wood treatment, stain, or sealant. Consider covering the bench when not in use.
Squeaking noises during use.	Loose joints or friction between wood parts.	Tighten all screws. Apply a small amount of silicone spray or wax to friction points if necessary.

7. SPECIFICATIONS

Detailed specifications for the Generisch jiangboyue-824011 Garden Bench:

- **Model:** jiangboyue-824011
- **Brand:** Generisch
- **Material:** Solid pine wood (untreated)
- **Dimensions (W x D x H):** 159.5 cm x 44 cm x 45 cm (62.8 in x 17.3 in x 17.7 in)
- **Seating Capacity:** 2 persons
- **Maximum Load Capacity (per seat):** 110 kg (242 lbs)
- **Cushions Included:** No

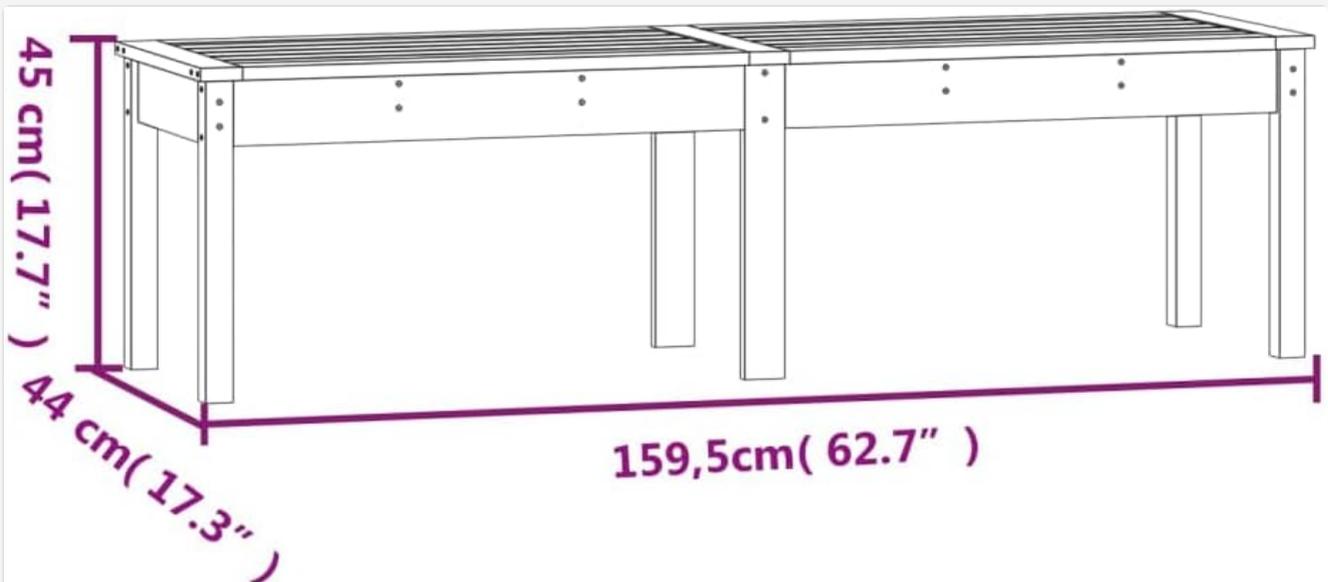


Figure 7.1: Technical diagram illustrating the width (159.5 cm), depth (44 cm), and height (45 cm) of the garden bench.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the terms and conditions provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

If you have any questions or require assistance with your Generisch jiangboyue-824011 Garden Bench, please

contact the manufacturer or seller through the platform where the product was purchased.



© 2025 Generisch. All rights reserved.
This manual is subject to change without notice.