

Pingequa WiFi Devboard

Pingequa Flipper Zero Wi-Fi Devboard User Manual

Model: WiFi Devboard | Brand: Pingequa

			Introduction	Features	What's in the	
Box	Setup	Operation	Maintenance	Troubleshooting	Specifications	Warranty & Support

1. INTRODUCTION

This manual provides detailed instructions for the Pingequa Flipper Zero Wi-Fi Devboard. This expansion module enhances your Flipper Zero with Wi-Fi connectivity and comes pre-installed with Marauder firmware, enabling advanced wireless testing capabilities. Please read this manual thoroughly before use to ensure proper setup and operation.

2. KEY FEATURES

- **Wi-Fi Connectivity:** Seamlessly integrates Wi-Fi capabilities with your Flipper Zero.
- **Pre-installed Marauder Firmware:** Equipped with Marauder firmware for advanced Wi-Fi testing.
- **ESP32-S2 Chipset:** Utilizes a powerful ESP32-S2 chipset for robust performance.
- **Easy Firmware Installation:** Supports effortless flashing of new firmware for customization and expanded functionalities.
- **Versatile Applications:** Suitable for network security research, IoT projects, development, and remote device management.

3. WHAT'S IN THE BOX

Upon opening your package, please verify that all components are present:

- 1x Pingequa Flipper Zero Wi-Fi Devboard
- 1x WiFi Board

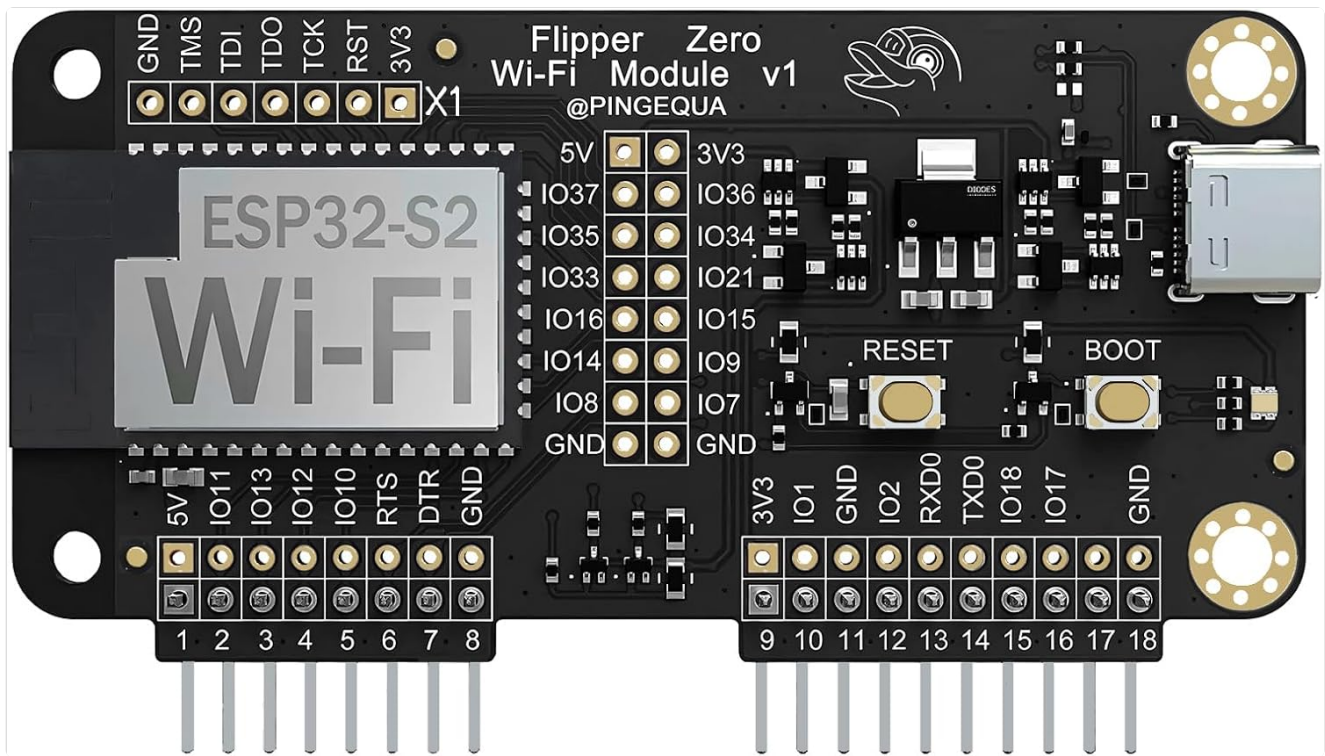


Image 1: The Pingequa Flipper Zero Wi-Fi Devboard.

4. SETUP GUIDE

4.1. Physical Installation

1. Ensure your Flipper Zero is powered off before connecting the Wi-Fi Devboard.
2. Carefully align the pins of the Wi-Fi Devboard with the GPIO pins on your Flipper Zero.
3. Gently press the Devboard into place until it is securely seated.



Image 2: Flipper Zero with the Wi-Fi Devboard securely attached.

4.2. Initial Configuration (GPIO Pins)

For the Wi-Fi Devboard to function correctly, you may need to configure the GPIO pins on your Flipper Zero. This process is similar for various Flipper Zero modules.

1. Power on your Flipper Zero.
2. Navigate to the **Apps** menu.
3. Select the **Momentum** application (or similar firmware interface).
4. Go to **Protocols**, then **GPIO Pins**.
5. Ensure the correct SPI settings are selected for the ESP32-S2 module. Typically, this involves setting **ESP32/8266 SPI** to **Default 1**. Refer to your Flipper Zero's specific firmware documentation for exact pin assignments if issues arise.

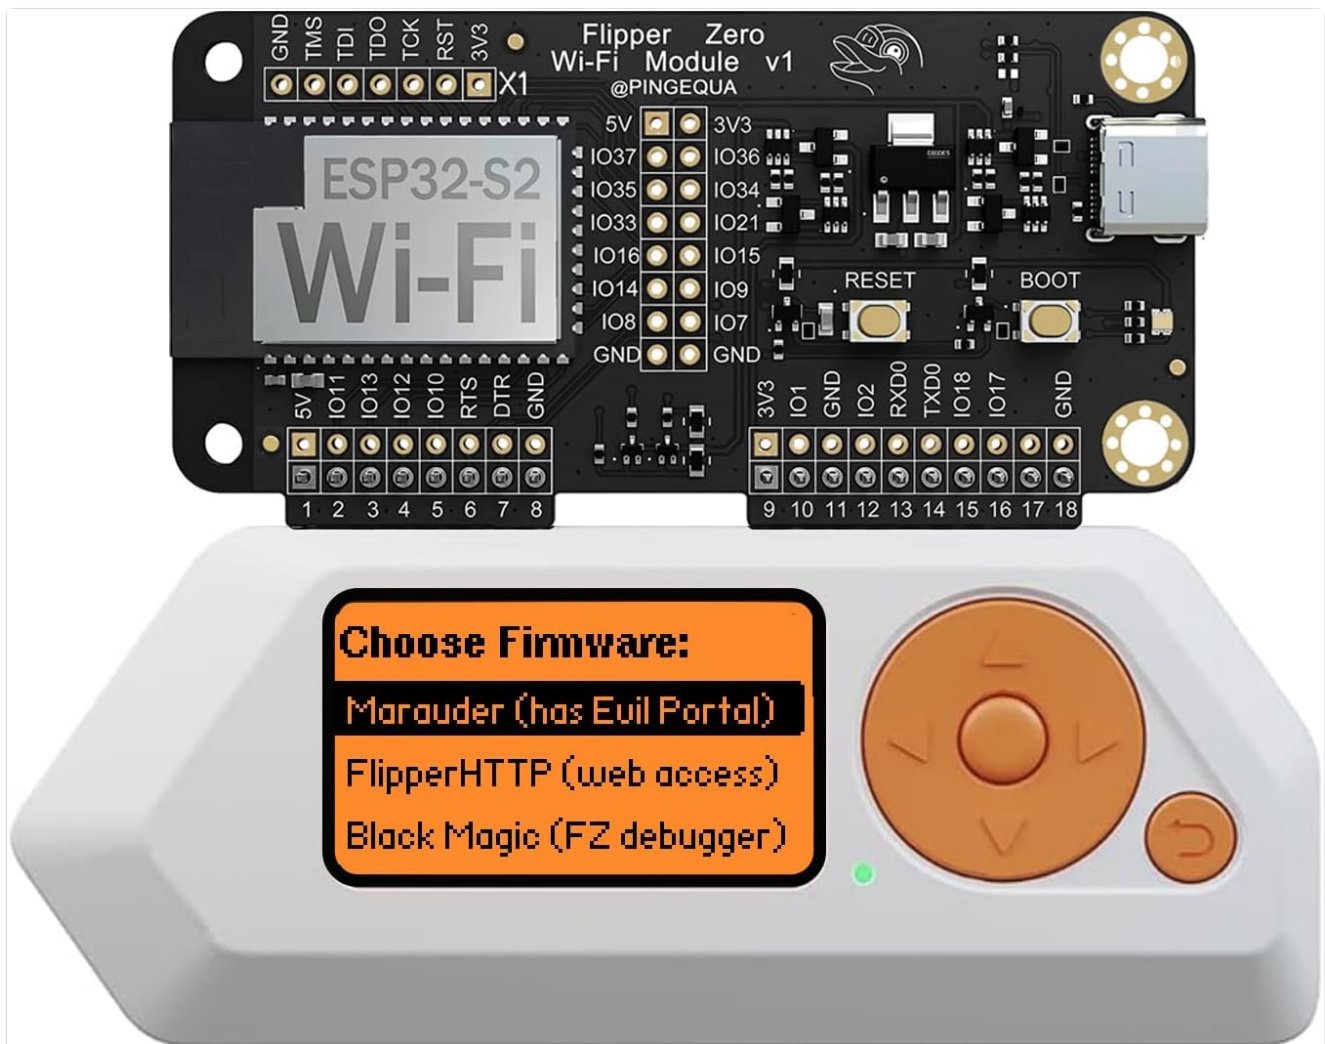


Image 3: Flipper Zero display showing firmware selection options.

4.3. Visual Setup Guide

For a visual walkthrough of connecting a module and configuring GPIO pins on the Flipper Zero, please refer to the following video. While this video demonstrates a different RF module, the physical connection and GPIO setup steps are generally applicable.

Your browser does not support the video tag.

Video 1: General guide on setting up and using an RF module with Flipper Zero, including GPIO pin configuration.

5. OPERATION

The Pingequa Wi-Fi Devboard comes pre-installed with Marauder firmware, designed for various wireless testing and analysis tasks. After successful setup, you can access its functionalities through your Flipper Zero interface.

5.1. Accessing Marauder Firmware

1. From the Flipper Zero main menu, navigate to **Apps**.
2. Select the application associated with the Wi-Fi Devboard (often labeled "ESP32" or "Marauder").
3. Within the Marauder interface, you will find options for various Wi-Fi testing functionalities, such as network scanning, deauthentication attacks, and packet capture.

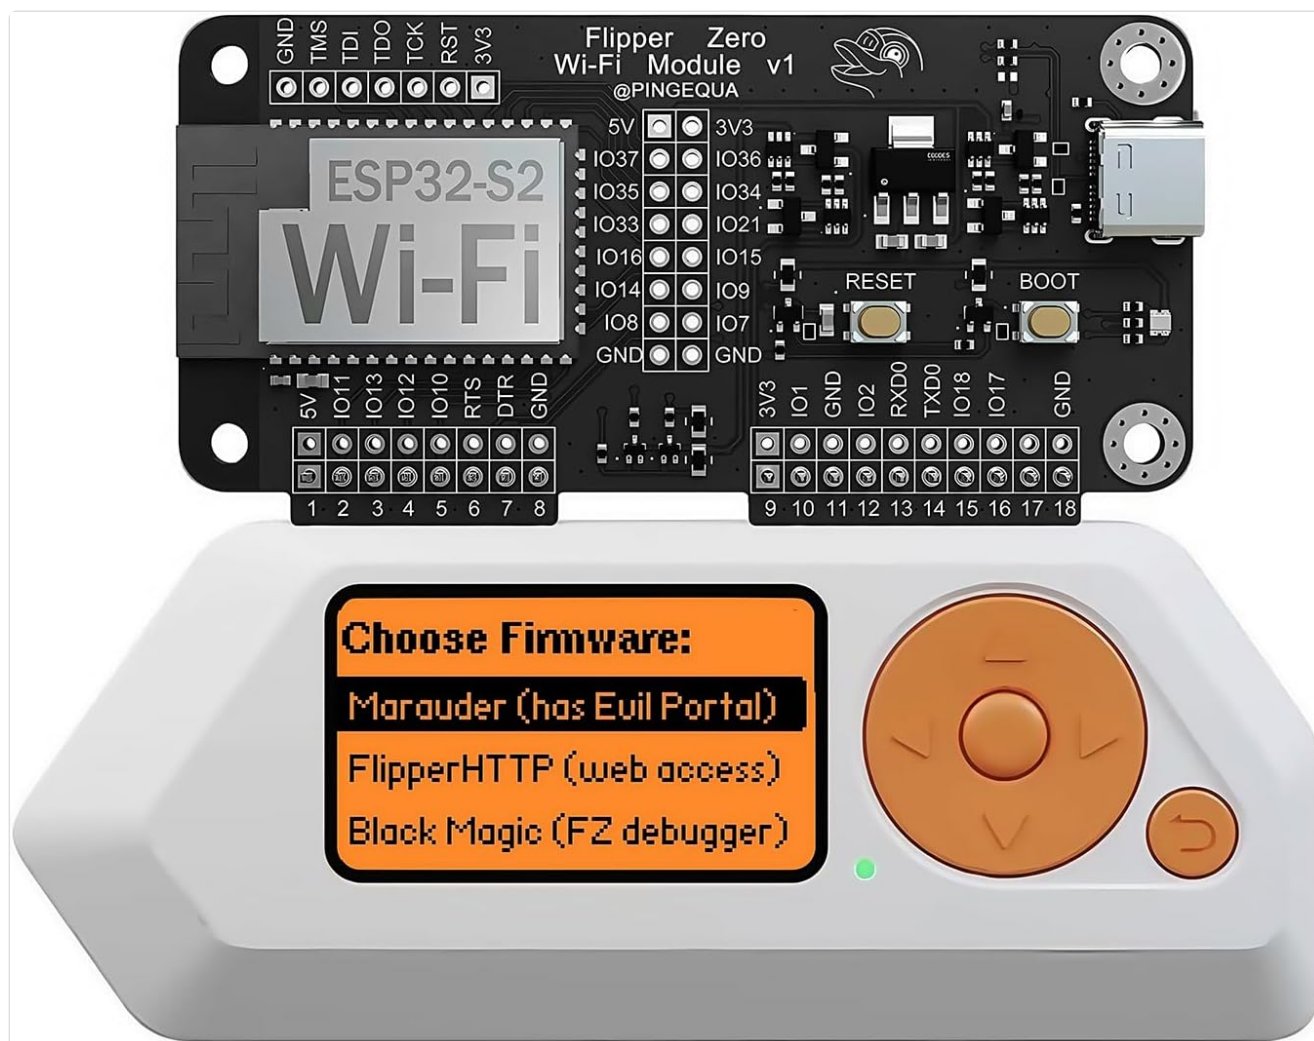


Image 4: Flipper Zero display showing the Marauder firmware menu with various Wi-Fi options.

5.2. Firmware Updates

The Devboard supports easy firmware updates. To flash new firmware, connect the Devboard to your computer via its USB-C port while holding down the reset button. Follow the instructions provided by the firmware developer for the specific update process.

6. MAINTENANCE

- Keep the Wi-Fi Devboard clean and free from dust and debris. Use a soft, dry cloth for cleaning.
- Avoid exposing the module to extreme temperatures, humidity, or direct sunlight.
- Handle the module carefully to prevent damage to the pins or internal components.

- Store the module in a protective case when not in use to prevent physical damage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Flipper Zero does not recognize the Devboard.	Incorrect GPIO pin configuration or loose connection.	Ensure the Devboard is securely connected to the Flipper Zero's GPIO pins. Verify GPIO pin settings in the Flipper Zero firmware (refer to Section 4.2). Try re-flashing the Devboard firmware if necessary.
Wi-Fi functions are not working.	Incorrect firmware, outdated firmware, or improper application selection.	Confirm that the Marauder firmware is correctly installed and up-to-date. Ensure you are selecting the correct application within the Flipper Zero menu.
Devboard is not powering on.	Loose connection or Flipper Zero power issue.	Check the connection to the Flipper Zero. Ensure the Flipper Zero itself is adequately charged and functioning.

8. SPECIFICATIONS




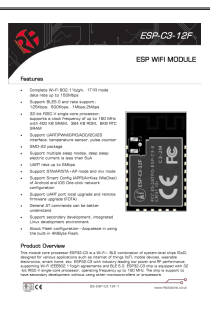


Feature	Detail
Model Name	WiFi Devboard for Flipper Zero
Item Model Number	WiFi Devboard
Processor Brand	Espressif
Operating System	Marauder
Connectivity Technology	Wi-Fi
RAM	LPDDR2
Memory Storage Capacity	2 MB
Item Weight	1.13 ounces
Package Dimensions	4.29 x 3.39 x 1.46 inches

9. WARRANTY & SUPPORT

This Pingequa product is covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the product packaging or contact Pingequa customer support.

For technical assistance, troubleshooting, or general inquiries, please visit the [Pingequa Store on Amazon](#) or contact their customer service directly.

Related Documents - WiFi Devboard

	<p>AIO_V1.4 User Manual - Function Switch and ESP32 Programming</p> <p>User manual for the AIO_V1.4, detailing the function switch operations and the process for programming the ESP32 module using ESPWebTool.</p>
	<p>ESP32 WiFi & Bluetooth Development Board: OEM/Integrator Installation Manual</p> <p>This manual provides essential information for Original Equipment Manufacturers (OEMs) and integrators on installing the ESP32 WiFi & Bluetooth Development Board. It details FCC compliance requirements, installation procedures, and a comprehensive pinout description for the ESP32 module, ensuring proper integration into end products.</p>
	<p>ESP32 Development Board Setup Guide for Arduino IDE</p> <p>A comprehensive guide to setting up the ESP32 development environment within the Arduino IDE. Learn how to add board manager URLs, install ESP32 support, select the correct board and port, and enter download mode for ESP32-C3 modules.</p>
	<p>ESP-C3-12F ESP WiFi Module Datasheet and Technical Specifications</p> <p>Detailed technical specifications, features, electrical characteristics, RF performance, and design guidance for the RF Solutions ESP-C3-12F ESP WiFi Module, based on the ESP32-C3 SoC.</p>
	<p>Extraflame WiFi Remote Module: Installation and Operation Guide</p> <p>This guide provides technical specifications, connection diagrams, configuration steps, and troubleshooting for the Extraflame WiFi Remote Module, enabling remote control of pellet stoves via the Total Control 2.0 app.</p>
	<p>Espressif ESP32-WROOM-32E WiFi Bluetooth BLE Module User Manual</p> <p>This user manual provides detailed specifications, pin configurations, functional descriptions, electrical characteristics, antenna performance, and OEM guidance for the Espressif ESP32-WROOM-32E module.</p>

