

[Manuals.plus](#) /

› [plimpton](#) /

› Plimpton P60 Pro Android Tablet User Manual

plimpton P60 pro

Plimpton P60 Pro Android Tablet User Manual

Model: P60 Pro

INTRODUCTION

This user manual provides essential information for setting up, operating, maintaining, and troubleshooting your Plimpton P60 Pro Android Tablet. Please read this manual thoroughly to ensure optimal performance and longevity of your device.



Image: The Plimpton P60 Pro Android Tablet, highlighting its Android 14 OS and key specifications like 12GB RAM and 128GB storage.

WHAT'S IN THE BOX

Verify that all items listed below are included in your package:

- 1 x PlimPad P60 Pro Android Tablet
- 1 x USB Adapter
- 1 x USB-C Cable (6ft length)
- 1 x User Manual (this document)
- 1 x Quick Guide

What's in the box

-  P60 Pro Tablet
-  USB-C Cable
-  Adapter
-  User Manual
-  Quick Start Guide



Image: A visual representation of the Plimpton P60 Pro tablet and its included accessories: USB adapter, USB-C cable, user manual, and quick start guide.

PRODUCT OVERVIEW

Familiarize yourself with the physical components of your Plimpton P60 Pro tablet.

- **Display:** 10.1-inch HD IPS Touchscreen (1280x800 pixels)
- **Front Camera:** 5MP, located at the top center when held horizontally.
- **Rear Camera:** 13MP, located on the back panel.
- **Power Button:** Located on the side, used to power on/off or wake/sleep the device.
- **Volume Rocker:** Located on the side, used to adjust audio volume.
- **USB-C Port:** For charging and data transfer.
- **SD Card Slot:** For expandable storage up to 1TB.
- **Speakers:** Dual speakers for enhanced audio experience.
- **Magnetic Connector:** Located on the bottom edge for connecting compatible accessories like keyboards.



Image: A clear front view of the Plimpton P60 Pro Android Tablet, showcasing its 10.1-inch display and sleek design.

New and Upgraded



*Premium Grey
Metal Shell*

**1280 x 800 HD IPS
300 Nits**



**Widevine L1
Support**



12(4+8)GB+128GB ROM



**7000mAh
Type-C, 1.8M Charging Cable**



8-Core CPU



Android 14 System

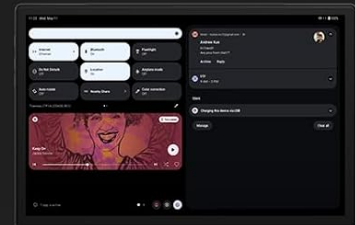


Image: An infographic detailing key features of the Plimpton P60 Pro, including its premium grey metal shell, 1280x800 HD IPS display, Widevine L1 support, 12GB RAM + 128GB ROM, 7000mAh battery, 8-Core CPU, and Android 14 System.

SETUP

1. Initial Power On

1. Press and hold the **Power Button** on the side of the tablet until the Plimpton logo appears.
2. Follow the on-screen prompts to select your language, region, and accessibility settings.

2. Connect to Wi-Fi

1. From the setup screen, select your desired Wi-Fi network.
2. Enter the network password if prompted, then tap **Connect**.

3. Google Account Setup

Sign in with your Google account to access the Google Play Store, Gmail, and other Google services. If you do not have an

account, you can create one during this step.



Android 14 | Google certified

Pre-installed Google Play Store gives you access to all your favorite apps, like Netflix, Instagram, TikTok, YouTube and Kindle.



Image: The Plimpton Android 14 tablet displaying its home screen, emphasizing Google certification and access to the Google Play Store for various applications.

OPERATING

Basic Navigation

- **Home Screen:** Swipe left or right to navigate between home screens.
- **App Drawer:** Swipe up from the bottom of the screen to access all installed applications.
- **Notifications & Quick Settings:** Swipe down from the top of the screen to view notifications and access quick settings toggles (Wi-Fi, Bluetooth, etc.).

App Management

- **Install Apps:** Use the Google Play Store to download and install new applications.
- **Uninstall Apps:** Press and hold an app icon, then drag it to "Uninstall" or "Remove" at the top of the screen.

Display Settings

Adjust brightness, wallpaper, and other display preferences through the Settings menu.



Image: The Plimpton P60 Pro tablet demonstrating Widevine L1 support, enabling high-definition streaming from platforms like Disney+, Hulu, YouTube, TikTok, and Prime Video.

Camera Usage

The tablet features a 5MP front camera and a 13MP rear camera for photos and videos.

- Open the **Camera** app from the home screen or app drawer.
- Tap the shutter button to take a photo or switch to video mode to record.
- Use the camera toggle to switch between front and rear cameras.

Front & Rear Cameras

Capture Every Exciting Moment!



5.0 MP
Front Cameras



13.0 MP
Rear Cameras



Image: A close-up view of the Plimpton P60 Pro tablet's rear camera module, highlighting its 5.0 MP front camera and 13.0 MP rear camera capabilities.

Storage Management

Your tablet comes with 128GB of internal storage, expandable up to 1TB via a TF (microSD) card.

- To insert a TF card, locate the SD card slot on the side of the tablet.
- Gently insert the card until it clicks into place.
- Manage storage and move files via the **Files** app or Settings > Storage.

Large Capacity Memory

12(4+8)GB RAM + 128GB ROM Support expansion of 1TB



Image: The Plimpton P60 Pro tablet showcasing its large capacity memory, featuring 12GB (4+8) RAM and 128GB ROM, with support for 1TB expansion via TF card.

Google Kids Space

The tablet comes with pre-installed Google Kids Space, offering a safe and engaging environment for children with curated apps, books, and videos. Family Link allows parents to manage content and screen time.



Pre-installed Kids Space

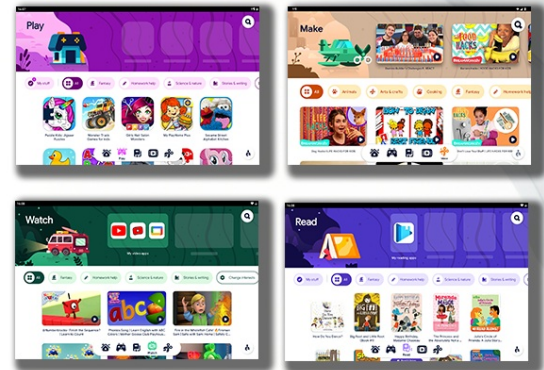


Image: A family using the Plimpton P60 Pro tablet, demonstrating the pre-installed Google Kids Space interface with various educational and entertainment apps for children.

Official Product Video

Watch the official product video for a visual guide on the Plimpton P60 Pro tablet's features and capabilities.

Your browser does not support the video tag.

Video: "Newest Android 14 Tablets P60 Pro" - An official video from the seller showcasing the tablet's design, features, and user interface, including display clarity, camera functions, and gaming performance.

MAINTENANCE

Battery Care

The Plimpton P60 Pro is equipped with a 7000mAh battery. To maximize battery life:

- Avoid extreme temperatures.
- Charge the tablet using the provided USB adapter and USB-C cable.
- Do not let the battery completely drain frequently.
- Unplug the charger once the battery is full.

7000mAh

Power that Keeps Up!



1.8m
Charging Cable



Type-C
Charging

24H Standby

12H Read

6H Video

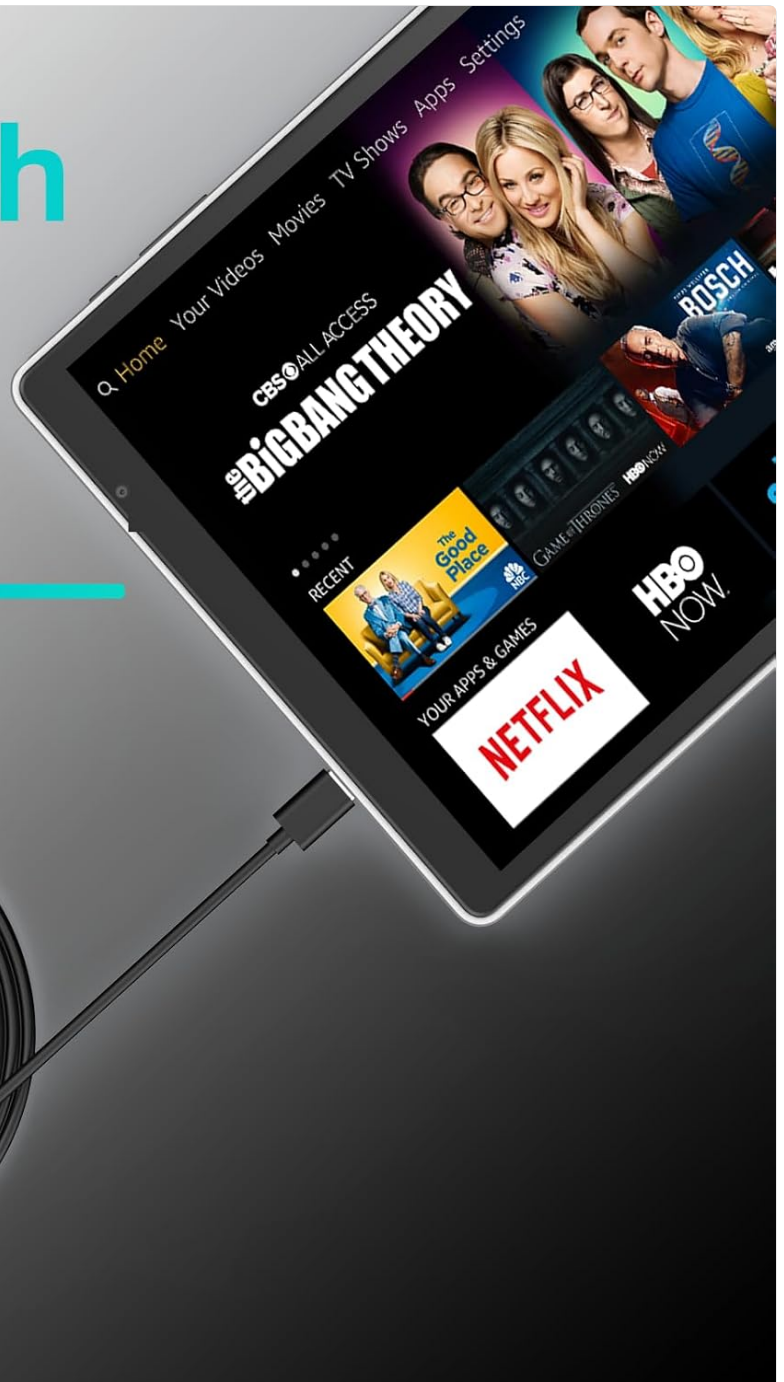


Image: An illustration highlighting the 7000mAh battery capacity of the Plimpton P60 Pro tablet, along with its 1.8m Type-C charging cable, indicating long standby, reading, and video playback times.

Cleaning Your Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials.

TROUBLESHOOTING

Issue	Possible Solution
Tablet does not power on.	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
Screen is unresponsive.	Perform a forced restart by holding the Power button for 10-15 seconds.

Issue	Possible Solution
Wi-Fi connection issues.	Restart your Wi-Fi router. On the tablet, go to Settings > Network & internet > Wi-Fi, forget the network, and reconnect.
Apps are crashing or freezing.	Clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). If the issue persists, uninstall and reinstall the app.
Slow performance.	Close unused apps, clear cache, or consider performing a factory reset (backup data first).

SPECIFICATIONS

Feature	Detail
Model	P60 Pro
Operating System	Android 14
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 Pixels (HD IPS)
Processor	8-Core Allwinner Processor
RAM	12GB (4GB + 8GB Expansion)
Internal Storage	128GB ROM
Expandable Storage	Up to 1TB via TF Card (not included)
Rear Camera	13MP
Front Camera	5MP
Battery Capacity	7000mAh
Wireless Connectivity	Wi-Fi 6 (802.11ax), Bluetooth
Dimensions (LxWxH)	9.5 x 6.32 x 0.32 inches
Item Weight	2.13 pounds
Color	Light gray

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your product packaging or visit the official Plimpton website. Plimpton offers dedicated customer service to assist with any product-related inquiries or issues.

- **Customer Service:** Contact information can be found on the Plimpton brand store page or the included quick guide.
- **Online Resources:** Check the Plimpton website for FAQs, updated drivers, and additional support materials.



Image: An illustration representing Plimpton's customer support, indicating 24-hour quick response, 365-day free returns for quality problems, and 2 years of lifetime after-sales technical service.

© 2025 Plimpton. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

