

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Blusafe](#) /

› [Blusafe Contour V Smart Lock Instruction Manual](#)

Blusafe CT01

Blusafe Contour V Smart Lock Instruction Manual

Models: CT01, CT001

1. INTRODUCTION

This manual provides comprehensive instructions for the installation, setup, operation, and maintenance of your Blusafe Contour V Smart Lock. Please read this manual thoroughly before installation and use to ensure proper function and security.

The Blusafe Contour V Smart Lock offers multiple unlocking methods including biometric fingerprint recognition, passcodes, RFID keycards, mechanical keys, and app control. It features an auto-lock function, anti-prying alarm, and a doorbell camera for enhanced security and convenience.

2. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 1 x External Panel
- 1 x Internal Panel
- 1 x Mounting Plate
- 1 x Latch
- 1 x Strike Plate
- 1 x Strike Box
- 3 x Mechanical Keys
- 2 x RFID Keycards
- 1 x Screwdriver
- 1 x USB Power Cable
- 1 x Gateway
- 1 x Instruction Manual
- Various Screws (ST 3.9 x 20mm, M4 x 35mm, M4 x 50mm, M4 x 10mm)
- 1 x Screw Pillar

Package Contents



Figure 1: All components included in the Blusafe Contour V Smart Lock package.

3. SPECIFICATIONS

Feature	Detail
Brand	Blusafe
Model Name	CT01
Item Model Number	CT001
Lock Type	Contour V
Material	Zinc Alloy
Dimensions (L x W x H)	7.64 x 6.65 x 9.33 inches
Item Weight	6.78 pounds (3.08 Kilograms)
Special Features	Auto-Lock, Biometric Fingerprint Sensor, Doorbell Camera, Keyless Entry
Control Method	Remote (App), Touch (Keypad), Fingerprint, Keycard, Mechanical Key
Fingerprint Capacity	Up to 100
Power Source	8 AA Batteries (not included)
Emergency Power	Micro-USB (5V power bank)
Door Thickness Compatibility	1-2/5 inch to 2-1/8 inch (35-54 mm)
Backset Compatibility	2-3/8 inch or 2-3/4 inch (60 mm or 70 mm)
Weather Protection	IP65 Waterproof, -4 to 140°F Operating Temperatures

4. INSTALLATION

The Blusafe Contour V Smart Lock is designed for easy installation on both right-hand and left-hand doors. A screwdriver is the primary tool required. Ensure to check your door's orientation and dimensions before starting.

4.1 Door Compatibility

This lock fits most standard residential doors with a thickness between 1-2/5 inches and 2-1/8 inches (35-54 mm). The backset should be 2-3/8 inches or 2-3/4 inches (60 mm or 70 mm). The minimum width of the installable area is 98mm.



4.2 Handle Reversal (if needed)

The handle can be reversed to accommodate your door's opening direction. Follow the steps below if your handle orientation needs adjustment:

1. Rotate the handle.
2. Remove the screws.
3. Rotate the spindle.
4. Install the screws.

Support Handle Reversal



Figure 3: Steps for reversing the handle orientation.

4.3 General Installation Steps

For detailed, step-by-step visual guidance on installation, please refer to the official setup video provided by Blusafe. It is highly recommended to follow the instructions carefully to avoid any issues.

Video 1: Official Blusafe Contour V Smart Lock setup and installation guide. This video demonstrates the physical installation process of the smart lock on a door.

5. INITIAL SETUP AND USER MANAGEMENT

After physical installation, you will need to configure the lock's settings and add users. The lock supports up to 100 fingerprints and 300 users.

5.1 Function Keys

- *: Cancel
- : Confirm

5.2 Sleep Mode and Wakeup

- **Wake Up:** Touch the (bell icon) or swipe your hand across the front of the lock to activate the keypad.
- **Sleep Mode:** Press * twice.

5.3 Initializing the Lock (First Time Use)

For initial setup, any fingerprint, keycard, or passcode can be used to set up the first administrator. This process is crucial for establishing the primary access credentials.

5.4 Adding an Administrator

To add an administrator (fingerprint, keycard, or passcode):

1. Wake up the keypad.
2. Press * + + registered admin fingerprint/keycard/passcode + .
3. Press 1.
4. Press 1 again.
5. Add the new fingerprint, keycard, or passcode as instructed by the lock's voice prompts.

5.5 Removing an Administrator

To remove an administrator:

1. Wake up the keypad.
2. Press * + + registered admin fingerprint/keycard/passcode + .
3. Press 1.
4. Press 2.
5. Enter the user ID (e.g., 001) + .

5.6 Adding a User

To add a regular user (fingerprint, keycard, or passcode):

1. Wake up the keypad.
2. Press * + + registered admin fingerprint/keycard/passcode + .
3. Press 2.
4. Press 1.
5. Add the new fingerprint, keycard, or passcode as instructed by the lock's voice prompts.

5.7 Removing a User

To remove a user:

1. Wake up the keypad.
2. Press * + + registered admin fingerprint/keycard/passcode + .

3. Press **2**.
4. Press **2** again.
5. Enter the user ID + .

For a visual guide on adding/removing users and initial fingerprint settings, please watch the following video:

Video 2: Blusafe Contour V Smart Lock guide on adding or removing passwords, fingerprints, and keycards.

6. OPERATING INSTRUCTIONS

The Blusafe Contour V Smart Lock offers multiple convenient ways to unlock your door.

6.1 Unlocking Methods

- **Fingerprint:** Place your registered finger on the sensor. The lock will unlock in approximately 0.5 seconds.
- **Passcode:** Enter your registered 6-8 digit passcode on the keypad followed by .
- **Keycard:** Swipe your registered RFID keycard across the card reader area.
- **Mechanical Key:** Insert the mechanical key into the hidden keyhole and turn to unlock. This is a backup method for emergencies.
- **Mobile App:** Use the dedicated Blusafe app to remotely unlock the door. This function is passively triggered by someone pressing the doorbell on the smart lock.

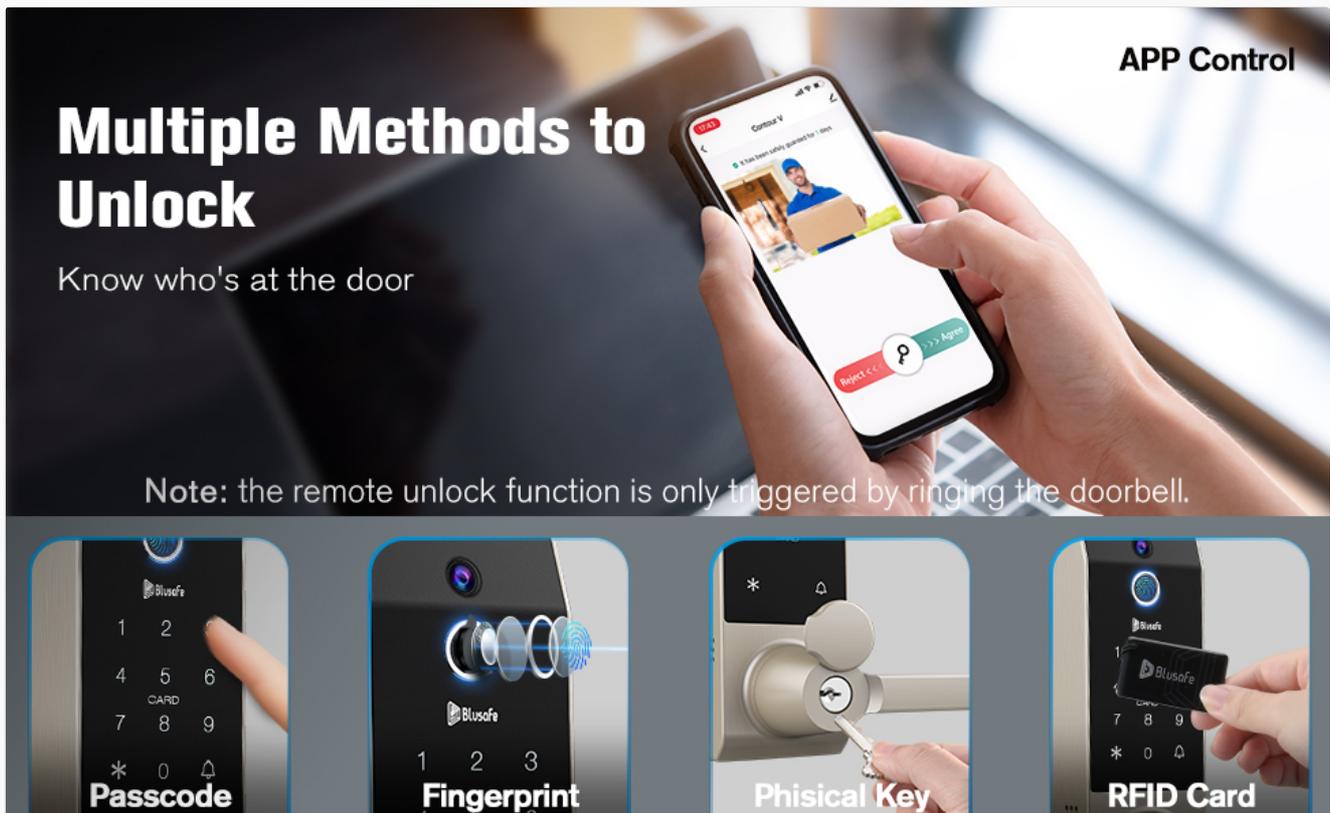


Figure 4: Multiple methods to unlock the Blusafe Contour V Smart Lock.

6.2 Auto-Lock Function

The smart lock automatically locks when the door is closed, eliminating the need for manual operation or setup. This feature provides continuous security.



Figure 5: The convenient auto-lock feature.

6.3 Anti-Peeking Passcode

As a security feature, you can add random numbers before or after your valid passcode. The lock will still unlock as long as the correct passcode sequence is embedded within the entered numbers. For example, if your passcode is "909090" and you enter "216909090876", the lock will open.



Figure 6: Anti-peeping password for enhanced security.

6.4 Passage Mode Setup

To set up Passage Mode:

1. Wake up the keypad.
2. Press * + + registered admin fingerprint/keycard/passcode + .
3. Press **3**.
4. Press **3** again.

Once turned on, use a registered fingerprint, passcode, or card to unlock the lock, and Passage Mode will remain turned on. The lock will remain unlocked until Passage Mode is manually deactivated.

7. MAINTENANCE

7.1 Battery Replacement and Low Power Warning

The Blusafe Smart Lock requires 8 AA batteries (not included) which can provide at least 6 months of run time, depending on usage frequency and battery quality. A low power voice alert is activated when the battery level falls

below 20%. Please change all batteries immediately when you hear this warning.

7.2 Emergency Charging (Backup Power)

In the event of a power failure or completely drained batteries, the lock remains locked. You can use a 5V power bank to connect to the Micro-USB port located at the bottom of the external panel for emergency power. After unlocking the lock, replace the batteries immediately.



Figure 7: Emergency charging via Micro-USB port.

7.3 Weather Protection

The lock is designed with IP65 waterproof rating and can operate in temperatures ranging from -4°F to 140°F, ensuring durability in various weather conditions.

8. TROUBLESHOOTING

8.1 System Lockout

To prevent unauthorized access, the system will lock for 90 seconds if:

- An incorrect fingerprint is used 15 times within any 5-minute period.
- An incorrect passcode is input 5 times within any 5-minute period.
- An incorrect keycard is used 5 times within any 5-minute period.

8.2 System Recovery

Using a mobile power bank to power the lock will automatically trigger a system recovery. The lock system will be recovered to a previous workable version once triggered.

8.3 Factory Reset

Performing a factory reset will clear all user data and return the lock to its default settings. There are two methods:

1. Method 1 (via Keypad):

Wake up keypad.

Press * + + registered admin fingerprint/keycard/passcode + .

Press 4.

Press 1 + .

2. Method 2 (via SET button):

Open the internal panel to access the battery compartment.

Press and hold the "SET" button for 5 seconds.

8.4 Anti-Prying Function

If the anti-prying function is activated ("ON"), the lock will trigger an alarm when a physical attack is detected. To turn off the alarm, use a registered fingerprint/keycard or power off the lock. The anti-prying function is set to "OFF" by default; please activate it after installation if desired.

8.5 Doorbell Function

When someone presses the doorbell on the smart lock, it takes a picture and sends a notification to your phone. You can then send a one-time code or slide to unlock the door via the app. Note that the camera does not have video call or recording functions, and the lock is not compatible with smart home systems like Alexa or Google Assistant.

9. WARRANTY AND SUPPORT

The Blusafe Contour V Smart Lock is backed by professional customer support with a 1-year warranty and technical assistance. For any inquiries or issues, please contact our 24/7 expert service to ensure a worry-free experience from installation to long-term use.

10. IMPORTANT NOTES

- Always ensure correct door orientation and dimensions are verified before installation.
- Battery runtime is dependent on the frequency of use and the quality of the batteries.
- The doorbell camera function sends still images and notifications; it does not support live video calls or recording.
- This smart lock is not compatible with smart home systems such as Alexa and Google Assistant.