

[Manuals.plus](#) /

› [JISULIFE](#) /

› JISULIFE Portable Handheld Fan LIFE9 User Manual

JISULIFE LIFE9

JISULIFE Portable Handheld Fan LIFE9 User Manual

Models: LIFE9 5000 mAh Black & LIFE9 3600 mAh Pink

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your JISULIFE Portable Handheld Fans, including the LIFE9 5000 mAh Black and LIFE9 3600 mAh Pink models. These compact and powerful personal fans are designed for portability and provide strong airflow for various uses, from daily commuting to outdoor activities.

Key features include a high-speed three-phase brushless motor, a 9-blade design for powerful wind, and multiple speed adjustments. Both models are rechargeable via USB, making them convenient for travel and everyday use.



Image: The JISULIFE LIFE9 portable handheld fans in black and pink, showcasing their compact design.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- JISULIFE Portable Handheld Fan (LIFE9 Black or Pink)
- USB Charging Cable (Type-C)
- Lanyard
- User Manual (this document)

SETUP

Charging the Fan

Before first use, fully charge the fan. The fan is equipped with a built-in rechargeable battery (5000 mAh for the black model, 3600 mAh for the pink model).

1. Locate the Type-C charging port on the fan.
2. Connect the provided USB Type-C cable to the fan's charging port.
3. Connect the other end of the USB cable to a compatible USB power source (e.g., computer USB port, wall adapter, power bank).
4. The charging indicator light will illuminate during charging and turn off or change color when fully

charged.

Charging time is approximately 3.5-4 hours for the 5000 mAh model and slightly less for the 3600 mAh model.



Built-in 5000mAh Rechargeable Battery

5000mAh
Battery

4.5-22hours
Working Time

3.5-4hours
Charging Time

10m/s
Maximum Wind Force

Image: Internal view of the fan highlighting battery capacity, working time, charging time, and wind force.

Attaching the Lanyard

For convenient carrying, attach the included lanyard to the designated loop on the fan's body.

OPERATING INSTRUCTIONS

Power On/Off

- To turn on the fan, press and hold the power button for 2 seconds. The fan will start at Speed 1.
- To turn off the fan, press and hold the power button for 2 seconds from any speed setting.

Adjusting Wind Speed

The fan features 5 adjustable wind speeds. Once the fan is on, short press the power button to cycle through the speeds:

- **Speed 1:** Soft Wind (up to 22 hours for 5000mAh, 12 hours for 3600mAh)
- **Speed 2:** Gentle Wind (up to 18 hours for 5000mAh, 7 hours for 3600mAh)
- **Speed 3:** Cool Wind (up to 14 hours for 5000mAh, 5 hours for 3600mAh)
- **Speed 4:** Refreshing Wind (up to 10 hours for 5000mAh, 3 hours for 3600mAh)
- **Speed 5:** Powerful Wind (up to 4.5 hours for 5000mAh, 2.5 hours for 3600mAh)

5 Wind Speeds One button control

Adjust the appropriate gear and wind speed

	Soft Wind
Speed 1	22H
	Gentle Wind
Speed 2	18H
	Cool Wind
Speed 3	14H
	Refreshing Wind
Speed 4	10H
	Powerful Wind
Speed 5	4.5H

Image: Wind speed settings and battery life for the black 5000 mAh fan.

5 Wind Speeds One button control

Adjust the appropriate gear and wind speed

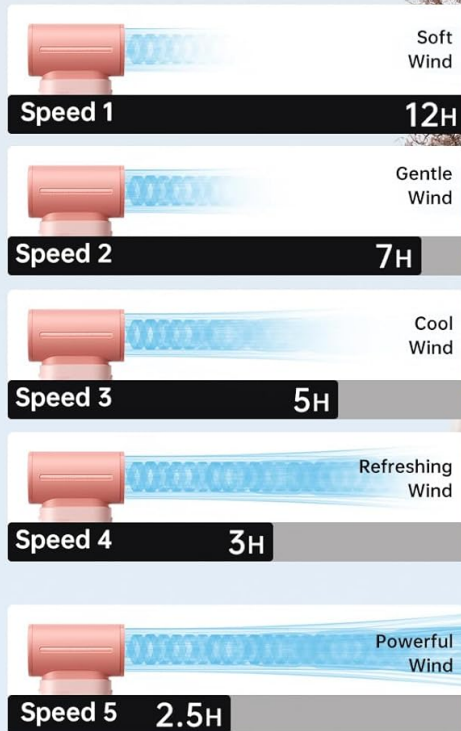


Image: Wind speed settings and battery life for the pink 3600 mAh fan.

Safety Lock Design

The fan features a safety lock design to prevent accidental activation. Ensure the safety lock is disengaged before operating the fan. Refer to the product details for the exact mechanism, typically a small switch or button.

Cool Experience Comes from Details



Image: Detailed view of the fan's features, including the safety lock.

MAINTENANCE

Cleaning

- Ensure the fan is turned off and unplugged before cleaning.
- Wipe the exterior of the fan with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or immerse the fan in water.
- For dust accumulation on the fan blades, use a soft brush or compressed air to gently remove it. Avoid inserting objects into the fan grille.

Storage

When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to charge the fan every 3 months to maintain battery health.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted. Safety lock is engaged.	Charge the fan fully. Disengage the safety lock.
Weak airflow.	Low battery. Fan blades are dirty.	Recharge the fan. Clean the fan blades as per maintenance instructions.
Fan stops unexpectedly.	Low battery. Overheating protection activated.	Recharge the fan. Allow the fan to cool down before restarting.
Charging indicator not working.	Cable or power source issue. Fan already fully charged.	Try a different USB cable or power source. The light may turn off when fully charged.

If the problem persists after trying these solutions, please contact JISULIFE customer support.

SPECIFICATIONS

Feature	Description
Brand	JISULIFE
Model Name	LIFE9
Electric Fan Design	Wearable Fan / Handheld Fan
Power Source	Battery Powered (Rechargeable)
Battery Capacity (Black Model)	5000 mAh
Battery Capacity (Pink Model)	3600 mAh
Max Wind Speed	10 m/s
Motor Speed	Up to 40000 RPM
Number of Speed Levels	5
Control Method	Touch Button
Charging Port	USB Type-C
Material	ABS (as per image details)
Weight	Approx. 170g (as per feature bullets)

WARRANTY AND SUPPORT

JISULIFE products come with a standard manufacturer's warranty. Please refer to the warranty card included with your product or visit the official JISULIFE website for detailed warranty terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact JISULIFE customer service through their official channels. You can find more information and contact details on the [JISULIFE Brand Store on Amazon](#).

