

[Manuals.plus](#) /

› [OUKANING](#) /

› OUKANING Low Profile Ceiling Fan with Light and Remote User Manual

OUKANING Fandelier

OUKANING Low Profile Ceiling Fan with Light and Remote User Manual

Model: Fandelier | Brand: OUKANING

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your OUKANING Low Profile Ceiling Fan with Light and Remote. Please read this manual thoroughly before installation and use to ensure safe and efficient operation. Keep this manual for future reference.



Image: The OUKANING Low Profile Ceiling Fan with Light and Remote, showcasing its compact design and integrated light fixture.

SAFETY INFORMATION

Important Safety Instructions:

- Always disconnect power at the main circuit breaker before installation, cleaning, or maintenance.
- Installation must be performed by a qualified electrician or a person with sufficient electrical knowledge.
- Ensure the mounting structure can support the weight of the fan.
- Do not insert objects into the fan blades while the fan is operating.
- This product is designed for indoor use only.
- Use only the remote control provided with the fan.
- Keep children away from the fan during operation.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 1 x OUKANING Low Profile Ceiling Fan with Light
- 1 x Remote Control
- 1 x English User Manual
- All necessary mounting accessories (brackets, screws, etc.)

SPECIFICATIONS

Feature	Detail
Brand	OUKANING
Model Name	Fandelier
Power Rating	36-48W
Fan Sound Power Level	33 / 45 / 54 dB(A)
Max. Fan Flow Rate	25 m³/min
Standby Power Consumption	0.9 W
Max. Air Velocity	0.7 / 1.8 / 2.8 m/s
Fixture Height	10.6 inches (26.9 cm)
Fixture Width	23 inches (58.4 cm)
Bulb Type	Integrated LED
Dimmable	Yes
Color Temperature	3000K (Warm), 4500K (Neutral), 6000K (White)
Voltage	AC110-120V
Control Method	Remote Control
Material	Acrylic + Metal
Number of Blades	5
Number of Fan Speeds	6



About this item

Voltage: Ac110-120v

Wattage: 36w

Bulb type: Led

Color temperature: 3000-4500-6000k

The 6 speeds

Three color temperatures

Reversible Motor

Remote control: Yes

Image: Technical diagram illustrating the dimensions of the ceiling fan, including height (10.6 inches), width (23 inches), and light fixture depth (2 inches).

SETUP AND INSTALLATION

The OUKANING ceiling fan is designed for surface mounting and comes with all necessary hardware and detailed instructions for a straightforward installation process.

1. **Preparation:** Before starting, ensure the power supply to the installation area is turned off at the circuit breaker.
2. **Mounting Bracket Installation:** Secure the provided mounting bracket to the ceiling junction box. Ensure the bracket is firmly attached and can support the fan's weight.
3. **Wiring Connections:** Connect the fan's electrical wires to your household wiring according to the wiring diagram in the included English manual. Pay close attention to live, neutral, and ground connections.
4. **Fan Body Attachment:** Carefully lift the fan body and attach it to the mounting bracket. Secure it with the provided screws.
5. **Blade Installation:** Attach the five fan blades to the motor housing. Ensure they are securely fastened.
6. **Light Cover Installation:** Install the LED light cover by twisting or snapping it into place.

7. **Power Restoration:** Once all connections are secure and the fan is fully assembled, restore power at the circuit breaker.

Refer to the detailed installation instructions included in your package for specific diagrams and steps.

OPERATING INSTRUCTIONS

Your OUKANING ceiling fan is controlled by the included remote control, offering convenient access to all functions.



Image: Diagram of the remote control, showing buttons for power, light on/off, fan direction, fan speed (1-6), fan timing (1H, 2H, 4H), and an LED indicator.

Remote Control Functions:

- **ALL OFF:** Turns off both the light and the fan.
- **LIGHT ON/OFF:** Toggles the light on or off.
- **Light Color Temperature Adjustment:** Cycle through 3000K (Warm), 4500K (Neutral), and 6000K (White) by

pressing the LIGHT ON/OFF button repeatedly when the light is on. The light is also dimmable.

- **F (Forward):** Sets the fan to rotate clockwise, typically for downdraft (cooling) in warmer weather.
- **R (Reverse):** Sets the fan to rotate anticlockwise, typically for updraft (circulating warm air) in cooler weather.
- **Wind Speed Adjustment (1-6):** Select from 6 fan speeds, where 1 is the lowest and 6 is the highest.
- **FAN/OFF:** Stops the fan from turning.
- **Fan Timing (1H, 2H, 4H):** Sets a timer for the fan to automatically turn off after 1, 2, or 4 hours.
- **LED Indicator:** Illuminates to show remote control activity.



White light



Neutral light



Warm light

Image: Visual representation of the three adjustable light color temperatures: White light (6000K), Neutral light (4500K), and Warm light (3000K).

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your ceiling fan.

- **Cleaning:** The fan is designed for easy removal and cleaning. Before cleaning, always ensure the power supply to the fan is cut off at the main circuit breaker. Use a soft, damp cloth to wipe down the fan blades and light fixture.

Avoid using harsh chemicals or abrasive cleaners, as they may damage the finish.

- **Blade Balance:** If the fan wobbles, check that all blade screws are tightened and that the blades are not bent or damaged.
- **Light Source:** The LED light source is integrated and designed for long life. Do not attempt to replace individual LEDs.

TROUBLESHOOTING

If you encounter issues with your OUKANING ceiling fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not operate	No power supply; Loose wiring; Remote control battery dead.	Check circuit breaker; Verify all wire connections are secure; Replace remote control batteries (AAA 1.5V).
Light does not turn on	No power to light; Loose wiring; LED module failure.	Check power supply; Ensure light wiring is secure; Contact customer support if LED module is faulty.
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket.	Tighten all blade screws; Check for bent or damaged blades; Ensure mounting bracket is securely fastened to the ceiling.
Remote control not working	Dead batteries; Remote not paired (if applicable); Obstruction.	Replace batteries; Refer to manual for pairing instructions (if any); Ensure no obstructions between remote and fan receiver.
Fan makes unusual noise	Loose screws; Motor issue; Obstruction.	Check and tighten all screws; Ensure nothing is obstructing the blades; Contact customer support if motor noise persists.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in the original product packaging or visit the official OUKANING website. Keep your purchase receipt as proof of purchase for any warranty claims. For further assistance, you may contact OUKANING customer service through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question