

[manuals.plus](#) /› [Timex](#) /› [Timex TW2Y01900 Analog Chronograph Watch User Manual](#)

Timex TW2Y01900

Timex TW2Y01900 Analog Chronograph Watch User Manual

Model: TW2Y01900

INTRODUCTION

This user manual provides detailed instructions for the Timex TW2Y01900 Analog Chronograph Watch. Please read this manual thoroughly to understand the functions and proper operation of your watch. Keep this manual for future reference.

PRODUCT OVERVIEW

The Timex TW2Y01900 is an analog chronograph watch designed for men, featuring a robust construction and multiple timekeeping functions. Key features include a stopwatch, 24-hour display, luminous hands for visibility in low light, and a tachymeter scale.

Watch Components

- **Crown:** Used for setting time and date.
- **Pushers:** Operate the chronograph functions (start, stop, reset).
- **Main Dial:** Displays hours, minutes, and seconds.
- **Subdials:** Indicate chronograph seconds, minutes, and 24-hour time.
- **Tachymeter Scale:** Located on the bezel, used for measuring speed over a known distance.
- **Silicone Strap:** Durable and comfortable black silicone strap with a buckle clasp.



Front view of the Timex TW2Y01900 watch, showing the main dial, chronograph subdials, and tachymeter scale on the bezel.



Side view of the watch, illustrating the crown and pushers used for various functions.



Rear view of the watch case, displaying the model number (TW2Y01900), brand, and water resistance rating.

SETUP

Setting the Time

1. Pull the crown out to position 2 (the outermost position).
2. Rotate the crown to move the hour and minute hands to the desired time.
3. Push the crown back into position 1 (normal operating position).

Setting the Date (if applicable)

This model primarily focuses on chronograph functions. If a date window is present, pull the crown out to position 1 (middle position) and rotate it to adjust the date. Push the crown back in once set.

Chronograph Hand Alignment

If the chronograph hands are not aligned to the zero position, follow these steps:

1. Pull the crown out to position 2.
2. Press the upper pusher to advance the chronograph seconds hand.
3. Press the lower pusher to advance the chronograph minute hand.
4. Once all chronograph hands are aligned to zero, push the crown back into position 1.

OPERATING THE CHRONOGRAPH

The chronograph function allows you to measure elapsed time.

1. **Start:** Press the upper pusher to start the chronograph. The chronograph seconds hand will begin to move.
2. **Stop:** Press the upper pusher again to stop the chronograph. The elapsed time will be displayed on the subdials.
3. **Reset:** With the chronograph stopped, press the lower pusher to reset all chronograph hands to their zero positions.
4. **Split Time (if applicable):** Some chronographs allow for split time measurement. Consult the full Timex manual for advanced features if needed.

Using the Tachymeter

The tachymeter scale on the bezel can be used to measure speed based on travel time over a known distance (e.g., 1 kilometer or 1 mile).

1. Start the chronograph at the beginning of the measured distance.
2. Stop the chronograph when you reach the end of the distance.
3. The number on the tachymeter scale corresponding to the chronograph seconds hand indicates the average speed per hour.

MAINTENANCE

Water Resistance

Your Timex TW2Y01900 watch is water resistant up to 5 bars (5 ATM). This means it is suitable for everyday use, showering, and short periods of swimming in shallow water. It is **not** suitable for diving, snorkeling, or high-impact water sports. Do not operate the crown or pushers when the watch is wet or submerged.

Cleaning

- Wipe the watch case and strap with a soft, damp cloth.
- For the silicone strap, mild soap and water can be used, then rinse thoroughly and dry.
- Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish.

Battery Replacement

The watch uses one 12V battery. When the watch stops or the hands move erratically, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

Storage

When not wearing your watch, store it in a cool, dry place away from direct sunlight and extreme temperatures. Keep it away from strong magnetic fields, which can affect timekeeping accuracy.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Dead battery	Replace battery (professional service recommended).
Chronograph hands not resetting to zero	Misalignment	Follow "Chronograph Hand Alignment" steps in the Setup section.
Time is inaccurate	Low battery, exposure to strong magnetic fields, or impact	Replace battery, keep away from magnets, or have the watch inspected by a professional.

If problems persist, please contact Timex customer support.

SPECIFICATIONS

Model Number	TW2Y01900
Brand	Timex
Movement	Analog Quartz Chronograph
Case Diameter	44 mm
Case Height	11.5 mm
Case Color	Bronze (as per product description)
Dial Color	Black
Strap Material	Silicone
Strap Length	21 cm
Strap Width	21 mm
Water Resistance	5 ATM (50 meters / 165 feet)
Weight	95 grams
Battery Type	1 x 12V (included)
Country of Origin	Philippines

WARRANTY AND SUPPORT

Warranty Information

Your Timex TW2Y01900 watch comes with a **2-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from

accidents, improper use, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, service, or warranty claims, please contact Timex customer service. You can find contact information on the official Timex website or through the retailer where you purchased the watch.

Online Resources: For additional information and support, visit the official [Timex website](#).