

[manuals.plus](#) /› [EasySMX](#) /› [EasySMX D05 and X05 Controller Combo User Manual](#)

## EasySMX D05, X05

# EasySMX D05 and X05 Controller Combo User Manual

Comprehensive guide for your EasySMX wireless game controllers.

## 1. INTRODUCTION

Thank you for choosing the EasySMX D05 and X05 Controller Combo. This manual provides detailed instructions on how to set up, operate, maintain, and troubleshoot your new wireless game controllers. Please read this manual carefully before use to ensure optimal performance and longevity of your devices.

## 2. PACKAGE CONTENTS

Upon unboxing, please verify that all items listed below are present and in good condition:

- 1 x EasySMX D05 Wireless Controller (Black)
- 1 x Charging Dock for D05 Controller
- 1 x EasySMX X05 Wireless Controller (White)
- 1 x USB Charging Cable (for X05, or general charging)
- 1 x User Manual (this document)

## 3. PRODUCT OVERVIEW

Familiarize yourself with the components of your EasySMX controllers.



Image: The EasySMX D05 controller (black, with charging dock) and the EasySMX X05 controller (white). Both controllers feature joysticks, directional pads, action buttons, and shoulder buttons. The D05 has a transparent casing revealing internal components and RGB lighting, while the X05 is solid white with subtle RGB rings around its joysticks.

### 3.1 EasySMX D05 Controller (Black)

The D05 controller is designed for enhanced gaming experience with its advanced features.

- **Hall Sensor Joysticks & Triggers:** Provides precise control and eliminates stick drift.

- **RGB Lighting:** Customizable lighting effects for a personalized look.
- **Charging Dock:** Convenient and stable charging solution.
- **Compatibility:** Works with Windows PC, Android, Steam, and Switch.

### 3.2 EasySMX X05 Controller (White)

The X05 controller offers reliable performance and comfortable gameplay.

- **Hall Effect Joysticks & Trigger:** Ensures accuracy and durability.
- **Turbo Function:** Allows for rapid button presses.
- **Rumble Vibration:** Provides immersive haptic feedback.
- **RGB Lighting:** Subtle lighting around joysticks.
- **Compatibility:** Suitable for PC, Android, and Steam Deck.

## 4. SETUP

---

### 4.1 Charging the Controllers

Before first use, ensure both controllers are fully charged.

- **D05 Controller:** Place the D05 controller onto its dedicated charging dock. Ensure the charging pins align. The indicator light on the controller will show charging status.
- **X05 Controller:** Connect the provided USB charging cable to the X05 controller's charging port and to a USB power source (e.g., computer USB port, USB wall adapter). The indicator light will show charging status.

### 4.2 Connecting to Devices

Both controllers support wireless connectivity via Bluetooth or a 2.4GHz wireless dongle (if included, typically for PC).

Refer to the specific controller's quick start guide for detailed pairing instructions.

#### 1. Bluetooth Pairing:

- Turn on the controller by pressing the Home button.
- Press and hold the Bluetooth pairing button (refer to controller diagram for location) until the indicator light flashes rapidly.
- On your device (PC, Android, Switch), go to Bluetooth settings and search for new devices.
- Select "EasySMX D05" or "EasySMX X05" from the list to pair.
- Once paired, the indicator light will become solid.

#### 2. 2.4GHz Wireless Dongle (PC):

- Plug the 2.4GHz wireless dongle into an available USB port on your PC.
- Turn on the controller. It should automatically connect to the dongle.
- The indicator light on the controller will become solid once connected.

## 5. OPERATING THE CONTROLLERS

---

### 5.1 Button Functions

Both controllers feature standard gamepad layouts. Refer to the diagrams in the quick start guide for specific button mappings. Common buttons include:

- **Left/Right Analog Sticks:** For movement and camera control.

- **D-Pad (Directional Pad):** For precise directional input.
- **Action Buttons (A, B, X, Y):** For in-game actions.
- **Shoulder Buttons (L1/LB, R1/RB) & Triggers (L2/LT, R2/RT):** For various in-game functions.
- **Home Button:** Powers on/off the controller, accesses system menus.
- **Select/Back Button:** Typically for menu navigation.
- **Start/Menu Button:** Typically for pausing or accessing game menus.
- **Turbo Button (X05):** Activates rapid fire for selected buttons.
- **FN Button (D05):** Function button for advanced settings or macros.

## 5.2 Special Features

- **Hall Effect Joysticks & Triggers:** These components use magnetic sensors instead of physical contacts, reducing wear and tear, preventing stick drift, and providing highly accurate input.
- **Rumble Vibration:** The built-in motors provide tactile feedback during gameplay, enhancing immersion. This feature can usually be toggled in game settings.
- **RGB Lighting:** Both controllers feature customizable RGB lighting. Refer to the specific controller's manual or EasySMX software (if available) for instructions on changing lighting modes and colors.
- **Turbo Function (X05):** To activate Turbo, press and hold the Turbo button, then press the action button you wish to apply Turbo to. Repeat the process to deactivate.

## 6. MAINTENANCE

Proper maintenance ensures the longevity of your controllers.

- **Cleaning:** Use a soft, dry cloth to wipe down the controllers. For stubborn dirt, slightly dampen the cloth with water or a mild electronic cleaner. *Do not use harsh chemicals or abrasive materials.*
- **Storage:** Store controllers in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Avoid fully discharging the battery frequently. For long-term storage, charge the battery to about 50% to preserve its health.
- **Charging Dock (D05):** Keep the charging pins on the dock and controller clean and free of debris to ensure proper connection.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller does not turn on.	Low battery.	Charge the controller fully.
Controller does not connect.	Not in pairing mode; out of range; interference.	Ensure controller is in pairing mode. Move closer to the device. Reduce wireless interference. Try re-pairing.
Buttons/Joysticks unresponsive.	Software glitch; physical damage.	Restart the controller and the connected device. Check for firmware updates. If persistent, contact support.
Input lag or disconnection.	Wireless interference; low battery.	Ensure controller is fully charged. Move closer to the device. Avoid obstacles between controller and receiver.

## 8. SPECIFICATIONS

## 8.1 EasySMX D05 Controller

- **Model:** D05
- **Connectivity:** Wireless (Bluetooth, 2.4GHz)
- **Joysticks:** Hall Sensor
- **Triggers:** Hall Sensor
- **Lighting:** RGB
- **Charging:** Via Charging Dock
- **Compatibility:** Windows PC, Android, Steam, Switch

## 8.2 EasySMX X05 Controller

- **Model:** X05
- **Connectivity:** Wireless (Bluetooth)
- **Joysticks:** Hall Effect
- **Triggers:** Hall Effect
- **Lighting:** RGB (around joysticks)
- **Vibration:** Rumble
- **Special Features:** Turbo Function
- **Compatibility:** PC, Android, Steam Deck

## 9. WARRANTY AND SUPPORT

---

EasySMX products typically come with a limited warranty. Please refer to the warranty card included in your package or visit the official EasySMX website for detailed warranty terms and conditions.

For technical support, troubleshooting assistance, or inquiries about replacement parts, please contact EasySMX customer service through their official website or the contact information provided with your purchase. When contacting support, please have your product model (D05, X05) and purchase information ready.

**EasySMX Official Website:** [www.easysmx.com](http://www.easysmx.com)