

EasySMX D05, X05

EasySMX D05 & X05 Controller Combo User Manual

Comprehensive guide for your EasySMX gaming controllers.

1. PRODUCT OVERVIEW

The EasySMX D05 and X05 Controller Combo provides a versatile gaming experience with two distinct controllers. The New D05 Controller includes a charging dock for convenient power management, while the X05 Controller offers robust performance. Both controllers are designed for enhanced gameplay across various platforms, featuring ergonomic designs and responsive controls.



Image: The EasySMX D05 Controller (top) with pink accents and the EasySMX X05 Controller (bottom) with a transparent casing and gold D-pad, shown with its charging dock.

2. PACKAGE CONTENTS

Upon opening your EasySMX D05 & X05 Controller Combo package, please verify that all the following items are present:

- 1 x EasySMX New D05 Controller (Black)

- 1 x Charging Dock for D05 Controller
- 1 x EasySMX X05 Controller (Black)
- 1 x USB Charging Cable (for X05, or as backup for D05)
- 1 x User Manual (this document)

3. SETUP GUIDE

3.1 Initial Charging

Before first use, it is recommended to fully charge both controllers. Connect the D05 Controller to its charging dock, and connect the X05 Controller directly via its USB charging cable to a power source (e.g., console, PC, or USB wall adapter).

3.2 Connecting to Device

The connection method may vary depending on your gaming platform (PC, Switch, Android, etc.). Generally, controllers can be connected via Bluetooth or a USB cable. Refer to your device's pairing instructions and the controller's specific mode switching (if applicable) for successful connection.

- **Bluetooth Pairing:** Press and hold the pairing button on the controller until the indicator lights flash rapidly. Then, search for the controller on your device's Bluetooth settings and select it to pair.
- **Wired Connection:** Connect the controller directly to your device using a compatible USB cable. The controller should be recognized automatically.

4. OPERATING INSTRUCTIONS

4.1 Button Layout and Functions

Both D05 and X05 controllers feature standard gaming controller layouts, including:

- **Analog Sticks:** For precise movement and camera control.
- **D-Pad:** For directional input, often used in menus or for specific game actions.
- **Action Buttons (A, B, X, Y):** For primary in-game actions.
- **Shoulder Buttons (L1/LB, R1/RB) & Triggers (L2/LT, R2/RT):** For various in-game functions like shooting, aiming, or menu navigation.
- **Home/Power Button:** To turn the controller on/off or access system menus.
- **Select/Share/Minus Button:** For secondary functions or sharing content.
- **Start/Options/Plus Button:** For pausing games or accessing options.
- **Special Function Buttons:** Some controllers may have additional buttons like Turbo, Macro, or FN for advanced customization. Refer to specific controller documentation for details.

4.2 LED Indicators

LED indicators on the controllers provide information about connection status, battery level, and player assignment. Consult the specific controller's quick start guide for detailed LED behavior.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your EasySMX controllers.

- **Cleaning:** Use a soft, dry cloth to wipe down the controllers. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the controller. Avoid harsh chemicals or abrasive cleaners.

- **Storage:** Store controllers in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For rechargeable controllers, avoid completely draining the battery frequently. Charge them regularly, even if not in use for extended periods, to maintain battery health.

6. TROUBLESHOOTING

If you encounter issues with your EasySMX controllers, try the following troubleshooting steps:

- **Controller Not Connecting:**
 - Ensure the controller is fully charged.
 - Verify Bluetooth is enabled on your device and the controller is in pairing mode.
 - Try restarting both the controller and your device.
 - If using a wired connection, try a different USB port or cable.
- **Buttons/Sticks Not Responding:**
 - Check for any physical obstructions.
 - Ensure the controller firmware is up to date (if applicable, check EasySMX website).
 - Test the controller on a different game or device to isolate the issue.
- **Charging Issues:**
 - Ensure the charging cable/dock is securely connected.
 - Try a different power source or USB port.
 - Clean the charging contacts on the controller and dock/cable.

If problems persist, please contact EasySMX customer support.

7. SPECIFICATIONS

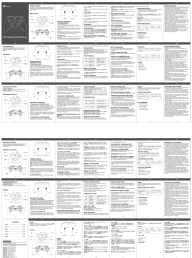

 



Feature	Detail
Product Name	EasySMX D05 & X05 Controller Combo
Model Numbers	D05, X05
Connectivity	Wireless (Bluetooth), Wired (USB)
Power Source	Rechargeable Battery
ASIN	B0F13V91XZ
Date First Available	March 11, 2025

8. WARRANTY AND SUPPORT

EasySMX products typically come with a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included in your product packaging or visit the official EasySMX website. For technical support, troubleshooting assistance, or warranty claims, please contact EasySMX customer service through their official channels.

EasySMX Official US Seller: [A2S9A1C5MFPFUL](#)

Related Documents - D05, X05

	<p>EasySMX D05 Wireless Controller User Manual</p> <p>Comprehensive user manual for the EasySMX D05 wireless gaming controller, covering setup, features, troubleshooting, and specifications for PC and other platforms.</p>
	<p>EasySMX-X05 Wireless Controller User Manual</p> <p>Comprehensive user manual for the EasySMX-X05 Wireless Controller, detailing setup, features, specifications, and troubleshooting for PC, Switch, Android, and iOS devices.</p>
	<p>EasySMX X05 Wireless Controller User Manual</p> <p>Comprehensive user manual for the EasySMX X05 Wireless Game Controller, detailing connection operations (2.4G, Bluetooth, Switch), button layout, turbo settings, RGB light adjustments, vibration control, calibration, charging indicators, and product specifications. Compatible with PC, Switch, Android, and iOS (MFI games).</p>
	<p>EasySMX D05 Gaming Controller Manual and Features</p> <p>Comprehensive guide to the EasySMX D05 Gaming Controller, covering product overview, connection instructions for 2.4GHz wireless, Bluetooth, and Switch modes, button layout, programming functions, RGB lighting, vibration adjustments, and safety information.</p>
	<p>EasySMX T37 Wireless Controller User Manual</p> <p>User manual for the EasySMX T37 Wireless Controller, detailing connection methods, features, troubleshooting, and specifications for use with Nintendo Switch, Android, and Windows.</p>
	<p>EasySMX M15 Mobile Gaming Controller User Manual</p> <p>User manual for the EasySMX M15 mobile gaming controller, detailing its button layout, product specifications, connection methods (Type-C and Bluetooth), vibration, turbo, programmable functions, and safety information.</p>

