

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Samsung](#) /

> [SAMSUNG 55-Inch Crystal UHD U7900F 4K Smart TV and HW-LS60D/ZC Music Frame Wireless Speaker User Manual](#)

Samsung U7900F, HW-LS60D/ZC

SAMSUNG 55-Inch Crystal UHD U7900F 4K Smart TV + HW-LS60D/ZC Music Frame Wireless Speaker User Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your new SAMSUNG 55-Inch Crystal UHD U7900F 4K Smart TV and SAMSUNG HW-LS60D/ZC Music Frame Wireless Speaker. Please read this manual thoroughly before operating the devices and retain it for future reference.

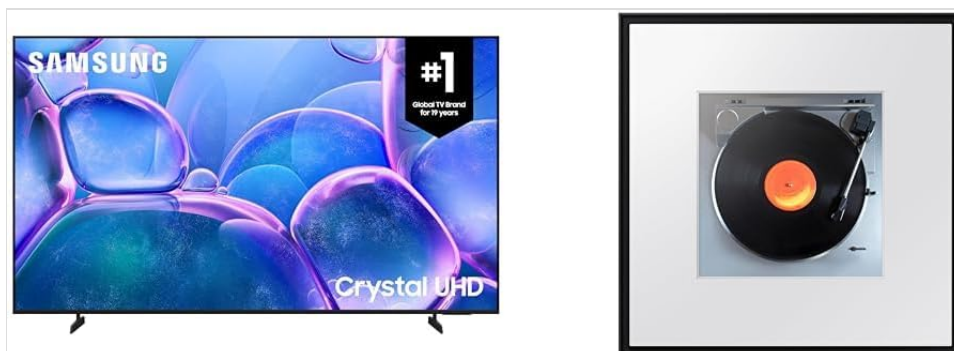


Image 1.1: The SAMSUNG 55-Inch Crystal UHD U7900F 4K Smart TV and the SAMSUNG HW-LS60D/ZC Music Frame Wireless Speaker.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not expose the TV or speaker to rain or moisture.
- Do not open the casing of either device. Refer all servicing to qualified personnel.
- Ensure proper ventilation for the TV. Do not block ventilation openings.
- Use only the power cords supplied with the devices.
- Keep the devices away from heat sources and direct sunlight.
- Handle the TV screen with care, as it is fragile.

3. PACKAGE CONTENTS

Verify that all items are included in your package. If any items are missing or damaged, contact your retailer.

- SAMSUNG 55-Inch Crystal UHD U7900F 4K Smart TV
- SAMSUNG HW-LS60D/ZC Music Frame Wireless Speaker
- Remote Control (for TV)
- Power Cords (for TV and Speaker)
- TV Stand Components (if applicable)
- User Manuals & Warranty Information

4. SETUP

4.1. SAMSUNG 55-Inch Crystal UHD U7900F 4K Smart TV Setup

1. **Unpacking:** Carefully remove the TV from its packaging. It is recommended to have two people for this step due to the size and fragility of the screen.
2. **Placement:** Choose a stable, flat surface for table mounting or a suitable wall for wall mounting. Ensure adequate space for ventilation around the TV.
3. **Stand/Wall Mount Installation:**
 - **Table Mount:** Attach the provided stand components to the TV according to the separate stand installation guide.
 - **Wall Mount:** If wall mounting, use a VESA-compatible wall mount kit (sold separately) and follow its instructions.
4. **Connecting Power:** Connect the TV's power cord to the TV and then to a wall outlet.
5. **Connecting External Devices:** Connect your external devices (e.g., cable box, Blu-ray player, gaming console) to the TV's HDMI ports. USB devices can be connected to the USB ports.
6. **Initial Power On:** Press the power button on the remote control. Follow the on-screen instructions to complete the initial setup, including network connection (Wi-Fi) and channel scanning.

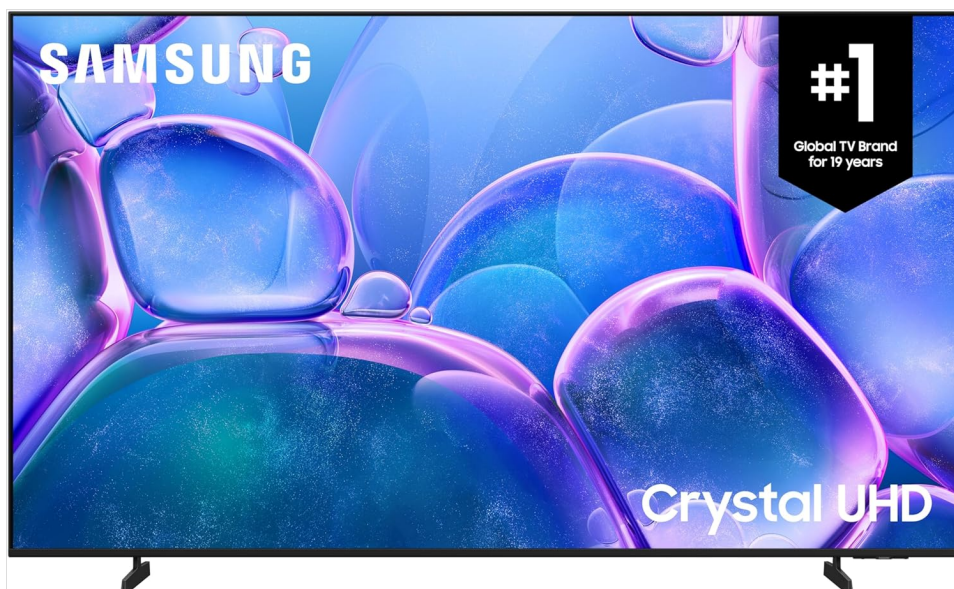


Image 4.1: The SAMSUNG 55-Inch Crystal UHD U7900F 4K Smart TV.

4.2. SAMSUNG HW-LS60D/ZC Music Frame Wireless Speaker Setup

1. **Unpacking:** Remove the Music Frame speaker from its packaging.
2. **Placement:** Position the Music Frame in your desired location. It can be placed on a surface or mounted on a wall.
3. **Connecting Power:** Connect the Music Frame's power cord to the speaker and then to a wall outlet.
4. **Pairing with TV (Wireless):** Refer to your TV's on-screen menu (Sound Output settings) to connect the Music Frame wirelessly via Bluetooth or Wi-Fi.
5. **Connecting to Wi-Fi/Bluetooth:** For standalone use or streaming from mobile devices, enable Bluetooth on your device and select the Music Frame, or connect it to your home Wi-Fi network via the Samsung SmartThings app for advanced features.

5. OPERATING YOUR DEVICES

5.1. SAMSUNG 55-Inch Crystal UHD U7900F 4K Smart TV Operation

- **Remote Control Functions:** Use the provided remote to navigate the TV's interface. The volume controls are typically located on the side or front of the remote. If experiencing difficulty, consult the remote's specific guide or the TV's e-Manual.
- **Smart Hub & One UI Tizen:** Access the Smart Hub for a wide range of apps, streaming services, and connected devices. The One UI Tizen operating system provides an intuitive user experience.
- **Picture & Sound Settings:** Adjust picture modes (e.g., Standard, Dynamic, Movie) and sound settings (e.g., Equalizer, Sound Mode) to optimize your viewing and listening experience.
- **Streaming Services:** Directly access popular services like Netflix, Amazon Prime Video, and YouTube through the Smart Hub.

5.2. SAMSUNG HW-LS60D/ZC Music Frame Wireless Speaker Operation

- **Wireless Audio Streaming:** Stream music wirelessly from your mobile devices or TV via Wi-Fi or Bluetooth.
- **Built-in Voice Assistant:** Utilize the built-in Alexa voice assistant for hands-free control. Say "Alexa" followed by your command to play music, check weather, or control smart home devices.
- **Chromecast Built-in:** Stream audio directly from Chromecast-enabled apps on your mobile device to the Music Frame. Tap the Cast button within the app to initiate streaming.
- **Wide Sweet Spot:** The 3-way speaker and patented wave guide technology ensure wide sound dispersion, providing an optimal listening experience across a broader area.

6. MAINTENANCE

- **Cleaning the TV Screen:** Gently wipe the screen with a soft, dry microfiber cloth. For stubborn marks, lightly dampen the cloth with water or a screen cleaner specifically designed for TVs. Do not spray liquid directly onto the screen.
- **Cleaning the Music Frame:** Wipe the exterior with a soft, dry cloth. Avoid using abrasive cleaners.
- **Software Updates:** Ensure your TV and Music Frame software are up to date for optimal performance and security. Updates can usually be performed through the TV's settings menu or the SmartThings app for the speaker.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common solutions before contacting support.

Problem	Possible Solution
TV does not power on / Black screen	Ensure the power cord is securely connected to both the TV and a working wall outlet. Try a different outlet. Press the power button on the TV itself, not just the remote.
No picture, but sound is present	Check the input source. Ensure external devices are powered on and connected correctly. Try a different HDMI cable.
No sound from TV or Music Frame	Check volume levels on both devices. Ensure the correct audio output is selected on the TV. For Music Frame, verify Bluetooth/Wi-Fi connection.
Remote control not working	Replace batteries. Ensure no obstructions between the remote and the TV's IR receiver. Re-pair the remote if it's a Bluetooth model.
Cannot connect to Wi-Fi	Restart your router and modem. Re-enter the Wi-Fi password. Ensure the TV/speaker is within range of your Wi-Fi network.

8. SPECIFICATIONS

8.1. SAMSUNG 55-Inch Crystal UHD U7900F 4K Smart TV

- **Brand:** Samsung
- **Model Name:** U7900F
- **Screen Size:** 55 Inches
- **Display Technology:** Crystal UHD
- **Resolution:** 4K
- **Aspect Ratio:** 16:9
- **Supported Internet Services:** Netflix, Amazon Prime Video, YouTube, Chromecast-supported services
- **Mounting Type:** Wall Mount, Table Mount
- **Processor:** Crystal Processor 4K
- **Operating System:** One UI Tizen
- **Security:** Samsung Knox Security

8.2. SAMSUNG HW-LS60D/ZC Music Frame Wireless Speaker

- **Brand:** Samsung
- **Audio Input Compatible:** Bluetooth, Wi-Fi, 3.5mm auxiliary
- **Speaker Surround Sound Channel Configuration:** 3.0
- **Connectivity Technology:** Wireless
- **Features:** Built-in Voice Assistant (Alexa), Chromecast Built-in, Wide Sweet Spot (3-way speaker, patented wave guide)

9. WARRANTY AND SUPPORT

Your SAMSUNG 55-Inch Crystal UHD U7900F 4K Smart TV and HW-LS60D/ZC Music Frame Wireless Speaker are covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, service, or further assistance, please visit the official Samsung website or contact Samsung customer service in your region. You can find contact information and additional resources at www.samsung.com/support.