

[manuals.plus](#) /

› [iRobot](#) /

› [iRobot Roomba Essential Vacuum Cleaner \(Q0120\) - Instruction Manual](#)

iRobot Q0120

iRobot Roomba Essential Vacuum Cleaner (Q0120) - Instruction Manual

Model: Q0120

INTRODUCTION

The iRobot Roomba Essential Vacuum Cleaner (Q0120) is designed to simplify floor cleaning with its essential features and powerful suction. This robotic vacuum navigates your home methodically, cleaning various floor types and reaching hard-to-access areas.

Easy to set up and use



Image: Top view of the iRobot Roomba Essential Vacuum Cleaner (Q0120), showcasing its sleek black design.

KEY FEATURES

- **3-Stage Cleaning System:** Equipped with three levels of powerful suction for effective cleaning on carpets and hard floors.
- **Smart Navigation:** Methodically cleans in neat rows, utilizing sensors to navigate around furniture and prevent falls down stairs.
- **Easy Setup:** Designed for quick and straightforward setup, allowing you to begin cleaning within minutes.
- **iRobot Home App Integration:** Offers features like "Clean While I'm Away," suggested cleaning schedules, and Clean Map reports to track cleaning progress.
- **Low-Profile Design:** Enables the robot to clean under furniture and in hard-to-reach spaces.
- **Edge-Sweeping Brush:** Specifically designed to clean corners and edges thoroughly.

We've made essential cleaning simpler



18x more suction power* for a cleaner home



Smart navigation cleans in neat rows



See where your robot cleans with Clean Map® Reports



Larger battery for 33% longer runtime*

*As compared to the Roomba® 600 series robots

Image: A visual representation highlighting the Roomba Essential's key features, including 18x more suction power, smart navigation, Clean Map Reports, and a larger battery for extended runtime.

SETUP

- Unpack:** Carefully remove the Roomba robot, Home Base charging station, and power cord from the packaging.
- Position Home Base:** Place the Home Base on a level surface against a wall, ensuring there are no obstacles within 1.5 feet (0.5 meters) on either side and 4 feet (1.2 meters) in front.
- Connect Power:** Plug the power cord into the Home Base and then into a wall outlet. Ensure the Home Base indicator light illuminates.
- Charge Robot:** Place the Roomba robot onto the Home Base, aligning its charging contacts with those on the base. The robot will emit a tone to confirm proper connection and begin charging. Allow at least 3 hours for a full charge before first use.
- Download iRobot Home App:** For full functionality, download the iRobot Home App on your smartphone or tablet. Follow the in-app instructions to connect your Roomba to your Wi-Fi network.

OPERATING INSTRUCTIONS

Starting a Cleaning Cycle

- **Manual Start:** Press the CLEAN button on the robot to start a cleaning cycle.
- **App Control:** Use the iRobot Home App to start, stop, or schedule cleaning cycles from anywhere.
- **Voice Assistant:** If configured, use a compatible voice assistant (e.g., Alexa, Google Assistant) to initiate cleaning.

Cleaning Modes

- **Automatic Cleaning:** The robot will clean your entire accessible floor space.
- **Spot Clean:** Place the robot directly over a concentrated area of debris and press the Spot Clean button (if available on your model or via app) to clean a specific area.

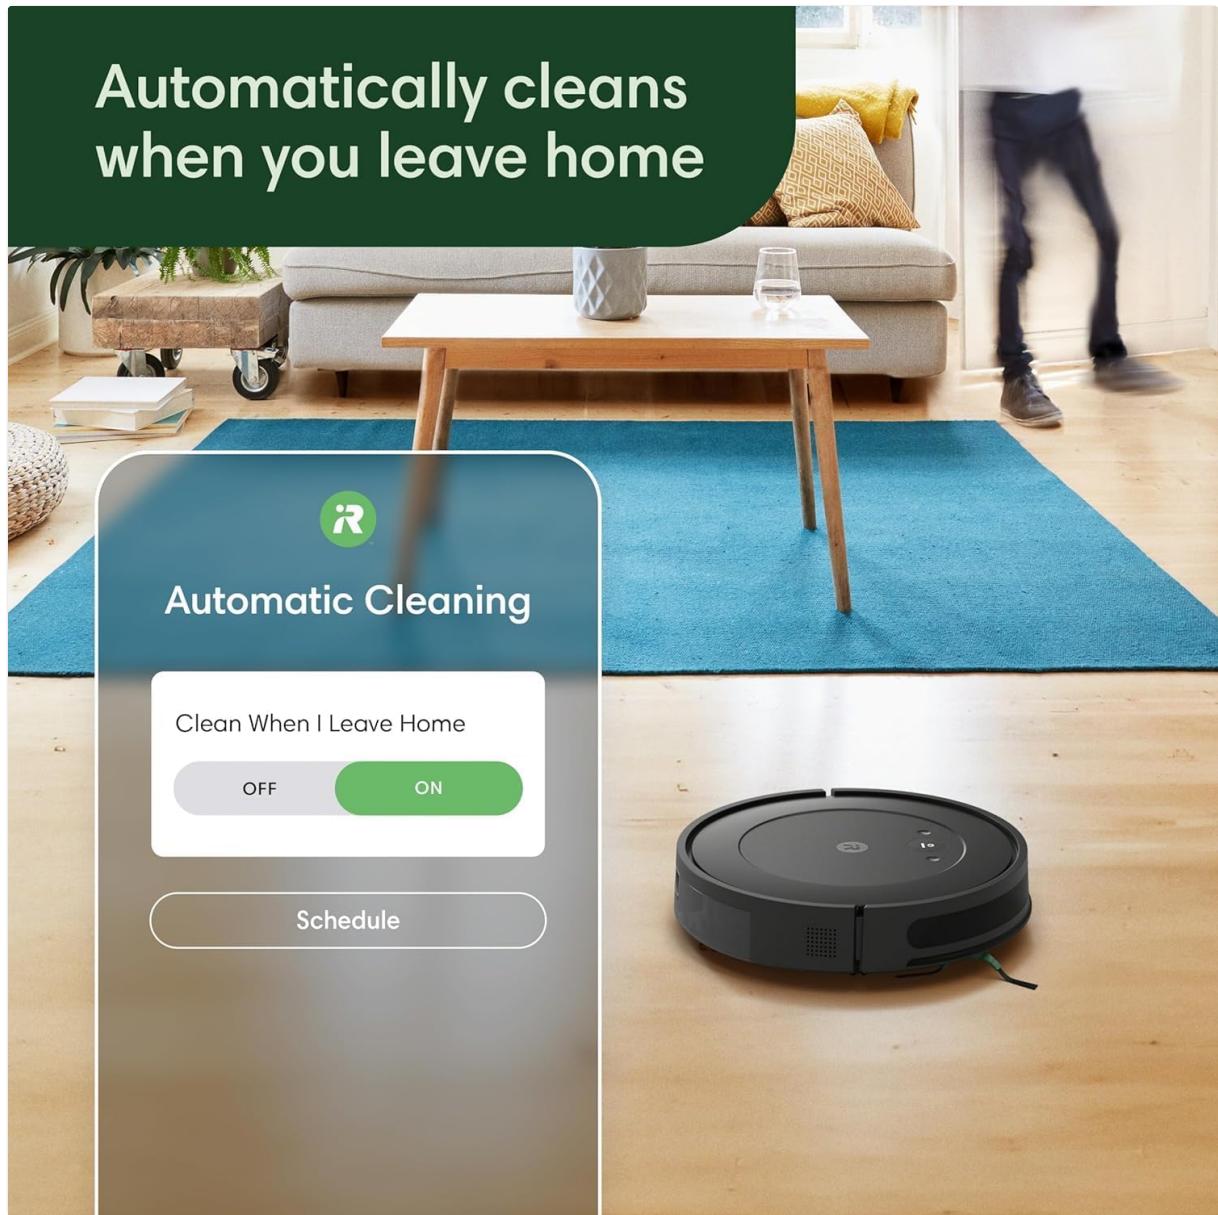


Image: Screenshot of the iRobot Home App displaying the "Automatic Cleaning" feature, with options to turn "Clean When I Leave Home" on or off, and to set a schedule.

Bigger mess? Spot clean it.



Image: The Roomba Essential robot positioned to clean a small spill of popcorn on a wooden floor, demonstrating its spot cleaning capability.

MAINTENANCE

Regular maintenance ensures optimal performance of your Roomba Essential. Always turn off the robot and disconnect it from the Home Base before performing any maintenance.

Emptying the Dust Bin

1. Press the bin release tab and pull the bin to remove it.
2. Open the bin door to empty debris into a trash receptacle.
3. Tap the bin against the trash can to dislodge any remaining debris.
4. Reinsert the bin into the robot until it clicks into place.

Powerful 3-Stage Cleaning System

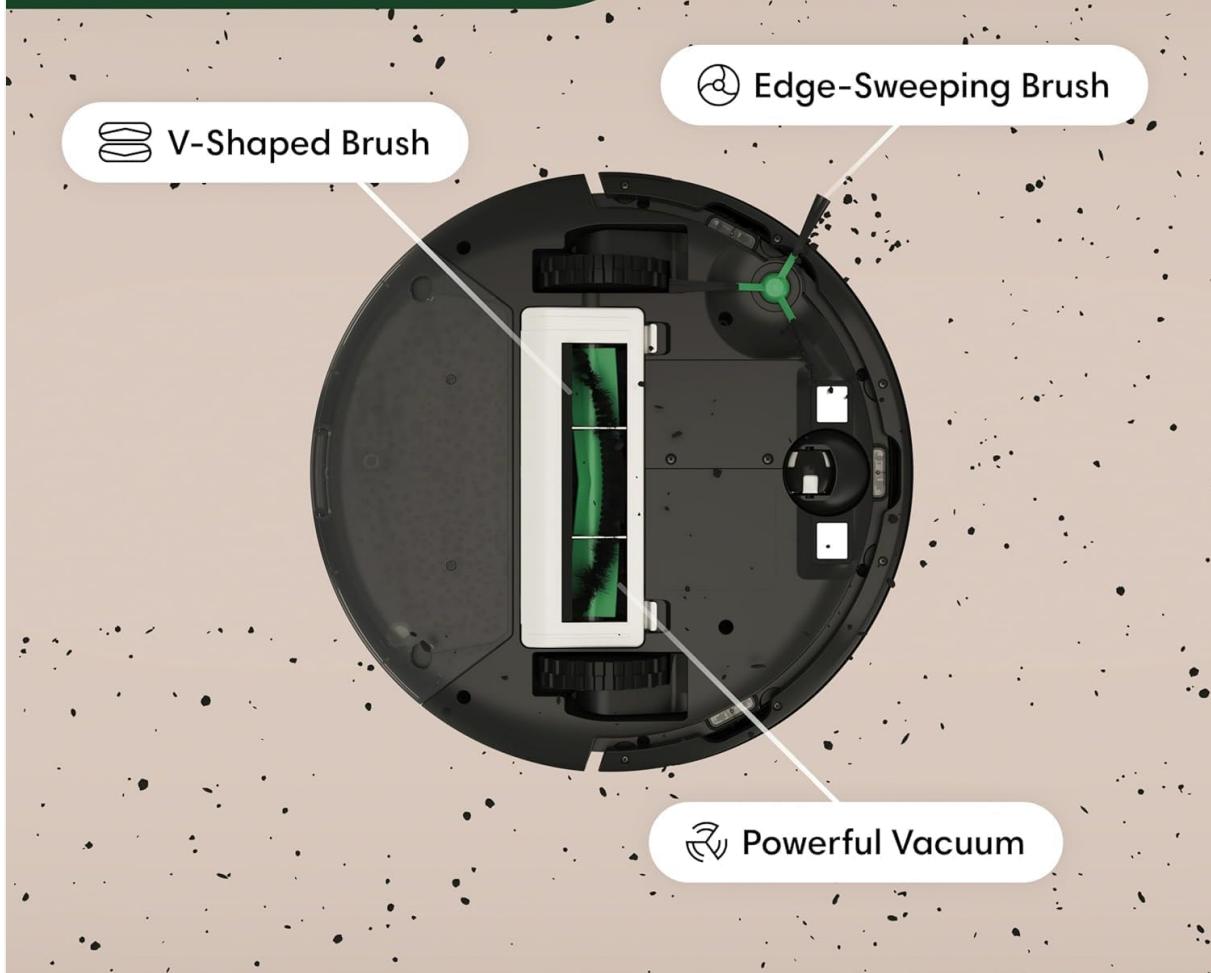


Image: The underside of the Roomba Essential, illustrating the V-shaped brush, Edge-Sweeping Brush, and powerful vacuum components of its 3-Stage Cleaning System.

Cleaning the Brushes

- Remove the cleaning head frame by lifting the tabs.
- Remove the brushes and clean any hair or debris wrapped around them.
- Reinstall the brushes and close the cleaning head frame.

Cleaning the Filter

- Remove the filter from the dust bin.
- Tap the filter against a trash can to remove debris. Do not wash the filter.
- Reinsert the clean filter into the dust bin.

Cleaning the Edge-Sweeping Brush

- Use a small screwdriver to remove the screw holding the Edge-Sweeping Brush.
- Remove the brush and clean any hair or debris.
- Reinstall the brush and tighten the screw.

TROUBLESHOOTING

If your Roomba encounters an issue, consult the iRobot Home App for specific error messages and troubleshooting steps. Common issues and general solutions include:

- **Robot not charging:** Ensure the Home Base is plugged in and the robot's charging contacts are clean and properly aligned with the Home Base.
- **Robot stuck or lost:** Clear obstacles from the cleaning area. If the robot frequently gets stuck, consider using Virtual Wall barriers (sold separately) to define no-go zones.
- **Poor cleaning performance:** Empty the dust bin, clean the brushes, and replace the filter if necessary. Ensure the Edge-Sweeping Brush is free of debris.
- **Connectivity issues:** Restart your Wi-Fi router and the Roomba robot. Ensure the robot is within range of your Wi-Fi network.

SPECIFICATIONS

Brand	iRobot
Model Name	Roomba Q0120
Special Feature	Auto-Docking
Color	Black
Product Dimensions	13" L x 13" W x 3.15" H
Included Components	Docking Station
Filter Type	Cartridge
Battery Life	120 minutes
Power Source	Battery Powered
Control Method	App
Item Weight	8.43 pounds
Surface Recommendation	Carpet

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official iRobot website or contact iRobot customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.

You can visit the official iRobot Store for more information: [iRobot Store](#)