

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GoPro](#) /

› [GoPro MAX 360 \(2025\) Action Camera User Manual](#)

GoPro CHDHZ-203_ED1_1

GoPro MAX 360 (2025) Action Camera User Manual

INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your GoPro MAX 360 (2025) Action Camera. The GoPro MAX 360 is designed to capture immersive 360-degree videos and photos, offering versatile shooting modes and robust performance for various environments.

About Your GoPro MAX 360 (2025)

The GoPro MAX 360 (2025) features dual lenses for capturing full 360° views with high resolution. It also offers a Single Lens (HERO) mode for traditional wide-angle footage. Key features include in-camera stitching, PowerPano mode for distortion-free 270° stills, a 1/4-20 mounting system for broad accessory compatibility, TimeWarp mode for variable speed recording, and the Quik Engine for advanced 360 editing capabilities.

WHAT'S IN THE BOX

Verify that all items are present in your package:

- GoPro MAX 360 (2025) Action Camera
- GoPro Enduro 1600mAh Rechargeable Battery
- Rubber Lens Caps (Pair)
- Curved Adhesive Mount
- Mounting Buckle with Thumbscrew
- USB (C-C) Cable - 18in.
- Microfiber Bag
- 50-in-1 GoPro Accessory Kit (includes various mounts, straps, and adapters)
- Microfiber Cloth



Image: All components included with the GoPro MAX 360 (2025) camera and accessory kit.

SETUP

Battery Installation

1. Locate the battery door on the side of the camera.
2. Slide the latch to open the battery door.
3. Insert the GoPro Enduro 1600mAh Rechargeable Battery with the contacts facing inward.
4. Close the battery door securely until the latch clicks into place.



Image: The GoPro MAX 360 (2025) with its battery door open, ready for battery insertion.

Lens Protection

Always use the provided rubber lens caps when the camera is not in use to protect the dual lenses from scratches and damage. The camera features rugged lenses that can be swapped out if they become scratched during use.

Mounting the Camera

The GoPro MAX 360 (2025) includes a built-in 1/4-20 mounting system, allowing compatibility with a wide range of photography gear and accessories. Extend the mounting fingers at the bottom of the camera to attach it to compatible mounts, such as the included Curved Adhesive Mount or accessories from the 50-in-1 kit.



Image: Side view of the GoPro MAX 360 (2025) showing the integrated mounting fingers.

OPERATING YOUR CAMERA

360-Degree Video Capture

In 360-degree mode, the camera captures everything around you in 5.6K30 resolution. This immersive footage can be reframed later using the GoPro Quik app to create traditional video perspectives from any angle within the 360 sphere.

HERO Mode (Single Lens)

Switch to HERO mode to use the camera as a traditional GoPro. This mode captures standard 1080p or 1440p videos, photos, and time-lapse footage. You can select from four digital lenses: narrow, linear, wide, and ultra-wide Max SuperView.

Audio Features

Equipped with six microphones, the GoPro MAX captures immersive 360 audio, providing a true-to-life sound experience. Advanced wind-noise reduction ensures clear audio capture even in challenging environments.

Waterproofing

The GoPro MAX 360 (2025) is rugged and waterproof up to 16ft (5m) without additional housing. This allows for use in snow, mud, and underwater conditions. Ensure the battery door and any other ports are securely closed before exposing the camera to water.

Voice Control

Control your camera hands-free using 12 voice commands. Refer to the full GoPro user manual for a complete list of commands.

Editing and Reframing

In-camera stitching automatically merges your 360 shots. For advanced editing and reframing, utilize the GoPro Quik app. The Quik Engine offers intelligent object tracking, CameraFX, and 4K exports for your 360 videos.



Image: Front view of the GoPro MAX 360 (2025) displaying its screen and extended mounting fingers.

MAINTENANCE

Cleaning

Use the provided microfiber cloth to gently clean the camera body and lenses. For stubborn dirt or smudges, slightly dampen the cloth with water. Avoid harsh chemicals or abrasive materials.

Lens Care

Always keep the lens caps on when not recording. If the rugged lenses become scratched, they can be replaced. Consult GoPro's official support for replacement procedures.

Water Exposure

After using the camera in saltwater, rinse it thoroughly with fresh water and allow it to air dry completely before opening any doors or compartments.

TROUBLESHOOTING

If you encounter issues with your GoPro MAX 360 (2025), consider the following:

- **Camera Not Responding:** Try removing and reinserting the battery.
- **Poor Image/Video Quality:** Ensure lenses are clean and free of smudges. Check lighting conditions.
- **Battery Life:** Ensure the battery is fully charged. Reduce screen brightness or turn off Wi-Fi/Bluetooth when not needed.
- **Mounting Issues:** Ensure all mounting screws and buckles are tightened securely.

For more detailed troubleshooting or persistent problems, please refer to the official GoPro support website or contact their customer service.

SPECIFICATIONS

Feature	Detail
Brand	GoPro
Model Number	CHDHZ-203_EDI_1
Item Weight	3.33 pounds
Product Dimensions	1.6 x 2.5 x 2.7 inches
Batteries	1 Lithium Ion battery required (included)
Photo Sensor Technology	CMOS
Video Capture Resolution	5.6K
Flash Memory Type	Internal flash memory
Video Capture Format	MP4
Supported Audio Format	AAC, PCM
Screen Size	2 Inches
Connectivity Technology	Wi-Fi
Optical Zoom	1 x
Camcorder Type	Action Camera

WARRANTY AND SUPPORT

Your GoPro MAX 360 (2025) Action Camera is covered by GoPro's standard warranty. For specific warranty terms, conditions, and to register your product, please visit the official GoPro website. For technical support, software updates, or additional assistance, refer to the support section on the GoPro website or contact their customer service directly.

GoPro Official Website: www.gopro.com