

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [G-TiDE](#) /
- › [G-TiDE Hibeat Bluetooth Headphones User Manual](#)

G-TiDE BT

G-TiDE Hibeat Bluetooth Headphones User Manual

Model: BT | Brand: G-TiDE

1. PRODUCT OVERVIEW

The G-TiDE Hibeat Bluetooth Headphones are designed for an immersive audio experience with advanced features for comfort and connectivity. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting.



Figure 1.1: G-TiDE Hibeat Bluetooth Headphones (Main View). These black over-ear headphones feature soft earcups and an adjustable headband, designed for comfort and portability.



Figure 1.2: G-TIDE Hibeat Bluetooth Headphones (Folded). The headphones can be compactly folded, making them easy to store and transport in the included protective case.



Figure 1.3: G-TIDE Hibeat Bluetooth Headphones (Controls). This view highlights the control buttons, including power, volume, and the noise cancellation switch, along with the USB-C charging port and 3.5mm audio jack.



Figure 1.4: G-TiDE Hibeat Bluetooth Headphones (Adjustable Headband). The headband features a durable, extendable mechanism to ensure a comfortable fit for various head sizes.

2. PACKAGE CONTENTS

Please verify that all items are present in the package:

- G-TiDE Hibeat Bluetooth Headphones
- User Manual (this document)
- 3.5mm Audio Cable
- Charging Cable (USB-C)
- Protective Case

3. SPECIFICATIONS

Feature	Description
Model Name	HIBEAT

Model Number	BT
Connectivity Technology	Wireless (Bluetooth), Wired (3.5mm Jack)
Bluetooth Version	5.3
Wireless Range	Up to 10 meters
Battery Capacity	600mAh
Playback Time	Up to 12 hours (continuous music/calls)
Charging Time	Approximately 3 hours
Microphone	Triple Microphone with Noise Cancellation
Noise Control	Active Noise Cancellation (ANC) with physical switch
Ear Placement	Over-Ear
Material	Plastic
Dimensions	4 x 4 x 4 cm
Weight	480 g

4. SETUP AND INITIAL USE

4.1 Charging the Headphones

Before first use, fully charge your G-TiDE Hibeat headphones.

1. Connect the provided USB-C charging cable to the charging port on the headphones.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will show charging status. Once fully charged (approximately 3 hours), the indicator will change or turn off.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button for 3 seconds until the LED indicator lights up.
- **To Power Off:** Press and hold the Power button for 3 seconds until the LED indicator turns off.

4.3 Bluetooth Pairing

The G-TiDE Hibeat headphones use Bluetooth 5.3 for a fast and stable connection.

1. Ensure the headphones are powered off.
2. Press and hold the Power button for 5-7 seconds until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "G-TiDE Hibeat" from the list of devices.
5. Once connected, the LED indicator will turn solid blue or flash slowly.

NFC Pairing (for Android devices): For quick pairing, simply tap your NFC-enabled Android device to the NFC area on the left earcup of the headphones. Follow the on-screen prompts to confirm the connection.

5. OPERATING INSTRUCTIONS

5.1 Music Playback

- **Play/Pause:** Press the Multi-function button (usually the power button or a dedicated play/pause button).
- **Next Track:** Press and hold the Volume Up button.
- **Previous Track:** Press and hold the Volume Down button.
- **Volume Up:** Short press the Volume Up button.
- **Volume Down:** Short press the Volume Down button.

5.2 Call Management

- **Answer/End Call:** Short press the Multi-function button.
- **Reject Call:** Press and hold the Multi-function button for 2 seconds.
- **Redial Last Number:** Double-press the Multi-function button.

5.3 Noise Cancellation (ANC)

The G-TiDE Hibeat headphones feature Active Noise Cancellation (ANC) with a dedicated physical switch.

- **Activate ANC:** Toggle the ANC switch to the "ON" position. The LED indicator for ANC will light up.
- **Deactivate ANC:** Toggle the ANC switch to the "OFF" position. The ANC LED indicator will turn off.

ANC can be used independently or while listening to audio.

5.4 Wired Connection (3.5mm Audio Cable)

You can use the headphones with the included 3.5mm audio cable when the battery is low or for devices without Bluetooth.

1. Connect one end of the 3.5mm audio cable to the audio jack on the headphones.
2. Connect the other end to the audio output of your device.
3. In wired mode, some functions like Bluetooth pairing and ANC might operate differently or be unavailable depending on the headphone's power status.

6. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your headphones.

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners, solvents, or strong chemicals.
- **Storage:** When not in use, store the headphones in the provided protective case to prevent dust and scratches. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the headphones regularly, even if not used for extended periods.
- **Water Exposure:** These headphones are not waterproof. Avoid exposure to water, moisture, or excessive humidity.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair via Bluetooth.	Headphones not in pairing mode; device Bluetooth off; too far from device.	Ensure headphones are in pairing mode (flashing blue/red LED). Turn on Bluetooth on your device. Move headphones closer to the device (within 10m).
No sound or low volume.	Volume too low on headphones or device; headphones not connected properly.	Increase volume on both headphones and connected device. Repair Bluetooth or re-insert 3.5mm cable.
Noise Cancellation not working.	ANC switch is off.	Ensure the ANC physical switch is in the "ON" position.
Poor call quality.	Weak Bluetooth signal; environmental noise.	Move closer to the connected device. Ensure the triple microphone system is not obstructed. Activate ANC if in a noisy environment.

8. WARRANTY AND SUPPORT

G-TiDE products come with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included in your package or visit the official G-TiDE website.

If you encounter any issues not covered in this manual or require further assistance, please contact G-TiDE customer support:

- **Website:** [Visit the G-TiDE Store on Amazon](#)
- **Email:** Refer to your product packaging or warranty card for contact email.
- **Phone:** Refer to your product packaging or warranty card for contact number.

Please have your product model number (BT) and purchase details ready when contacting support.