

YATINEY DS18UBRY1

YATINEY DS18UBRY1 TV Stand Instruction Manual

Model: DS18UBRY1

INTRODUCTION

Thank you for choosing the YATINEY DS18UBRY1 TV Stand. This manual provides detailed instructions for the safe assembly, operation, and maintenance of your new TV stand. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

Important Safety Information:

- Always assemble the product on a soft, clean surface to prevent scratches.
- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Do not overtighten screws during assembly to avoid damaging the material.
- Place the TV stand on a level, stable surface to prevent tipping.
- Do not exceed the maximum weight capacity specified for the top surface and shelves.
- Keep small parts away from children during assembly.



Image: The YATINEY DS18UBRY1 TV Stand, fully assembled and in use, showcasing its capacity for a television and various media devices.

PARTS LIST

Before assembly, verify that all components listed below are present. If any parts are missing or damaged, please contact customer support.

- Top Panel (1)
- Bottom Shelf Panels (2)
- Side Frame Supports (4)
- Middle Support Frame (1)
- Drawer Unit (1)
- Wire Mesh Panels (2)
- Adjustable Feet (6)
- Assembly Hardware (Screws, bolts, Allen wrench, etc.)

ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your TV stand. It is recommended to have two people for assembly.

- Step 1: Attach Adjustable Feet.** Screw the adjustable feet into the bottom of all vertical support frames. Ensure they are securely tightened but do not overtighten.
- Step 2: Assemble Side Frames.** Connect the side frame supports to the bottom shelf panels using the provided hardware. Ensure the frames are oriented correctly.
- Step 3: Integrate Middle Support.** Attach the middle support frame to the bottom shelf panels, creating the central compartment for the drawer unit.
- Step 4: Install Drawer Unit.** Carefully slide the pre-assembled drawer unit into the central compartment. Secure it if necessary with the provided fasteners.
- Step 5: Attach Wire Mesh Panels.** Secure the wire mesh panels to the back of the open compartments using the designated clips or screws. These panels aid in cable management.
- Step 6: Place Top Panel.** Carefully align the top panel with the assembled frame and secure it using the remaining hardware. Ensure all connections are firm and stable.
- Step 7: Final Check.** Verify that all screws are tightened and the stand is stable. Adjust the feet if necessary to level the stand on uneven floors.

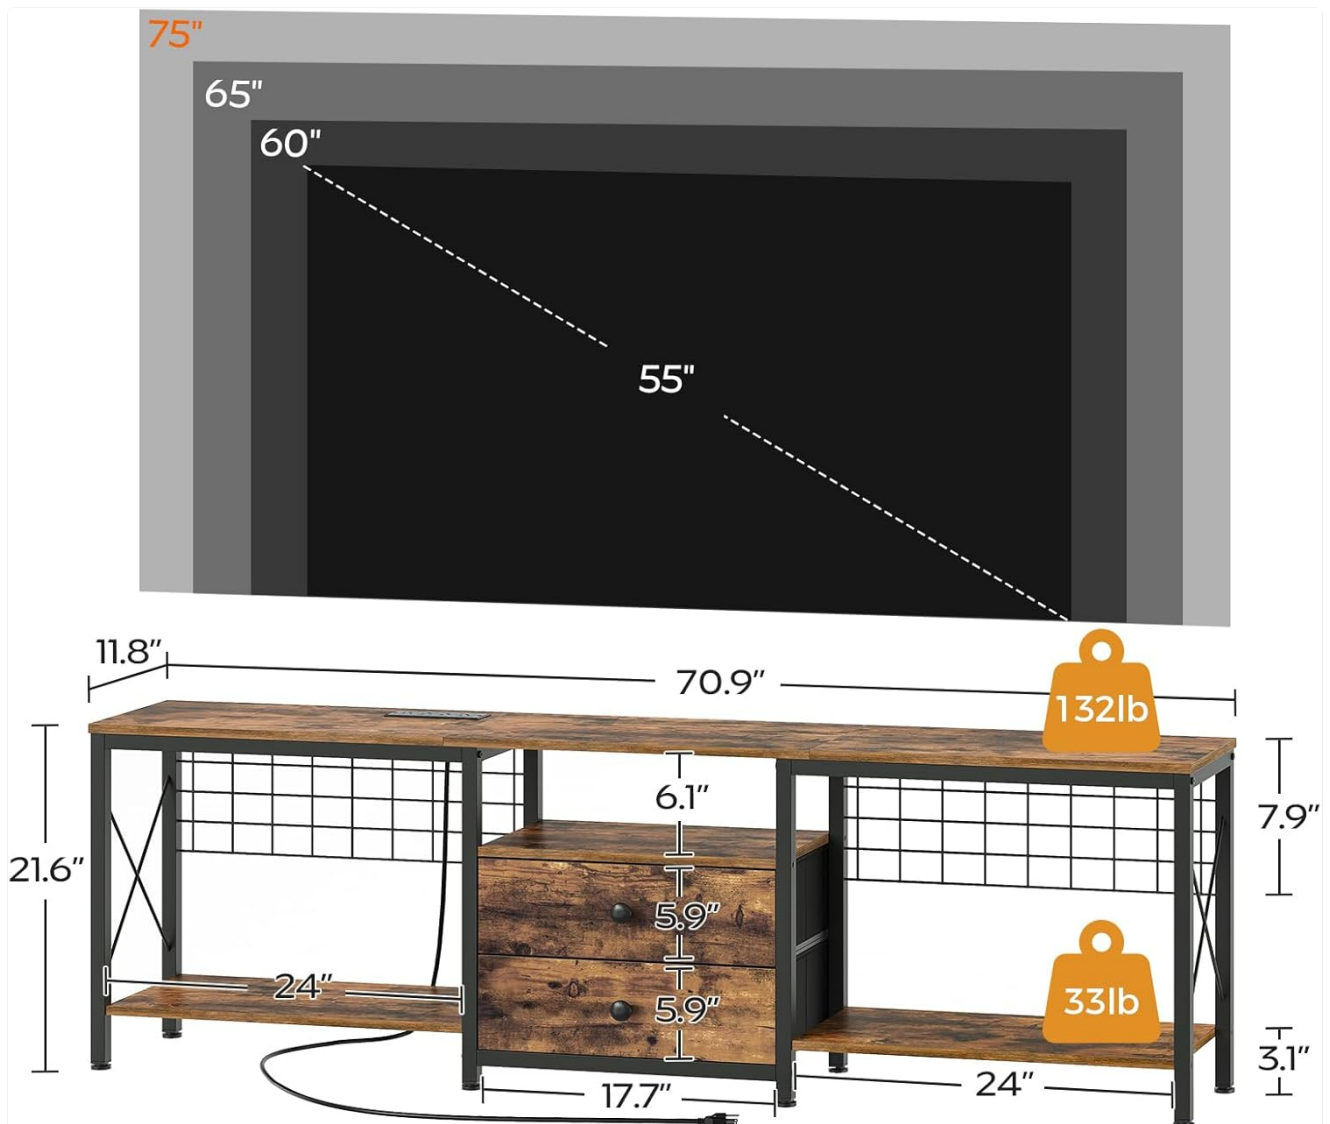


Image: A detailed diagram illustrating the dimensions of the TV stand (70.9" L x 11.8" W x 21.6" H) and its weight capacities: 132 lbs for the top surface and 33 lbs for each lower shelf.

OPERATING INSTRUCTIONS

This section provides guidance on how to safely and effectively use your YATINEY DS18UBRY1 TV Stand.

Placement and Weight Capacity

- Place the TV stand on a flat, stable surface.
- Ensure the weight of your television does not exceed **132 lbs (60 kg)** for the top surface.
- Each lower shelf has a maximum weight capacity of **33 lbs (15 kg)**.
- This stand is designed to accommodate TVs up to 75 inches, but always verify your TV's base dimensions against the stand's top surface (70.9 inches wide).

Cable Management

The integrated wire mesh panels at the back of the open compartments are designed for efficient cable management. You can neatly route and secure power cords and audio/video cables to maintain an organized appearance and prevent tangles.

Great Cable Management

Cables can be neatly wound and secured on the wire mesh for an orderly look.



Image: A close-up demonstrating how cables can be neatly organized and secured using the wire mesh panels on the back of the TV stand, promoting an orderly look.

Drawer Usage

The central drawer unit provides enclosed storage for accessories, remote controls, or other items, helping to keep your living space tidy.

MAINTENANCE

Proper care will extend the life and appearance of your TV stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Dusting:** Regularly dust with a dry, soft cloth.
- **Spills:** Clean spills immediately to prevent staining.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary, but do not overtighten.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration.

TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common solutions:

- **Stand is wobbly:** Ensure the stand is on a level surface. Adjust the leveling feet at the bottom of the stand until it is stable. Check that all assembly screws are securely tightened.
- **Parts do not fit:** Double-check the assembly instructions and diagrams to ensure you are using the correct parts for each step and that they are oriented correctly. Do not force parts together.
- **Missing hardware:** Review the parts list. If hardware is genuinely missing, contact customer support for replacements.
- **Scratches or damage during assembly:** If minor, touch-up pens or furniture markers can be used. For significant damage, contact customer support.

SPECIFICATIONS

Feature	Specification
Model	DS18UBRY1
Brand	YATINEY
Overall Dimensions (L x W x H)	70.9" x 11.8" x 21.6" (180 cm x 30 cm x 55 cm)
Top Surface Weight Capacity	132 lbs (60 kg)
Lower Shelf Weight Capacity (each)	33 lbs (15 kg)
Assembly Required	Yes
Material	Engineered Wood, Metal Frame

WARRANTY AND SUPPORT

YATINEY stands behind the quality of its products. For specific warranty details, please refer to the warranty card included with your purchase or visit the official YATINEY website.

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact YATINEY customer support. Have your model number (DS18UBRY1) and purchase information ready when contacting support.

Contact information for customer support can typically be found on the product packaging or the brand's official website.