

RR SPORTS X26

RR SPORTS SurfAudio Bone Conduction Bluetooth Headphones with 32GB MP3 Player (Model X26)

User Instruction Manual

[Overview](#)

[Package](#)

[Contents](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Warranty &](#)

[Support](#)

[Specifications](#)

1. PRODUCT OVERVIEW

The RR SPORTS SurfAudio Bone Conduction Bluetooth Headphones (Model X26) are designed for active lifestyles, offering an open-ear listening experience with IP68 waterproofing and an integrated 32GB MP3 player. This manual provides instructions for proper use, maintenance, and troubleshooting.



Image 1.1: The SurfAudio headphones, showcasing their waterproof design.

Key Features:

- **IP68 Waterproof Rating:** Fully submersible up to 2 meters, ideal for swimming and water sports.
- **Open-Ear Bone Conduction Technology:** Delivers sound through cheekbones, keeping ears open to ambient sounds for safety.
- **32GB MP3 Player:** Built-in storage for up to 4,000 songs, allowing music playback without a phone.
- **Bluetooth 5.4 Connectivity:** Fast and stable wireless connection for land-based activities.
- **Lightweight and Secure Fit:** Designed for comfort and stability during intense physical activity.
- **7-Hour Battery Life:** Extended usage for workouts and daily activities.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- RR SPORTS SurfAudio Bone Conduction Headphones (Model X26)
- Magnetic Charging Cable
- User Manual (this document)
- *Note: The product specifications mention "Blu-ray" as an included component, which appears to be an error. Please disregard this entry.*

3. INITIAL SETUP AND CHARGING

3.1. Charging the Headphones

Before first use, fully charge your headphones. A full charge takes approximately 1.5 hours and provides up to 7 hours of battery life.

1. Connect the magnetic charging cable to the charging port on your headphones.
2. Connect the USB end of the cable to a standard USB power adapter (not included) or a computer's USB port.
3. The LED indicator on the headphones will show charging status (refer to LED indicator section for details).



Image 3.1: Magnetic charging connection and battery life details.

3.2. Transferring Music to MP3 Player

The headphones feature a built-in 32GB MP3 player for offline music playback, especially useful for swimming where Bluetooth signals are unreliable.

1. Download audio files (MP3, WMA, WAV, APE, FLAC formats supported) to your computer.
2. Connect the headphones to your computer using the magnetic charging cable.
3. The headphones will appear as a removable disk drive on your computer.
4. Open the drive and drag and drop your audio files into the designated folder.



Image 3.2: Instructions for downloading music to the internal memory.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

- **Power On:** Long press the Power button for 3 seconds.
- **Power Off:** Long press the Power button for 3 seconds.

4.2. Mode Switching (Bluetooth / MP3)

The headphones support two modes: Bluetooth for wireless connection and MP3 for internal storage playback.

- **Switch Mode:** Click the Power button twice to toggle between Bluetooth mode and MP3 mode.
- **Important Note for Swimming:** Bluetooth signals do not transmit effectively underwater. Always switch to MP3 mode for swimming activities.



How to download music to the memory card in your headphones

1. Download the audio file to your computer.
2. Connect your computer and "SurfAudio" Headphones using the magnetic charging cable. The earphones will appear as a hard drive on your computer.
3. Open the hard drive and drag & drop the audio file into the folder.

Image 4.1: Understanding the dual modes for different activities.

4.3. Bluetooth Pairing

To connect your headphones to a Bluetooth-enabled device:

1. Ensure the headphones are in Bluetooth mode (double-click Power button if necessary).
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "SurfAudio X26" (or similar) from the list to pair.
4. A voice prompt will confirm successful pairing.

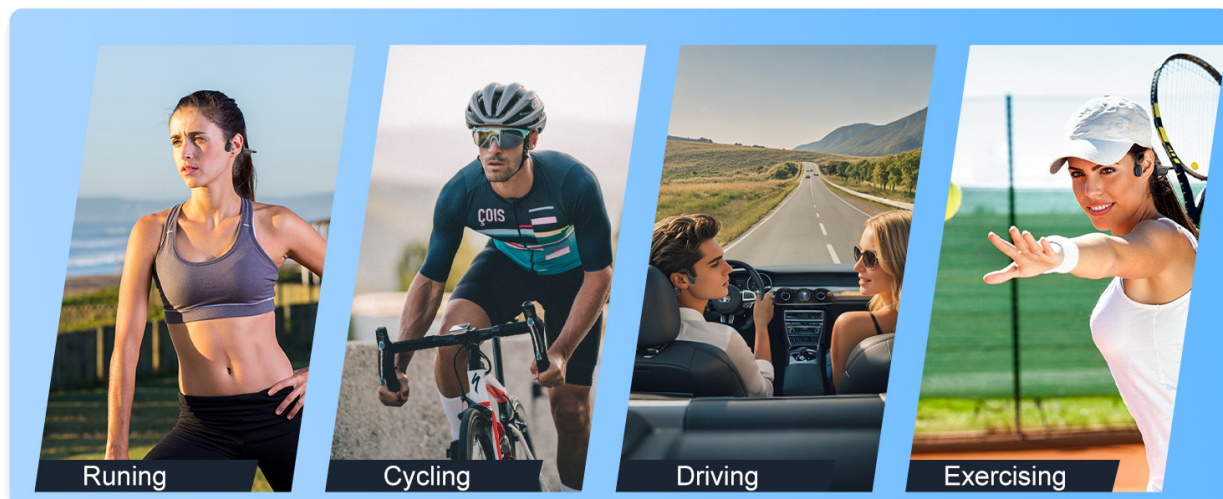


Image 4.2: Bluetooth 5.4 technology for stable connections.

4.4. Button Functions

The headphones feature intuitive controls for media playback and calls:

Action	Button Press
Play/Pause	Click Power button once
Volume Up	Click '+' button once
Volume Down	Click '-' button once
Next Song	Double-click '+' button
Previous Song	Double-click '-' button
Answer/End Call	Click Power button once
Reject Call	Long press Power button for 2 seconds
Activate Voice Assistant	Long press '+' button for 2 seconds
Switch Bluetooth/MP3 Mode	Click Power button twice
MP3 Shuffle/Sequential Play	In MP3 Mode, press and hold '+' button



Image 4.3: Detailed button control guide.

5. CARE AND MAINTENANCE

- **Cleaning:** Wipe the headphones with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Drying after Water Exposure:** After swimming or heavy sweating, gently shake off excess water and allow the headphones to air dry completely before charging or connecting to a computer.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- **Charging Port:** Ensure the magnetic charging port is clean and dry before connecting the charging cable to prevent corrosion.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot connect via Bluetooth.	Headphones not in Bluetooth mode; device Bluetooth off; out of range.	Ensure headphones are in Bluetooth mode. Turn on device Bluetooth. Move device closer to headphones (within 10 meters). Re-pair if necessary.
No sound in MP3 mode.	No music files loaded; headphones not in MP3 mode; volume too low.	Transfer music files to the headphones. Switch to MP3 mode. Increase volume.
Sound quality is poor.	Improper fit; low battery; interference.	Adjust headphones for optimal bone conduction contact. Charge headphones. Move away from sources of interference.
Bluetooth not working underwater.	Bluetooth signals cannot transmit through water.	Switch to MP3 mode for underwater use.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	X26
Brand	RR SPORTS
Connectivity Technology	Bluetooth 5.4, MP3 Player
Water Resistance Level	IP68 (Waterproof up to 2 meters)
Internal Storage	32GB (stores up to 4,000 songs)
Supported Audio Formats	MP3, WMA, WAV, APE, FLAC
Battery Life	Up to 7 hours
Charging Time	Approximately 1.5 hours
Bluetooth Range	Up to 10 meters (33 feet)
Item Weight	3.88 ounces (approx. 110 grams)
Product Dimensions	5.27 x 4.05 x 2.04 inches
Manufacturer	RR SPORTS
UPC	768365289248

8. WARRANTY AND SUPPORT

RR SPORTS products are designed for durability and performance. For warranty information and customer support, please refer to the following:

- **Warranty:** Specific warranty details are typically provided with your purchase documentation or on the manufacturer's official website. Please retain your proof of purchase.
- **Customer Support:** For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact RR SPORTS customer service through their official website or the retailer where the product was purchased.
- **Online Resources:** Visit the [RR SPORTS Store on Amazon](#) for additional product information and updates.

Optional protection plans may be available for purchase separately. Please check with your retailer for details.