

SECULEAD SY13

SECULEAD SY13 Mini Karaoke Machine Wireless Speaker User Manual

Model: SY13

1. INTRODUCTION

Thank you for choosing the SECULEAD SY13 Mini Karaoke Machine Wireless Speaker. This portable and versatile device is designed to provide an enjoyable audio experience with its high-performance speaker, wireless microphones, and various connectivity options. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and user satisfaction.

2. SAFETY INFORMATION

- Keep the device away from water and moisture.
- Do not expose to extreme temperatures or direct sunlight.
- Avoid dropping or subjecting the device to strong impacts.
- Use only the provided charging cable to prevent damage.
- Keep out of reach of small children to prevent choking hazards from small parts.

3. PACKAGE CONTENTS

- 1 x SECULEAD SY13 Mini Karaoke Machine Wireless Speaker
- 1 x Wireless Microphone
- 1 x USB Type-C Charging Cable
- 1 x User Manual



Figure 1: Main product image showing the speaker and one microphone.

4. SETUP

4.1 Charging the Device

Before first use, fully charge the speaker and microphone(s). Use the provided USB Type-C cable. The charging port for the speaker is located on the back panel, and for the microphone, it is at the bottom.

ALL IN ONE KARAOKE MACHINE



Figure 2: Speaker with Type-C charging port highlighted.

4.2 Powering On/Off

- **Speaker:** Press and hold the power button on the top panel of the speaker until the lights illuminate and you hear an audible prompt.
- **Microphone:** Press and hold the power button on the microphone until the indicator light turns on.
- To power off, press and hold the respective power button again.

4.3 Pairing the Microphone(s)

The microphone(s) will automatically pair with the speaker once both devices are powered on. No manual pairing is required.

4.4 Connecting to Audio Source

- **Bluetooth:** Turn on Bluetooth on your smartphone, tablet, or other compatible device. Search for "SY13" in the list of available devices and select it to connect. The speaker will confirm a successful connection with an audible prompt.
- **TF Card/USB:** Insert a TF card or USB drive containing MP3 audio files into the corresponding slot on the back of the speaker. The speaker will automatically detect and play the music.
- **AUX:** Connect an audio device using a 3.5mm AUX cable to the AUX input port on the back of the speaker.

MULTIPLE CONNECTION WAYS WIDE COMPATIBILITY OF BLUETOOTH 5.3



Figure 3: Speaker showing Bluetooth, TF Card, USB, and AUX connectivity.

5. OPERATING INSTRUCTIONS

5.1 Speaker Controls

- **Power Button:** Press and hold to turn on/off. Short press to cycle through light modes.
- **Play/Pause Button:** Short press to play or pause music.
- **Volume +/- Buttons:** Short press to adjust the speaker's volume.
- **Light Modes:** The speaker features colorful dancing lights. Short press the power button to change between different light patterns.



Figure 4: Speaker displaying colorful dancing lights.

5.2 Microphone Controls

- **Power Button:** Press and hold to turn on/off.
- **Volume +/- Buttons:** Adjust the microphone's output volume.
- **Voice Changer Button:** Short press to cycle through 5 different magic voice effects: baby voice, male voice, female voice, monster voice, and original accompaniment.




Figure 5: Microphone showing various voice effects.

5.3 Using the Karaoke Function

Once your audio source is connected and the microphone(s) are paired, you can sing along to your favorite songs. Adjust the speaker volume and microphone volume to your preference. Experiment with the voice changer effects for added fun.

Your browser does not support the video tag.

Video 1: Overview of the Mini Karaoke Machine, demonstrating its features and ease of use.

6. FEATURES

- **High-Performance Speaker:** Equipped with professional high-sensitivity drivers and Bluetooth 5.3 for louder, clearer sound with lower latency.
- **Multi-function Karaoke System:** Features 5 magic voice effects and colorful lights to enhance the karaoke experience.
- **Long Battery Life:** Offers up to 10 hours of usage on a single charge, ideal for extended fun.
- **Wide Compatibility:** Supports TF card, USB, and AUX input connections. Bluetooth 5.3 technology is compatible with Android devices, TVs, iPads, tablets, car karaoke systems, and PCs.
- **Portable Design:** Compact size and lightweight with a convenient handle for easy transport.




Figure 6: Key features of the karaoke machine.

Your browser does not support the video tag.

Video 2: Official product video showcasing the Mini Karaoke Machine's various functions and portability.

7. MAINTENANCE

- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the karaoke machine in a cool, dry place when not in use.
- Avoid exposing the microphones to excessive moisture or direct impact.

8. TROUBLESHOOTING

- **No Sound:** Ensure both the speaker and microphone are powered on and charged. Check the volume levels on both devices and your connected audio source.
- **Pairing Issues:** Make sure both devices are within range (typically 10 meters) and not connected to other Bluetooth devices. Try restarting both the speaker and microphone.
- **Charging Problems:** Verify that the charging cable is securely connected to both the device and a working power source.

9. SPECIFICATIONS

Item Weight	15.8 ounces
Product Dimensions	3 x 5.8 x 5.4 inches
Model Number	SY13
Power Source	Battery Powered
Connectivity	Bluetooth 5.3, TF Card, USB, 3.5mm AUX
Compatible Devices	Smartphones, Tablets, TVs, PCs, Car Karaoke, Amplifiers, Speakers
Special Feature	Light Up Speaker
Battery Life	Up to 10 hours

10. WARRANTY & SUPPORT

For warranty information or technical support, please refer to the product packaging or contact SECULEAD customer service directly. Keep your purchase receipt for warranty claims.