

[Manuals.plus](#) /

> [Huuger](#) /

> Huuger 63-Inch 12-Drawer Dresser and TV Stand Instruction Manual

## Huuger 12-Drawer Dresser

# Huuger 63-Inch 12-Drawer Dresser and TV Stand Instruction Manual

Model: 12-Drawer Dresser

## INTRODUCTION

Thank you for choosing the Huuger 63-inch 12-Drawer Dresser and TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.



## IMPORTANT SAFETY INFORMATION

To prevent injury and damage, adhere to the following safety guidelines:

- **Read All Instructions:** Ensure you understand all assembly steps before proceeding.
- **Adult Assembly Required:** This product should be assembled by adults.
- **Use Anti-Tip Device:** Always secure the dresser to the wall using the provided anti-tip device to prevent tipping, especially in households with children.
- **Weight Limits:** Do not exceed the maximum weight capacity of the top surface (150 lbs) or individual drawers. Overloading can compromise stability.
- **Level Surface:** Assemble and place the dresser on a flat, level surface to ensure stability. Adjustable feet are provided for minor adjustments.
- **Keep Small Parts Away:** During assembly, keep all small parts and packaging materials away from children and pets.



Image 2: Diagram demonstrating the correct installation of the anti-tip device for enhanced safety.

## PACKAGE CONTENTS

Before beginning assembly, carefully unpack all components and verify that you have received all parts listed below. If any parts are missing or damaged, please contact customer support.

- Metal Frame Components
- Top Particleboard Panel
- 12 Fabric Drawers with Handles
- Hardware Pack (screws, bolts, Allen wrench)
- Adjustable Feet
- Anti-Tip Device Kit
- Assembly Instructions Manual

## ASSEMBLY INSTRUCTIONS

---

Assembly is estimated to take approximately 40 minutes. It is recommended to have a clear, spacious area for assembly.

1. **Unpack and Identify Parts:** Lay out all components on a soft, clean surface to prevent scratches. Refer to the parts list to ensure everything is present and undamaged.
2. **Assemble the Metal Frame:** Connect the metal frame components according to the diagrams provided in the separate assembly guide (not included in this document). Ensure all screws are tightened securely but do not overtighten.
3. **Attach the Top Panel:** Secure the P2-grade particleboard top panel to the assembled metal frame using the designated screws.
4. **Insert Fabric Drawers:** Unfold each fabric drawer and insert the bottom MDF board for stability. Attach the handles to the front of each drawer. Slide the assembled drawers into the designated slots within the metal frame. Each drawer includes a back stopper to prevent it from pulling out completely.
5. **Install Adjustable Feet:** Screw the adjustable feet into the bottom of the dresser frame. Adjust them as needed to ensure the dresser is level on your floor.
6. **Secure Anti-Tip Device:** Following the instructions provided with the anti-tip kit, securely attach the dresser to a wall stud. This step is crucial for safety.



Image 3: Detailed view of a fabric drawer, highlighting its construction with an internal MDF board for support.

## OPERATING YOUR DRESSER

This dresser is designed for versatile storage and can also function as a TV stand.

- **Drawer Usage:** The 12 fabric drawers provide ample storage for clothing, accessories, media, or other household items. Pull drawers gently using the handles. The integrated back stoppers prevent accidental removal.
- **TV Stand Functionality:** The sturdy top surface is suitable for televisions ranging from 43 to 70 inches. Ensure the TV's base fits within the dresser's dimensions and its weight does not exceed the top surface's capacity (150 lbs).
- **Storage Organization:** Utilize the multiple drawers to categorize and organize items, making them easy to find and access.

# Bigger Size, More Drawers

More Space, Easier Storage



Toys



DVD Player



Remote Control



Snacks



Clothes



Game Console



Image 4: Visual representation of the dresser's storage capabilities, illustrating how various items can be organized within its drawers.



Image 5: The dresser functioning as a TV stand, accommodating a 55-inch television in a living room setting.

## MAINTENANCE AND CARE

Proper care will extend the life and appearance of your dresser.

- **Cleaning:** Wipe the top particleboard surface and metal frame with a damp cloth. Avoid harsh chemicals or abrasive cleaners. For fabric drawers, spot clean with a mild detergent and allow to air dry.
- **Avoid Moisture:** Do not place hot items directly on the surface or expose the dresser to excessive moisture.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure to prevent fading of the fabric drawers.

## TROUBLESHOOTING

Refer to the table below for common issues and their solutions.

Problem	Possible Cause	Solution
Dresser is wobbly.	Uneven floor; loose connections.	Adjust the leveling feet at the bottom of the frame. Check and tighten all assembly screws.

Problem	Possible Cause	Solution
Drawer does not slide smoothly.	Drawer is overloaded; fabric is caught; internal board not fully inserted.	Reduce drawer contents. Ensure no fabric is obstructing the slide path. Verify the MDF board is fully seated at the bottom of the drawer.
Dresser appears unstable.	Anti-tip device not installed; dresser overloaded.	Ensure the anti-tip device is correctly installed and secured to the wall. Do not exceed the recommended weight limits for the top surface or drawers.

## PRODUCT SPECIFICATIONS

---

- **Brand:** Huuger
- **Model:** 12-Drawer Dresser
- **Product Dimensions:** 63"W x 11.7"D x 26.7"H (160cm W x 29.7cm D x 67.8cm H)
- **Item Weight:** 44.5 pounds (20.18 kg)
- **Color:** Black
- **Room Type:** Bedroom, Living Room, Closet, Entryway
- **Material:** P2-grade Particleboard (top), Metal (frame), Fabric (drawers)
- **Assembly Required:** Yes
- **TV Size Compatibility:** 43-70 inches
- **Top Surface Weight Capacity:** Approximately 150 lbs

## Product Size

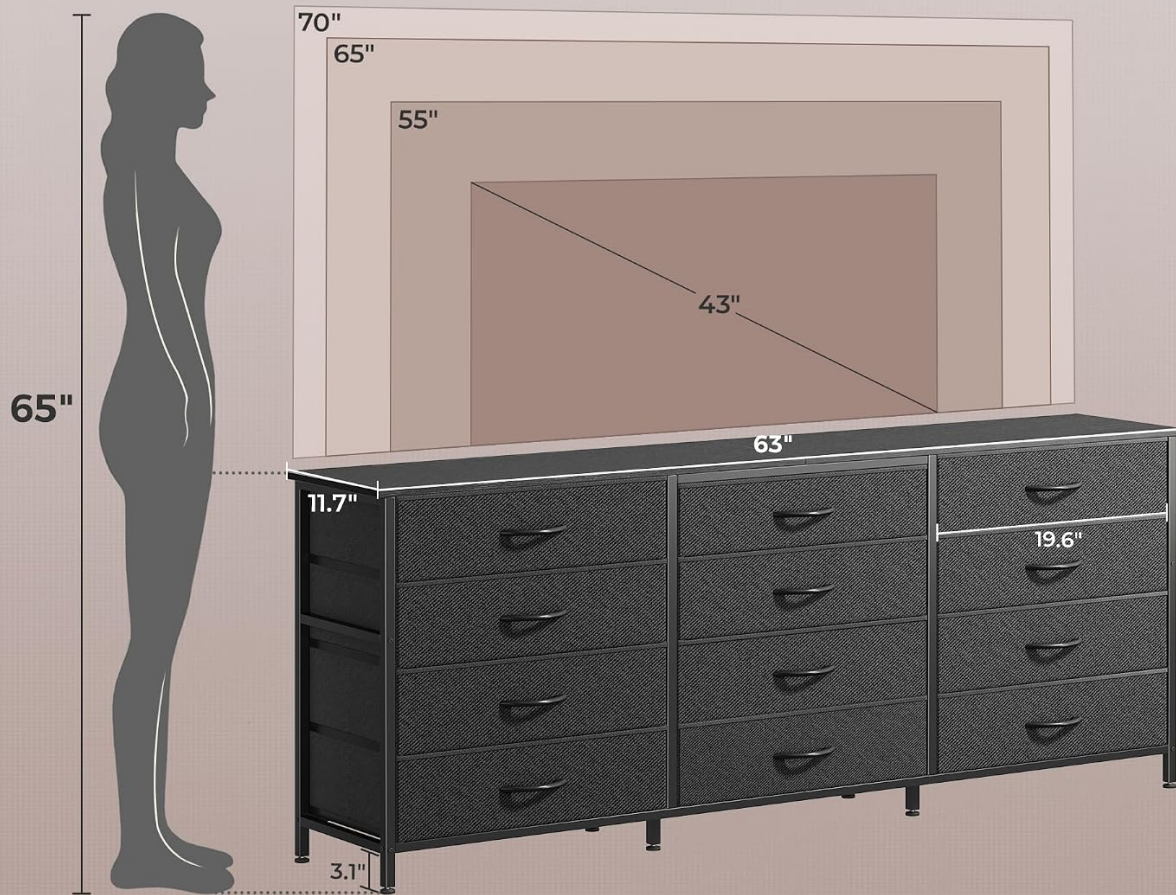


Image 6: Detailed product size diagram, including overall dimensions and TV size compatibility.

## WARRANTY AND CUSTOMER SUPPORT

Huuger stands behind the quality of its products. For specific warranty details, please refer to the documentation included with your purchase or visit the official Huuger website. If you encounter any issues, require replacement parts, or have questions regarding assembly or use, please contact Huuger customer support through the retailer where the product was purchased or via the contact information provided on the Huuger brand store page.

**Contact Information:** Refer to your purchase receipt or the Huuger brand store on Amazon for the most current customer service contact details.