

21560070B

Generic Trimmer Head (Model 21560070B) Instruction Manual

For Straight Shaft Trimmers

1. PRODUCT OVERVIEW

This instruction manual provides guidance for the installation and maintenance of the Generic Trimmer Head 2-Pack, model 21560070B. These trimmer heads are designed as replacement parts for various straight shaft trimmer models, ensuring efficient cutting performance. The package includes two durable trimmer heads for convenience and extended use.



Image 1.1: Top view of the two trimmer heads included in the pack. Each head is black and circular, with pre-installed orange trimmer line.

2. SAFETY INFORMATION

Always prioritize safety when working with power tools. Read and understand the safety instructions provided with your trimmer before installing or operating this replacement head. Failure to follow safety guidelines can result in serious injury.

- Always wear appropriate personal protective equipment (PPE), including eye protection, gloves, and sturdy

footwear.

- Ensure the trimmer engine is off and spark plug wire is disconnected before performing any installation or maintenance.
- Keep hands and feet clear of the cutting head during operation.
- Inspect the trimmer head for damage before each use. Replace if cracked or broken.

3. PACKAGE CONTENTS

Verify that all items are present upon opening the package:

- Two (2) Trimmer Heads (Model 21560070B)

4. COMPATIBILITY

These trimmer heads are compatible with various straight shaft trimmer models, including but not limited to:

- Echo SRM-400, SRM-400AE, SRM-400BE, SRM-400E, SRM-400U
- Echo SRM-340
- Echo SRM-1500, SRM-1500A, SRM-1501
- Echo SRM-2100, SRM-2100SB, SRM-2110
- Echo SRM-2200, SRM-2201
- Echo SRM-2300, SRM-2301, SRM-2310
- Echo SRM-2400, SRM-2400SB, SRM-2410, SRM-2450
- Echo SRM-2500, SRM-2501, SRM-2501S, SRM-2502, SRM-2510
- Echo SRM-2601
- Echo SRM-3000, SRM-3001, SRM-3010, SRM-3100, SRM-3100S, SRM-3110

Refer to your trimmer's owner's manual for specific replacement part requirements.

5. SETUP AND INSTALLATION

Follow these steps to install the new trimmer head:

1. **Prepare the Trimmer:** Ensure the trimmer engine is completely off and cool. Disconnect the spark plug wire to prevent accidental starting.
2. **Remove Old Trimmer Head:** Depending on your trimmer model, you may need a wrench or a locking pin to hold the shaft while unscrewing the old trimmer head. Turn the old head counter-clockwise to loosen and remove it.
3. **Clean the Shaft:** Clean any debris or grass buildup from the trimmer shaft and mounting area.
4. **Install New Trimmer Head:** Align the new trimmer head with the shaft. Screw the new head onto the shaft clockwise until it is securely tightened. Do not overtighten.
5. **Verify Installation:** Gently tug on the trimmer head to ensure it is firmly attached. Reconnect the spark plug wire.



Image 5.1: Angled view of the trimmer heads, illustrating the central attachment mechanism for installation onto a straight shaft trimmer.

6. OPERATING INSTRUCTIONS

Once the trimmer head is securely installed, operate your straight shaft trimmer according to its manufacturer's instructions. The trimmer head is designed for efficient cutting of grass and light brush. Ensure the trimmer line is extended to the appropriate length before starting operation.

7. MAINTENANCE

Regular maintenance helps prolong the life of your trimmer head:

- **Cleaning:** After each use, clean the trimmer head to remove grass clippings, dirt, and debris. Use a stiff brush and avoid harsh chemicals.
- **Inspection:** Periodically inspect the trimmer head for cracks, wear, or damage. Replace the head if any significant damage is observed.
- **Line Replacement:** When the trimmer line wears down, replace it according to the instructions provided with your trimmer or the replacement line.
- **Storage:** Store the trimmer head in a clean, dry place away from direct sunlight and extreme temperatures.

8. TROUBLESHOOTING

If you encounter issues with your trimmer head, consider the following:

- **Poor Cutting Performance:** Check if the trimmer line is too short or worn. Replace the line if necessary. Ensure the trimmer head is securely attached.
- **Trimmer Head Not Spinning:** Verify that the trimmer head is correctly installed and not obstructed by debris. Check your trimmer's drive shaft for issues.
- **Excessive Vibration:** Ensure the trimmer head is properly tightened and balanced. Inspect for any damage to the head or shaft.

For persistent issues, consult your trimmer's owner's manual or contact a qualified service technician.

9. SPECIFICATIONS

Product Name	Trimmer Head 2-Pack
--------------	---------------------

Model Number	21560070B
Internal Item Model Number	99944200907
Compatibility	Straight Shaft Trimmers (Echo SRM-400 series, SRM-340, etc.)
Product Dimensions	13 x 13 x 5 inches (packaging)
Manufacturer	quan123
ASIN	B0F18HG1BP

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the retailer where the product was purchased or contact the manufacturer directly. Keep your proof of purchase for any warranty claims.

© 2024 Generic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question