

[Manuals.plus](#) /

› [Apexcam](#) /

› Apexcam M80PRO 4K 64MP Action Camera User Manual

Apexcam M80PRO

Apexcam M80PRO 4K 64MP Action Camera User Manual

Model: M80PRO | Brand: Apexcam

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your Apexcam M80PRO 4K 64MP Action Camera. Please read this guide thoroughly before using the camera to ensure proper function and to maximize your experience. The M80PRO is designed to capture high-quality photos and videos in various environments, including underwater, with its durable and waterproof design.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- Apexcam M80PRO Action Camera
- Waterproof Case
- 2 x 1350mAh Rechargeable Batteries
- 64GB Micro-SD Card
- Bicycle Bracket
- Helmet Mount with 3M Adhesives
- Adapter Mounts
- Clip
- USB Cable
- Touch and Close Fasteners (straps)
- User Manual
- Various Mounting Accessories



Image: Overview of the Apexcam M80PRO Action Camera and its complete accessory kit, including the camera, waterproof case, batteries, mounts, and cables.

Your browser does not support the video tag.

Video: An unboxing and overview of the action camera package contents, demonstrating how to open the waterproof case and insert the battery and SD card.

3. SETUP

3.1. Inserting the Battery

1. Locate the battery compartment on the bottom of the camera.
2. Slide the battery compartment cover open.
3. Insert a fully charged 1350mAh battery, ensuring the contacts align correctly.
4. Close the battery compartment cover securely.



Image: The Apexcam M80PRO camera with its battery compartment open, illustrating the insertion of one of the two 1350mAh batteries, which provide up to 180 minutes of recording time.

3.2. Inserting the Micro-SD Card

1. Open the side port cover on the camera.
2. Insert the 64GB Micro-SD card (Class 10 or higher recommended) into the designated slot with the gold contacts facing the back of the camera.
3. Gently push until it clicks into place.
4. Close the side port cover.

3.3. Attaching the Waterproof Case

1. Ensure the camera is clean and dry before placing it into the waterproof case.
2. Open the latch on the top of the waterproof case.
3. Carefully insert the camera into the case.
4. Close the latch firmly to ensure a watertight seal.

2*1350mAh battery
ultra-long endurance

180 mins



Image: The Apexcam M80PRO camera securely housed in its waterproof case, demonstrating its capability to be used underwater up to 40 meters (131 feet).

3.4. Mounting Options

The M80PRO comes with various mounts for different activities:

- **Bicycle Bracket:** Attach to handlebars for cycling footage.
- **Helmet Mount:** Use 3M adhesives to secure the camera to a helmet for POV shots.
- **Adapter Mounts:** Utilize these for compatibility with other accessories.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

- To power on, press and hold the Power/Mode button for 3 seconds.
- To power off, press and hold the Power/Mode button for 3 seconds until the screen turns off.

4.2. Mode Selection

Press the Power/Mode button repeatedly to cycle through different modes: Video Recording, Photo Mode, Playback, and Settings.



Image: A visual representation of the camera's dual capabilities: capturing 64MP still photos and recording smooth 4K at 60 frames per second video.

4.3. Recording and Capturing

- In Video Recording mode, press the Shutter/OK button to start recording. Press again to stop.
- In Photo Mode, press the Shutter/OK button to take a picture.

4.4. Zoom Function

The camera features an 8x zoom. Use the Up/Down buttons (if available, or through screen interface) to adjust the zoom level during recording or in photo mode.

WIFI+Apex DV APP

connect the camera to your phone, share anytime anywhere!



Image: Demonstrates the 8x zoom capability of the camera, showing a wide shot of skydivers and a magnified inset of one individual.

4.5. Wi-Fi Connectivity

1. Download the "Apex DV" app from your smartphone's app store (Android/iOS).
2. Turn on Wi-Fi on your camera via the settings menu.
3. Connect your smartphone to the camera's Wi-Fi network (SSID and password will be displayed on the camera screen).
4. Open the Apex DV app to control the camera, view live footage, and transfer files.



Image: The camera's Wi-Fi feature in action, showing how it connects to a smartphone via the Apex DV app for remote control and instant sharing.

5. MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the camera lens and screen. For the waterproof case, rinse with fresh water after saltwater use and allow to air dry.
- **Battery Care:** Store batteries in a cool, dry place. Avoid fully discharging batteries for extended periods. Charge regularly even when not in use.
- **Storage:** When not in use, store the camera and accessories in a protective case away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Camera does not power on.	Low or dead battery.	Charge the battery or replace with a fully charged one.
Cannot record video/take photos.	SD card full or not inserted correctly.	Insert a new SD card, format the current one, or re-insert the card properly.
Poor video/photo quality.	Dirty lens, incorrect settings, or low light.	Clean the lens, adjust resolution/exposure settings, ensure adequate lighting.
Wi-Fi connection issues.	Incorrect password, distance from camera, or app issue.	Verify password, move closer to camera, restart app/camera.

7. SPECIFICATIONS

Feature	Detail
Video Resolution	4K (3840 Pixels)
Photo Resolution	64 MP (Effective)
Waterproof Depth	40 meters (131 feet)
Zoom	8x Optical/Digital Zoom
Lens Type	Wide-angle (170 Degrees)
Display Screen	2 Inch
Battery Capacity	2 x 1350mAh (included)
Storage	Micro-SD, 64GB included (Class 10, UHS-3)
Connectivity	HDMI, USB, Wi-Fi
Image Stabilization	Digital
Operating System Compatibility	Android, iOS
Product Dimensions	6 x 10 x 6 cm; 480 g

8. WARRANTY AND SUPPORT

The Apexcam M80PRO Action Camera comes with a 2-year warranty. For technical support, warranty claims, or further assistance, please refer to the contact information provided in the original product packaging or visit the official Apexcam website. Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question