

[Manuals.plus](#) /

› [CYCPLUS](#) /

› CYCPLUS Cycling Out Front Bike Mount Instruction Manual

CYCPLUS Z1

CYCPLUS Cycling Out Front Bike Mount Instruction Manual

Model: Z1

PRODUCT OVERVIEW

The CYCPLUS Z1 Cycling Out Front Bike Mount is designed to securely hold your cycling computer on your bicycle handlebars. It provides an optimal viewing position for enhanced display readability and increased safety during rides. This mount is compatible with a wide range of cycling computers and is engineered for stability and ease of installation.



Figure 1: CYCPLUS Z1 Cycling Out Front Bike Mount.

PACKAGE CONTENTS

Before beginning installation, please verify that all components are present in the package:

- 1 x CYCPLUS Z1 Bike Mount
- 2 x Screws

- 2 x Washers
- 1 x Screwdriver (Hex Key)

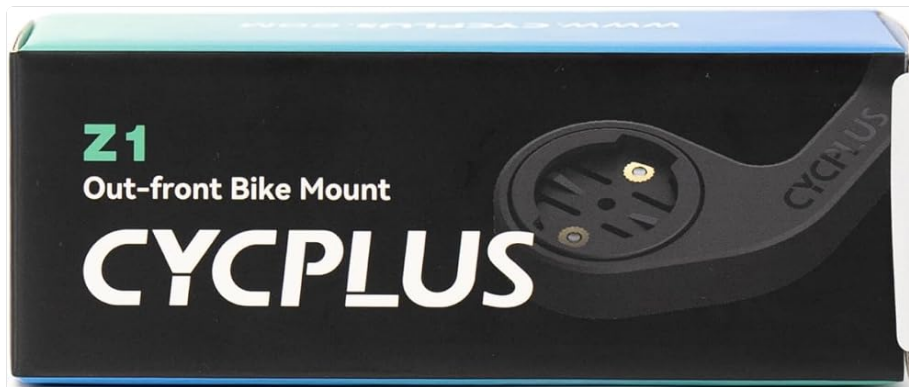


Figure 2: Included components: (1) Packing box, (2) Bike mount Z1, (3) Screws, (4) Washers, (5) Screwdriver.

SETUP AND INSTALLATION

The CYCPLUS Z1 handlebar mount is designed for quick and easy installation. It is specifically designed to fit 31.8 mm diameter handlebars.

1. **Position the Mount:** Open the mount clamp and position it on your bicycle handlebar. Ensure the mount is centered and oriented correctly for optimal viewing of your cycling computer.

CAMPATIBLE WITH CYCLING COMPUTER



Figure 3: Initial placement of the mount on the handlebar.

2. **Secure the Clamp:** Align the two halves of the clamp around the handlebar. Insert the provided screws through the holes and loosely thread the washers and nuts.

EASY TO INSTALL



Figure 4: Inserting screws to secure the mount clamp.

3. **Tighten the Screws:** Use the included screwdriver (hex key) to tighten the screws. Tighten them evenly to ensure a secure and stable fit. Do not overtighten.



Figure 5: Using the hex key to tighten the mount screws.

4. **Attach Cycling Computer:** Once the mount is securely fastened, align your compatible cycling computer with the mount's interface and twist it into place until it clicks.



Figure 6: Attaching the cycling computer to the installed mount.

OPERATING INSTRUCTIONS

The CYCPLUS Z1 mount is designed for simple and secure attachment of your cycling computer.

Compatibility

This mount offers universal compatibility with various cycling computers. It is compatible with all CYCPLUS wireless bike computers and a wide range of Garmin Edge GPS computers, including models 25, 130, 200, 500, 510, 520, 530, 800, 810, 830, and 1000. It also supports other standard bike computer models. Please note, it is **not** compatible with Bryton and Wahoo devices.

STURDY MATERIAL SHOCKPROOF DESIGN



Figure 7: Visual representation of compatible cycling computer brands and models.

Attaching and Detaching Your Computer

- To attach, align the tabs on your cycling computer with the slots on the mount and rotate clockwise until it locks into place.
- To detach, press the release tab (if present on your computer) or rotate the computer counter-clockwise until it disengages from the mount.

MAINTENANCE

To ensure the longevity and optimal performance of your CYCPLUS Z1 bike mount, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the mount regularly with a damp cloth to remove dirt, dust, and grime. Avoid using harsh chemicals or abrasive cleaners, as these can damage the material.
- **Inspection:** Periodically check the mount for any signs of wear, cracks, or damage. Ensure the screws remain tight

and the mount is securely fastened to the handlebar.

- **Storage:** If removing the mount for extended periods, store it in a clean, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter any issues with your CYCPLUS Z1 bike mount, refer to the following common problems and solutions:

- **Mount does not fit 31.8mm handlebar:**

Ensure your handlebar diameter is exactly 31.8mm. This mount is designed specifically for this size. If your handlebar is smaller, you may need to use shims (not included) to achieve a secure fit. If it's larger, the mount is not compatible.

- **Cycling computer wavers or feels unstable:**

Check that the mount screws are tightened securely but not overtightened. Ensure the cycling computer is fully clicked into place on the mount. The mount is designed to be lightweight and stable, even on rough terrain.

- **Difficulty attaching/detaching cycling computer:**

Ensure the computer's tabs are correctly aligned with the mount's slots. Apply gentle pressure and rotate. Do not force the computer onto the mount. If the issue persists, inspect both the mount and the computer's interface for any obstructions or damage.

SPECIFICATIONS



Figure 8: Key dimensions of the CYCPLUS Z1 bike mount.

Feature	Detail
Model Number	Z1
Brand	CYCPLUS
Item Weight	2.08 ounces (27.86g)
Package Dimensions	5.12 x 1.93 x 1.81 inches
Handlebar Diameter Compatibility	31.8 mm (1.25 inches)
Material	Nylon + 15% Fibre (for rigidity)
Special Features	Heat Resistant, Vibration-resistant design
Color	Black
Country of Origin	China

WARRANTY AND SUPPORT

CYCPLUS offers lifetime after-sales service from the date of purchase for this product. If you have any questions,

encounter any issues, or require assistance, please do not hesitate to contact our dedicated customer support team. For support, you may contact us via email at:steven@cycplus.com Please provide your product model (Z1) and details of your inquiry when contacting support to ensure a prompt and efficient resolution.

© 2025 CYCPLUS. All rights reserved.
Product UPC: 6976297861287

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question