

OUTON B0F18W1236

OUTON LED Dimmable Tree Floor Lamp (Model B0F18W1236) Instruction Manual

Model: B0F18W1236

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your OUTON LED Dimmable Tree Floor Lamp. Please read this manual thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Ensure the lamp is unplugged before assembly, cleaning, or replacing parts.
- Do not use the lamp in wet locations or near water.
- Keep the lamp away from heat sources.
- Use only the specified LED bulbs provided with the lamp.
- Do not attempt to modify the lamp or its components.
- Ensure the base is stable on a flat surface to prevent tipping.
- Keep the remote control away from children.

WHAT'S IN THE BOX

Verify that all components are present before beginning assembly:

- Lamp Base
- Lamp Pole Sections (multiple)
- Lamp Head Assembly with 3 Rotatable Lights
- 3 x LED Bulbs (pre-installed or separate)
- Power Adapter
- Remote Control

Touch-Slid Dimming Technology

3000K-6500K & 1%-100% dimmable

 ON/OFF & 1 Hour Timer

 Adjust Color Temperature



Image: All components included in the OUTON Tree Floor Lamp package.

SETUP AND ASSEMBLY

Assembly is straightforward and requires no additional tools.

1. Carefully unpack all components from the box.
2. Connect the lamp pole sections by gently twisting them clockwise until secure. Ensure the wires pass freely through the sections.
3. Attach the lamp head assembly to the top pole section.
4. Secure the assembled pole to the lamp base by twisting it clockwise until firm.
5. Insert the LED bulbs into the lamp heads if not pre-installed.
6. Connect the power adapter to the lamp and then plug it into a standard electrical outlet.

Your browser does not support the video tag.

Video: This video demonstrates the assembly process of the OUTON LED Tree Floor Lamp, showing how to connect the pole sections and attach the base and lamp heads.

Your browser does not support the video tag.

Video: This video illustrates the assembly and initial setup of the dimmable LED floor lamp, including connecting components and powering on.

OPERATING INSTRUCTIONS


Power On/Off and Brightness Adjustment

The lamp can be controlled via the touch-slide panel on the lamp pole or the included magnetic remote control.

- **Touch-Slide Control:** Gently slide your finger along the touch panel on the lamp pole to adjust brightness from 1% to 100%. Tap the power button to turn the lamp on or off.
- **Remote Control:** Use the power button on the remote to turn the lamp on or off. Use the brightness adjustment buttons (+/-) to increase or decrease light intensity.

Touch-Slid Dimming Technology

3000K-6500K & 1%-100% dimmable

 ON/OFF & 1 Hour Timer

 Adjust Color Temperature



Image: Demonstration of touch-slide dimming and power control on the lamp pole.

Color Temperature Selection

The lamp offers 4 color temperature settings, ranging from warm to cool light.

- **Touch-Slide Control:** Tap the color temperature button on the lamp pole to cycle through the available color temperatures.

- **Remote Control:** Use the 'K' button on the remote to switch between 3000K (Warm), 4000K (Warm White), 5000K (Day Light), and 6500K (Cool White).

Customize Color of Light



Warm

Warm White

Day Light

Cool White

3000K

4000K

5000K

6500K

Fully Dimmable Brightness



☀ 1%

☀ 100%

Image: Visual representation of the four adjustable color temperatures.

Rotatable Lamp Heads

Each of the three lamp heads can be adjusted to direct light precisely where needed.

- The lamp heads rotate 350° horizontally and tilt 180° vertically.
- Gently adjust each lamp head by hand to achieve the desired lighting angle.

Full-Angle Flexible Lighting

The head of the tree floor lamp rotates 350° and tilts 180°



Image: Illustration of the flexible rotation and tilt of the lamp heads.

Scene Modes and Timer Function

The remote control provides access to preset scene modes and a convenient timer function.

- **Scene Modes:** Use the dedicated buttons on the remote for preset modes such as Reading, Working, Night Light, or Breastfeeding.
- **1-Hour Timer:** Press the "1H" button on the remote to activate a 1-hour auto-off timer. The lamp will turn off automatically after one hour.
- **Memory Function:** The lamp remembers your last brightness and color temperature settings when turned off and restores them upon powering on.

Multiple Lighting Modes

Customize your lighting scene in one second on the remote



Image: Examples of different lighting modes for various activities.



Image: The 1-hour timer function in use for bedtime reading.



Image: The memory function retaining the last lighting settings.

MAINTENANCE

- **Cleaning:** Disconnect the power before cleaning. Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** The lamp uses specific 24V 9W LED bulbs. If replacement is necessary, contact customer service for compatible bulbs. Do not use standard 120V bulbs.
- **General Care:** Regularly check the power cord for any damage. Ensure all connections remain secure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lamp does not turn on.	Power cord not properly connected. Outlet not functioning. Bulbs not installed correctly or faulty.	Check power cord connection to lamp and outlet. Test the outlet with another device. Ensure bulbs are screwed in firmly. Replace bulbs if necessary (use specified 24V 9W LED bulbs).
Remote control not working.	Batteries are dead or incorrectly inserted. Remote is too far from the lamp. Obstruction between remote and lamp.	Replace remote batteries (AAA). Ensure correct polarity. Move closer to the lamp (within 50 ft). Remove any objects blocking the signal path.
Light flickers or is dim.	Loose bulb connection. Incorrect bulb type used. Power supply issue.	Tighten bulbs. Ensure only the provided 24V 9W LED bulbs are used. Contact customer support if the issue persists.

SPECIFICATIONS

Feature	Detail
Brand	OUTON
Model Number	B0F18W1236
Product Dimensions	10"D x 10"W x 67"H
Item Weight	5.04 Kilograms
Light Source Type	LED
Number of Light Sources	3
Wattage	36 watts
Color Temperatures	3000K-6500K (4 settings)
Brightness Adjustment	1% to 100% Dimmable
Switch Type	Push Button, Remote, Touch Slide
Additional Features	Adjustable Arm, Adjustable Color Temperature, Dimmable, Memory Function, 1-Hour Timer
Base Material	Metal
Finish Type	Matte & Polished
Power Source	Corded Electric
Indoor/Outdoor Usage	Indoor
Included Components	Remote Control, 3 LED Bulbs

WARRANTY AND SUPPORT

Your OUTON LED Dimmable Tree Floor Lamp comes with a **1-year manufacturer's warranty**. For any questions, technical assistance, or warranty claims, please contact OUTON customer service. We offer 24/7 customer service and 12-month support to ensure your satisfaction.

For further assistance, please visit the [OUTON Store on Amazon](#).

