



Manuals.plus /

› VanSmaGo /

› VanSmaGo Star Planetarium Galaxy Ceiling Projector Instruction Manual

VanSmaGo DWB

VanSmaGo Star Planetarium Galaxy Ceiling Projector Instruction Manual

Model: DWB | Brand: VanSmaGo

1. INTRODUCTION

The VanSmaGo Star Planetarium Galaxy Ceiling Projector is designed to transform your space into a celestial environment. This device projects stunning star and galaxy visuals onto walls and ceilings, offering an immersive experience. It features adjustable projection, multiple scene options, and user-friendly controls.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x VanSmaGo Star Planetarium Galaxy Ceiling Projector
- 10 x Film Discs (one pre-inserted)
- 1 x Type-C USB Cable
- 1 x User Manual
- 1 x Cleaning Cloth



Image: The VanSmaGo Star Planetarium Galaxy Ceiling Projector with its various film discs, USB-C cable, and user manual.

3. PRODUCT FEATURES

- **10 Immersive Cosmic Scenes:** Includes Moon, Solar System, Earth, Saturn, Pillars of Creation, Virgo Supercluster, Wormhole, Spiral Galaxy, Rotating Nebula, and Marine Organism. Each disc provides a unique projection.
- **HD Star Projection & Wide Coverage:** Projects clear, high-brightness visuals across walls and ceilings, covering a large area (135.19-255.64 sq. ft. at 6.56-9.84 ft projection distance).
- **360-Degree Rotation:** The projection screen supports full 360-degree rotation for dynamic celestial displays.
- **Adjustable Focus:** A knob on the top allows for focal length adjustment to ensure sharp images at various distances.
- **Simple Button Controls:** Easy-to-use buttons for timer, projection rotation, brightness adjustment, color adjustment, night light power, and projection power.
- **Night Light Function:** Built-in night light with adjustable brightness and multiple colors to set the ambiance.

- **Ultra Quiet Operation:** Designed for minimal noise, ensuring a peaceful environment.
- **Auto-Off Timer:** Features a timer for automatic shut-off after a specified duration (1H, 2H, 4H).

10 PCS HD Film Discs



Moon



Solar System



Earth



Saturn



Pillars of Creation



Virgo Supercluster



Wormhole



Spiral Galaxy



Spiral Galaxy



Marine Organism

Image: A selection of the 10 included film discs, each labeled with its cosmic scene.

7-Color Gradient Night Light



Image: The projector showcasing its 7-color gradient night light feature.


Super Large Projection Area Covering the entire ceiling and walls

6.56-9.84ft

Projection Distance

135.19-255.64sq.ft

Projection Area

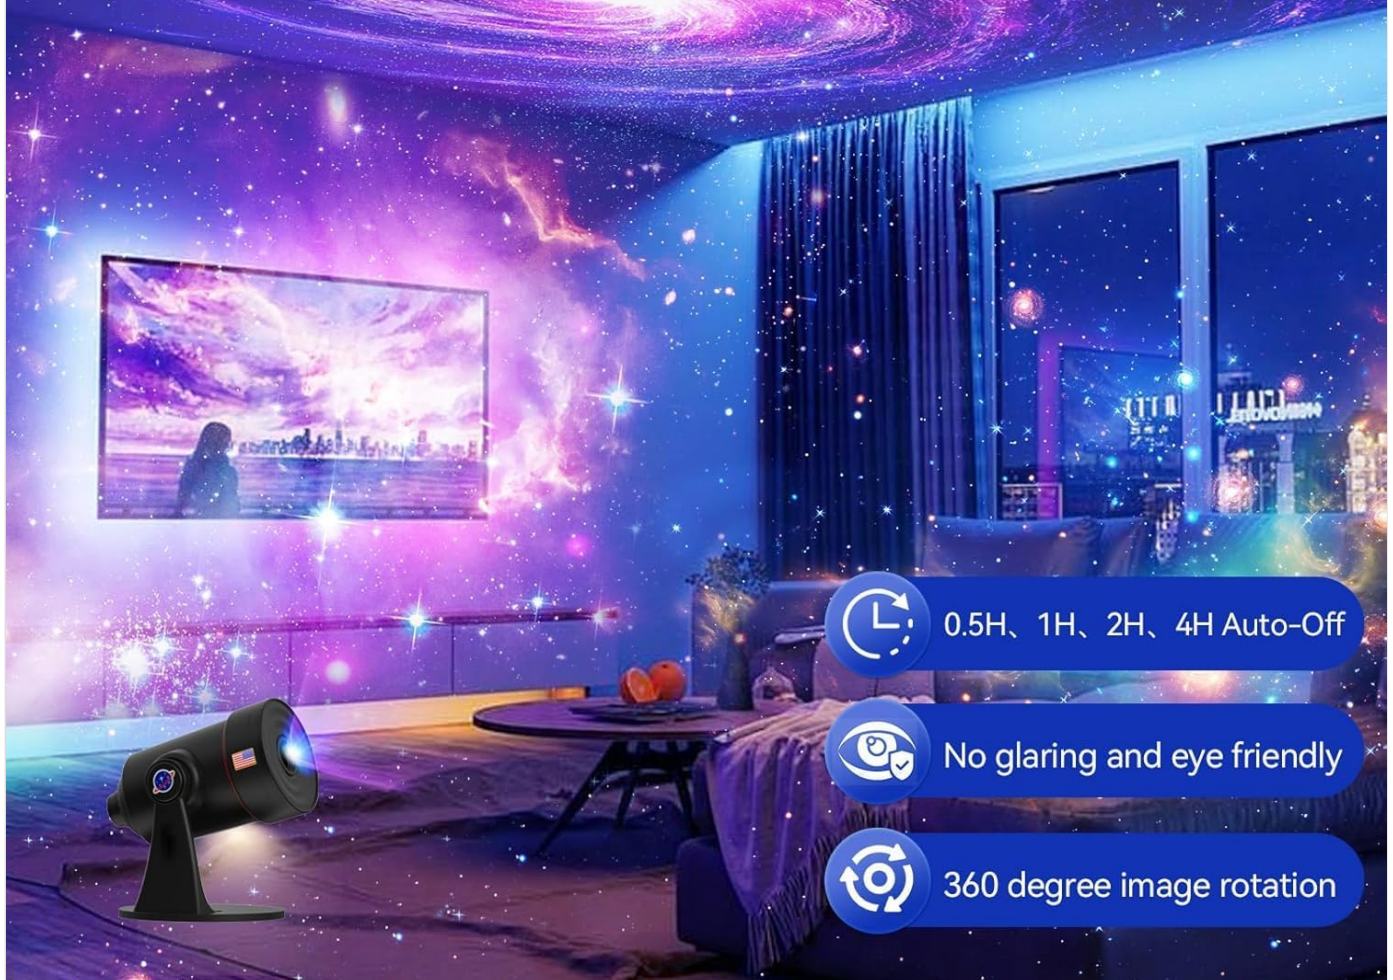

0.5H、1H、2H、4H Auto-Off



No glaring and eye friendly



360 degree image rotation

Image: Visual representation of the projector's wide coverage and adjustable focus mechanism.

4. SETUP

- 1. Unpack the Projector:** Carefully remove the projector and all accessories from the packaging.
- 2. Connect Power:** Connect the provided Type-C USB cable to the projector's DC 5V port and plug the other end into a compatible USB power adapter (not included).
- 3. Insert Film Disc:**
 - Locate the film disc tray on the side of the projector.
 - Gently pull out the tray.
 - Place your desired film disc into the tray, ensuring it is correctly oriented (refer to the disc for "UP" marking if available).
 - Slide the tray back into the projector until it clicks into place.
- 4. Position the Projector:** Place the projector on a flat, stable surface. For optimal projection, position it 6.56 to 9.84

feet away from the desired projection surface (wall or ceiling).

5. **Adjust Angle:** The projector can be tilted to direct the projection to your preferred area.

Your browser does not support the video tag.

Video: A seller-provided overview of the galaxy projector, including unboxing, component identification, and initial setup steps.

Your browser does not support the video tag.

Video: A seller-provided demonstration on how to easily change the film discs and adjust the projector's angle for optimal display.

5. OPERATING INSTRUCTIONS

The projector features intuitive button controls on its top surface:

- **Power Button:** Press to turn the projector ON or OFF.
- **Timer Button:** Cycle through timer options (1 hour, 2 hours, 4 hours auto-off). The projector will automatically shut down after the selected time.
- **Rotation Speed Button:** Adjust the rotation speed of the projected image. Options typically include slow, medium, fast, or static.
- **Brightness Adjustment:** Increase or decrease the brightness of the projection.
- **Color Adjustment (Night Light):** Change the color of the ambient night light ring around the projector.
- **Focus Knob:** Rotate the knob located near the projection lens to sharpen the image.

Your browser does not support the video tag.

Video: A seller-provided demonstration of the projector's controls, including power, timer, rotation speed, and focus adjustment, along with various projected scenes.

Your browser does not support the video tag.

Video: A seller-provided video highlighting the meteor light effects and various projection scenes, demonstrating the dynamic capabilities of the projector.

6. MAINTENANCE

- **Cleaning the Lens:** Use the provided cleaning cloth or a soft, lint-free cloth to gently wipe the projection lens. Avoid abrasive materials or harsh chemicals.
- **Cleaning the Device:** Wipe the exterior of the projector with a dry, soft cloth. Do not use liquid cleaners directly on the device.
- **Storing Film Discs:** Store film discs in their protective cases in a cool, dry place to prevent dust and damage.
- **Storage:** When not in use for extended periods, store the projector in its original packaging or a protective case in a dry environment.

7. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------------------------------------|--|--|
| No projection / Device not turning on | Power cable not connected properly; No power supply. | Ensure the Type-C USB cable is securely connected to both the projector and a working power source. Check the power adapter. |
| Projected image is blurry | Focus is not adjusted; Projector too close/far from surface. | Rotate the focus knob on the top of the projector until the image is clear. Adjust the distance of the projector from the projection surface (recommended 6.56-9.84 ft). |
| Film disc not displaying correctly | Disc inserted incorrectly; Disc is dirty or damaged. | Remove the disc tray and re-insert the film disc, ensuring it is oriented correctly. Clean the disc with a soft cloth. Try a different disc. |
| Projection is too dim | Room is too bright; Brightness setting is low. | Ensure the room is as dark as possible for best results. Increase the brightness using the control buttons. |

8. SPECIFICATIONS

- **Brand:** VanSmaGo
- **Model Number:** DWB
- **Product Dimensions:** 15.75 x 12.7 x 14.48 cm
- **Item Weight:** 349.27 g
- **Power Input:** DC 5V (via Type-C USB)
- **Material:** Plastic
- **Finish Type:** Matte
- **Lamp Type:** Night Light
- **Switch Type:** Push Button
- **Projection Coverage:** 135.19-255.64 sq. ft. (at 6.56-9.84 ft distance)

9. WARRANTY AND SUPPORT

Specific warranty information is not provided in the product details. For any questions or support, please contact VanSmaGo customer service through the platform where the product was purchased.