

aqinsfai HX6930, HX6970, HX6920, HX6910

aqinsfai Compatible Electric Toothbrush Handle Replacement User Manual

INTRODUCTION

This manual provides instructions for the aqinsfai Compatible Electric Toothbrush Handle Replacement. This product is designed to be a direct replacement for original Philips Sonicare electric toothbrush handles, specifically compatible with models HX6930, HX6970, HX6920, and HX6910. It offers the same powerful sonic technology and multiple cleaning modes for effective oral care.

SETUP

1. **Initial Charge:** Before first use, ensure the handle is fully charged. Place the handle on a compatible Philips Sonicare charger. The battery indicator lights will show charging progress.
2. **Attach Brush Head:** Align your compatible Philips Sonicare brush head with the metal shaft on the handle. Push the brush head down firmly until it clicks into place.
3. **First Use:** Moisten the brush head and apply a small amount of toothpaste. Place the brush head against your teeth at a slight angle towards the gum line. Press the power button to start brushing.



Image: Various compatible electric toothbrush handles showing different cleaning modes.

OPERATING MODES

Your toothbrush handle features five distinct cleaning modes to suit various oral care needs. Press the power button repeatedly to cycle through the modes.

- **Clean (Standard Mode):** Provides a thorough, full oral cleaning. Recommended duration: 2 minutes.
- **Sensitive Mode:** Offers gentle cleaning for sensitive gums and teeth. Recommended duration: 2 minutes.
- **Massage Mode:** Gently stimulates gums. Recommended duration: 2 minutes.
- **Go Care (Rapid Cleaning Mode):** Designed for quick cleaning. Recommended duration: 1 minute.
- **Max Care (Gum Care Mode):** Combines full mouth cleaning with gentle care for problem areas and the gum line.

The handle includes a built-in timer that provides a vibrating reminder every 30 seconds to guide you to brush different quadrants of your mouth. The toothbrush will automatically shut off after 2 minutes of brushing (or 1 minute for Go Care mode).

MAINTENANCE

- **Cleaning the Handle:** After each use, rinse the brush head and the handle under running water. Wipe the handle with a soft, damp cloth. Do not immerse the handle in water for extended periods.
- **Charging:** Recharge the handle when the battery indicator shows low power. A full charge typically takes several hours.
- **Storage:** Store the toothbrush handle in a dry place when not in use. Ensure it is clean and dry before storing.
- **Brush Head Replacement:** For optimal performance and hygiene, replace your brush head every 3 months, or sooner if the bristles are frayed.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Toothbrush does not turn on.	Battery may be depleted. Place the handle on the charger for several hours.
Weak vibration or reduced performance.	Battery may be low. Recharge the handle. Ensure the brush head is securely attached.
Toothbrush not charging.	Ensure the charger is plugged in correctly and the handle is properly seated on the charger. Check for any debris on the charging contacts.
Unusual noise during operation.	Ensure the brush head is correctly attached. If the noise persists, contact customer support.

SPECIFICATIONS

- **Brand:** aqinsfai
- **Model Compatibility:** HX6930, HX6970, HX6920, HX6910 (Compatible with Philips Sonicare)
- **Cleaning Modes:** Clean, Sensitive, Massage, Go Care, Max Care
- **Timer Function:** 30-second interval timer, 2-minute automatic shut-off (1 minute for Go Care)
- **Color (This Variant):** White
- **Item Weight:** Approximately 50 Grams
- **Package Includes:** 1 main unit (handle with circuit board and battery)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the seller directly. Keep your proof of purchase for any warranty claims.