



[Manuals.plus](#) /

> [MYICY](#) /

> MYICY 27-Inch Evaporative Air Cooler User Manual

## MYICY 200Y

# MYICY 27-Inch Evaporative Air Cooler User Manual

Model: 200Y

## INTRODUCTION

---

This user manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your MYICY 27-Inch Evaporative Air Cooler. Please read this manual thoroughly before using the appliance and retain it for future reference.



Image: Front view of the MYICY 27-Inch Evaporative Air Cooler, showing its sleek white design with a blue inner ring and a remote control and ice packs beside it.

## SAFETY INFORMATION

---

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using this appliance.

- Ensure the power supply voltage matches the rating label on the appliance.
- Do not operate the cooler with a damaged cord or plug.
- Unplug the appliance before cleaning, performing maintenance, or when not in use.
- Do not immerse the appliance, cord, or plug in water or other liquids.

- Keep the appliance out of reach of children and pets due to its bladeless design for enhanced safety.
- Do not block air inlets or outlets.
- Use only on a flat, stable surface to prevent tipping.
- Do not use outdoors or in wet environments.

## PACKAGE CONTENTS

---

Verify that all items are present in the package:

- 1 x MYICY Evaporative Air Cooler (Model 200Y)
- 1 x Remote Control
- 4 x Ice Packs
- 1 x User Manual (this document)

## PRODUCT OVERVIEW

---

Familiarize yourself with the main components of your evaporative air cooler.

# 27 INCH Height for Cooling Performance



Package Weight:

11Lbs



Volatge:

120V/60Hz



Power:

80W



Image: Diagram showing the dimensions of the MYICY Evaporative Air Cooler, which is 27 inches tall, 10 inches deep, and 9 inches wide. It also indicates a package weight of 11 lbs, voltage of 120V/60Hz, and power of 80W.

## Key Features:

- **Bladeless Design:** Enhances safety, especially around children and pets.
- **Control Panel:** Located on the top, with touch-sensitive buttons for various functions.
- **Air Outlet:** Front circular opening for air discharge.
- **Water Tank:** 1-gallon capacity, located at the bottom, with a visible water level indicator. Features dual tanks for top-fill convenience and a removable bottom tank for cleaning.
- **Rear Grille & Filter:** Removable for easy cleaning and maintenance.

- **Built-in Handle:** For easy portability.

## SETUP

---

Follow these steps for initial setup:

1. **Unpack:** Carefully remove the air cooler and all accessories from the packaging.
2. **Placement:** Place the cooler on a firm, level surface. Ensure there is adequate space around the unit for proper airflow.
3. **Prepare Ice Packs:** If using ice packs, place them in a freezer for several hours until completely frozen. These can be used without adding water directly to the ice packs.
4. **Fill Water Tank:**
  - Open the top cover of the water tank.
  - Pour clean, cool water into the tank. Do not exceed the "MAX" water level indicator.
  - For enhanced cooling, add the frozen ice packs directly into the water tank.
  - Close the top cover securely.



Image: Illustration showing how to fill the 1-gallon water tank of the evaporative air cooler, highlighting the "Max" and "Min" water level indicators and the detachable bottom tank.

5. **Plug In:** Insert the power plug into a standard 120V AC electrical outlet.

## OPERATING INSTRUCTIONS

Your MYICY Evaporative Air Cooler offers multiple modes and speeds for customized comfort. It can be controlled via the top panel or the included remote control.

# Remote control & Panel Control

Two convenient operation ways for effortless adjustment

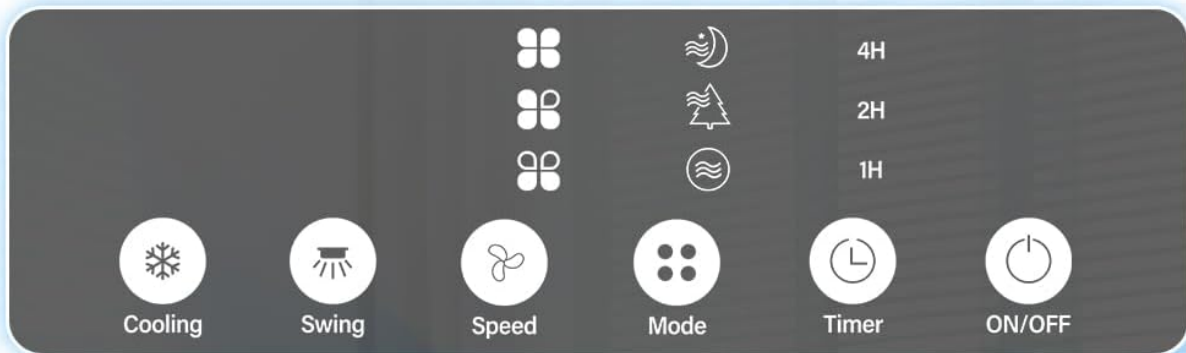


Image: A user operating the MYICY Evaporative Air Cooler with a remote control from a distance of 20 feet, showing the control panel icons for Cooling, Swing, Speed, Mode, Timer, and ON/OFF.

## Control Panel & Remote Functions:

- **ON/OFF Button:** Press to turn the unit on or off.
- **Speed Button:** Cycles through 3 fan speeds: Low (20 ft/s), Medium (23 ft/s), High (26 ft/s).
- **Mode Button:** Selects from 4 operating modes:
  - **Normal:** Constant airflow at selected speed.
  - **Natural:** Simulates natural breeze with varying fan speeds.
  - **Sleep:** Gradually reduces fan speed and operates quietly for undisturbed sleep.
  - **Cooling:** Activates evaporative cooling function (requires water in tank).

# 4 Modes & 3 Speeds

Meet Various Needs

## 4 Modes



Normal



Natural



Sleep



Cooling

## 3 Speeds



Low

20 ft/s



Medium

23 ft/s



High

26 ft/s



Image: Visual representation of the 4 modes (Normal, Natural, Sleep, Cooling) and 3 speeds (Low, Medium, High) available on the MYICY Evaporative Air Cooler.

- **Swing Button:** Activates or deactivates the 360° automatic oscillation feature for wider air distribution.
- **Timer Button:** Sets the auto-off timer for up to 7 hours (1H, 2H, 4H options).

### Using the Remote Control:

The remote control allows operation from up to 20 feet away. Ensure the remote is pointed towards the front of the unit for optimal signal reception. The remote requires 2 AAA batteries (not included).

Your browser does not support the video tag.

Video: A short demonstration of the MYICY Windowless Air Conditioner, showing its operation and features, including the bladeless design and control panel interaction.

## MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and longevity of your air cooler.

### Cleaning the Water Tank:

1. Unplug the appliance from the power outlet.
2. Remove the bottom water tank by pulling it out.
3. Empty any remaining water.
4. Clean the tank with a soft cloth and mild detergent. Rinse thoroughly with clean water.
5. Allow the tank to air dry completely before reinserting.



Image: Visual guide demonstrating the easy removal and cleaning of the filter and water tank components of the evaporative air cooler, ensuring fresh airflow.

### Cleaning the Filter and Cooling Pad:

1. Unplug the appliance.
2. Remove the rear grille.
3. Carefully remove the filter and cooling pad.
4. Rinse the filter and cooling pad under running water to remove dust and debris. For stubborn dirt, use a soft brush.
5. Allow them to dry completely before reassembling.

### Exterior Cleaning:

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

## TROUBLESHOOTING

If you encounter issues with your air cooler, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Unit does not turn on.	No power supply; Power cord not properly connected.	Check if the unit is plugged into a working outlet; Ensure the power cord is securely connected.
Weak airflow.	Air filter or cooling pad is dirty; Water tank is empty.	Clean the air filter and cooling pad; Refill the water tank.
No cooling effect.	Water tank is empty; Cooling mode not activated.	Fill the water tank; Select "Cooling" mode.
Unusual noise.	Unit not on a level surface; Obstruction in air path.	Place the unit on a flat, stable surface; Check for and remove any obstructions.
Remote control not working.	Batteries are dead or incorrectly inserted; Obstruction between remote and unit.	Replace batteries and ensure correct polarity; Remove any obstructions.

## SPECIFICATIONS

Feature	Detail
Brand	MYICY
Model Name	200Y
Dimensions (D x W x H)	10.24"D x 9.84"W x 26.38"H
Item Weight	11 lbs
Voltage	120 Volts
Noise Level	35 dB
Air Flow Capacity	250 Cubic Feet Per Minute (CFM)
Floor Area Coverage	Up to 250 Square Feet
Water Tank Capacity	1 Gallon
Number of Speeds	3 (Low, Medium, High)
Modes	Normal, Natural, Sleep, Cooling
Timer	7-hour auto-off timer
Control Type	Remote, Touch Panel

## WARRANTY AND SUPPORT

MYICY provides a 1-year replacement warranty for this product. For any questions, concerns, or support needs regarding your evaporative air cooler, please contact us through Amazon or refer to the contact information provided in this manual. We aim to reply within 24 hours.

For further assistance, you may visit the official MYICY store on Amazon: [MYICY Amazon Store](#)

