

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KRPTQJoo](#) /

› [KRPTQJoo Replacement TV Remote Control User Manual for Samsung Smart Televisions \(ASIN: B0F19F7PDM\)](#)

KRPTQJoo B0F19F7PDM

KRPTQJoo Replacement TV Remote Control User Manual

For Samsung Smart Televisions

1. INTRODUCTION

This manual provides instructions for the KRPTQJoo replacement remote control for Samsung Smart Televisions. This remote is designed as a direct replacement and does not require any pairing or programming. Simply insert batteries and begin use.

Important Note: This remote is not universal. It is specifically designed to be compatible with the Samsung TV models listed in this manual. Some buttons may not function if your specific TV model does not support the corresponding feature. Always refer to your television's original manual for feature compatibility.

2. COMPATIBLE TV MODELS

This replacement remote control is compatible with various Samsung Smart Television models, including but not limited to:

- UE60JU6850U, UE60JU6870U, UE60JU6872U
- UE65JU6400K, UE65JU6400U, UE65JU6400W, UE65JU6450U, UE65JU6470U, UE65JU6475U
- UE75JU6400K, UE75JU6400U, UE75JU6400W
- UE32J6300AK, UE32J6300AW, UE32J6302AK, UE32J6350SU, UE32J6370SU
- UE40J6200AU, UE40J6200AW, UE40J6202AK, UE40J6250SU, UE40J6270SU, UE40J6272SU, UE40J6275SU, UE40J6300AK

If your model number is not listed, please contact customer support for assistance.

3. SPECIFICATIONS

Product Name	Replacement TV Remote Control
Brand	KRPTQJoo
Model (ASIN)	B0F19F7PDM
Power Source	2 x AAA Batteries (not included)

Compatible Devices	Samsung Smart Televisions
Color	Black

4. SETUP

4.1 Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.

Note: Batteries are not included and must be purchased separately. Always use new batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.

4.2 Initial Use

This remote control is designed to work immediately with compatible Samsung Smart Televisions without any programming or pairing. After installing the batteries, point the remote control towards your television and press the **Power** button to turn on your TV.

5. OPERATING THE REMOTE CONTROL

5.1 Remote Control Layout



Figure 1: Front view of the remote control. This image displays the full button layout including power, source, number pad, volume, channel controls, navigation buttons, and special function keys like Smart Hub, Menu, Tools, and colored buttons (A, B, C, D).



Figure 2: Back view of the remote control. This image shows the smooth, ergonomic design and the location of the battery compartment cover.

5.2 Basic Functions

- **Power Button:** Turns the TV on or off.
- **Source Button:** Selects input sources (HDMI, AV, etc.).
- **Number Pad (0-9):** Directly enters channel numbers.
- **VOL +/- Buttons:** Adjusts the volume level.
- **CH +/- Buttons:** Changes channels sequentially.
- **Mute Button:** Mutes or unmutes the TV sound.

- **Menu Button:** Accesses the TV's main menu.
- **Smart Hub Button:** Opens the Smart Hub interface for apps and streaming services.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used to navigate menus and select options.
- **Return Button:** Goes back to the previous screen or menu.
- **Exit Button:** Exits the current menu or application.
- **Colored Buttons (A, B, C, D):** These buttons perform specific functions depending on the TV model or current application. Refer to your TV's on-screen prompts.

6. MAINTENANCE

6.1 Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

6.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both AAA batteries at the same time. Dispose of used batteries according to local regulations.

6.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Solution
Remote control is not working.	<ul style="list-style-type: none">◦ Ensure batteries are inserted correctly with the correct polarity (+/-).◦ Replace old batteries with new AAA batteries.◦ Make sure there are no obstructions between the remote and the TV's IR receiver.◦ Point the remote directly at the TV.
Some buttons do not function.	<ul style="list-style-type: none">◦ This remote is a replacement and may not support all advanced features of your specific TV model.◦ Refer to your TV's original manual to confirm if the feature is supported by your television.◦ Ensure your TV model is listed in the "Compatible TV Models" section.
Remote response is slow or intermittent.	<ul style="list-style-type: none">◦ Replace batteries with new ones.◦ Ensure you are within the effective range of the TV's IR receiver.

8. WARRANTY AND SUPPORT

KRPTQJoo provides customer support for this product. If you encounter any issues or have questions regarding the

compatibility or functionality of your remote control, please contact us directly.

We aim to respond to inquiries within 12 hours to ensure your satisfaction. When contacting support, please provide your product's ASIN (B0F19F7PDM) and your specific Samsung TV model number for quicker assistance.

© 2025 KRPTQJoo. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.