

[Manuals.plus](#) /

› [TPOB](#) /

› TPOB Slime 2 Ghost Black Clipper Trimmer Set User Manual

TPOB Slime2

TPOB Slime 2 Ghost Black Clipper Trimmer Set User Manual

Model: Slime2 | Brand: TPOB

INTRODUCTION

Thank you for choosing the TPOB Slime 2 Ghost Black Clipper Trimmer Set. This professional-grade hair cutting tool is designed for precision and durability, featuring a powerful 6800 RPM motor and steel blades for a smooth, sharp cut. This manual provides essential information for the safe and effective use, maintenance, and care of your new clipper and trimmer set.



Image: The TPOB Slime 2 Ghost Black Clipper and Trimmer Set. The clipper features an ergonomic design with a lever arm, and the trimmer is sleek and compact.

SAFETY INFORMATION

Please read all safety instructions before using the TPOB Slime 2 Ghost Black Clipper Trimmer Set. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Avoid contact with eyes, skin, and water. Do not immerse the devices in water.
- Not for use on infants or children. Keep out of reach of children.
- Follow proper cleaning and maintenance procedures as outlined in this manual to ensure safe operation.
- Do not use the product if it is damaged or malfunctioning. Contact customer support for assistance.
- Use only the charging cable and accessories provided by the manufacturer.

PACKAGE CONTENTS

Verify that all items are present in your TPOB Slime 2 Ghost Black Clipper Trimmer Set package:

- 1 x TPOB Slime 2 Clipper
- 1 x TPOB Slime 2 Trimmer
- 6 x Magnetic Guards (sizes: 0.5, 1, 1.5, 2, 3, 4)
- 1 x Rubber Case
- 1 x USB Charging Cable
- 1 x Cleaning Brush
- 1 x Blade Oil

SETUP

Initial Charging

Before first use, fully charge both the clipper and trimmer. Connect the USB charging cable to the device and a compatible USB power adapter (not included). The indicator light will show charging status and turn solid when fully charged. A full charge typically takes approximately 3 hours.

Attaching Magnetic Guards

To attach a magnetic guard, align the guard with the clipper blade and gently press until it securely snaps into place. Ensure the guard is firmly attached before use. To remove, gently pull the guard away from the blade.



Image: Close-up view of the TPOB Slime 2 Clipper, demonstrating the attachment point for magnetic guards.

OPERATING INSTRUCTIONS

Powering On/Off

Press the power button located on the device to turn it on. Press the button again to turn it off.

Using the Clipper

- **Adjusting the Lever Arm:** The clipper features a 5-clicking lever arm. This allows for precise adjustment of the blade length without changing guards, ideal for fading and blending. Move the lever up for a shorter cut and down for a longer cut.
- **Selecting a Guard:** Choose one of the 6 magnetic guards (0.5, 1, 1.5, 2, 3, 4) based on your desired hair length. Attach it securely to the clipper blade.
- **Cutting Technique:** Hold the clipper flat against the head, moving against the direction of hair growth. Use smooth,

overlapping strokes for an even cut.

Using the Trimmer

- The trimmer is designed for detailing, outlining, and creating sharp lines.
- Hold the trimmer at a slight angle to the skin and use light pressure for precise results.
- Do not apply excessive pressure, as this can cause irritation or nicks.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life and performance of your TPOB Slime 2 set.

- **After Each Use:** Turn off the device. Use the provided cleaning brush to remove loose hair from the blades and the housing.
- **Blade Oiling:** Apply a few drops of blade oil (included) to the blades after every few uses or when the blades feel dry. Turn on the device for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and reduces friction.
- **Deep Cleaning:** Periodically, remove the blades (refer to specific instructions if provided with the product for blade removal) for a more thorough cleaning. Ensure blades are completely dry before reattaching.
- **Storage:** Store the clipper and trimmer in the rubber case in a cool, dry place, away from direct sunlight and moisture.

TROUBLESHOOTING

If you encounter issues with your TPOB Slime 2 Clipper Trimmer Set, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on	Low battery; Device malfunction	Charge the device fully; Contact customer support if issue persists.
Poor cutting performance / Pulling hair	Dull blades; Dirty blades; Insufficient oil; Incorrect technique	Clean and oil blades; Ensure blades are free of debris; Apply blade oil; Adjust cutting angle.
Device gets hot during use	Prolonged use; Dirty blades; Lack of lubrication	Allow device to cool down; Clean and oil blades; Ensure proper ventilation.
Guards do not stay attached	Improper attachment; Damaged guard	Ensure guard is fully snapped into place; Replace damaged guards.

SPECIFICATIONS

Feature	Detail
Model Number	Slime2
Motor Speed	6800 RPM
Blade Material	Alloy Steel
Power Source	Battery Powered (1 Lithium Ion battery included)

Feature	Detail
Charging Connector	USB
Maximum Cutting Length	4 millimeters (with guards)
Minimum Cutting Length	0.5 millimeters (with guards)
Included Components	Clipper, Trimmer, 6 Magnetic Guards, Rubber Case
Item Weight	0.94 kg
Color	Black
Recommended Uses	Professional Barber/Home Haircuts

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please contact TPOB customer service. Keep your purchase receipt as proof of purchase.
You can visit the official TPOB store for more information: [TPOB Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

