



[Manuals.plus](#) /

› [Beautiful](#) /

› Beautiful 3 Qt Digital Air Fryer TurboCrisp™ Instruction Manual Model 19597

Beautiful 19597

Beautiful 3 Qt Digital Air Fryer TurboCrisp™ Instruction Manual

Brand: Beautiful | Model: 19597

INTRODUCTION

Upgrade your kitchen with the Beautiful 3-Quart Digital Air Fryer, designed to deliver high-performance cooking in a compact, stylish design. This space-saving air fryer is perfect for kitchens with limited counter space and can serve up to 4 people, making it ideal for small families, singles, or couples who enjoy quick and healthy meals.

Powered by a 1200-watt heating system and featuring patent-pending TurboCrisp Technology, this air fryer ensures fast, crispy, and evenly cooked results with up to 75% less fat than traditional deep frying. Enjoy healthier versions of your favorite fried foods, from crunchy fries to juicy chicken, roasted veggies, or reheated leftovers, with little to no oil needed.

The appliance includes 4 easy one-touch preset functions: Air Fry, Bake, Roast, and Reheat. An adjustable temperature range from 170°F to 400°F provides precision control for all your favorite recipes. The superior air flow technology guarantees crispy exteriors and tender interiors. For convenience, the non-stick TurboCrisp tray and basket, made without PFOA and PFOS, are dishwasher safe, ensuring fast and effortless cleanup. Its modern soft matte finish and digital touch-activated display add elegance and ease to your cooking experience.



Figure 1: Beautiful 3 Qt Digital Air Fryer in Porcini Taupe, showcasing its sleek design and a bowl of crispy roasted potatoes.

SETUP

1. **Unpack:** Carefully remove the air fryer and all accessories from the packaging. Retain packaging for future storage or shipping.
2. **Clean:** Before first use, wash the TurboCrisp tray and basket with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, ensuring adequate air circulation around the unit. Keep it away from walls and other appliances.
4. **Power:** Plug the power cord into a grounded electrical outlet.



Figure 2: The air fryer's basket is pulled out, revealing the non-stick TurboCrisp tray, ready for cleaning or cooking.

OPERATING INSTRUCTIONS

1. **Power On:** Plug in the air fryer. The digital display will illuminate.
2. **Place Food:** Place your food into the TurboCrisp basket. Do not overfill.
3. **Select Function:** Choose one of the 4 preset functions: Air Fry, Bake, Roast, or Reheat by pressing the corresponding button on the touch display.
4. **Adjust Time/Temperature:** The selected function will display a default time and temperature. Use the '+' and '-' buttons to adjust the time (in minutes) and temperature (in degrees Fahrenheit) as needed for your recipe. The temperature range is 170°F to 400°F.
5. **Start Cooking:** Press the 'Start/Pause' button to begin the cooking cycle.
6. **Pause/Resume:** You can pause cooking at any time by pulling out the basket or pressing the 'Start/Pause' button.

The air fryer will resume once the basket is reinserted or the button is pressed again.

7. **Shake/Flip Food:** For even cooking, it is recommended to shake or flip food halfway through the cooking cycle.
8. **Finish Cooking:** The air fryer will beep when the cooking cycle is complete. Carefully remove the basket and transfer food to a serving dish.



Figure 3: A user adjusts the temperature on the intuitive digital touch-activated display of the air fryer.

COOKING FUNCTIONS

The Beautiful 3-Quart Digital Air Fryer features four convenient one-touch preset functions:

- **Air Fry:** Ideal for achieving crispy textures on foods like fries, chicken wings, and breaded items with minimal oil.
- **Bake:** Perfect for preparing baked goods such as small cakes, muffins, or even cookies.
- **Roast:** Suitable for roasting vegetables, small cuts of meat, or poultry to tender perfection.
- **Reheat:** Efficiently warms up leftovers, restoring their original crispness and flavor.

All functions allow for manual adjustment of time and temperature to suit specific recipes and desired results.



Figure 4: The air fryer's basket holds a perfectly roasted salmon fillet alongside crispy brussels sprouts, demonstrating its roasting capability.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your Beautiful Digital Air Fryer.

- **Unplug:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
- **Basket and Tray:** The non-stick TurboCrisp tray and basket are dishwasher safe for easy cleaning. Alternatively, wash them with warm, soapy water using a non-abrasive sponge. Rinse thoroughly and dry completely.
- **Exterior:** Wipe the exterior of the air fryer with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- **Interior:** For the interior, wipe with a damp cloth. If necessary, use a mild, non-abrasive cleaner. Ensure no water enters the heating element.
- **Storage:** Store the air fryer in a cool, dry place when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; basket not fully inserted.	Ensure the power cord is securely plugged into a working outlet. Push the basket firmly into the unit until it clicks into place.
Food is not cooked evenly.	Basket is overcrowded; food not shaken/flipped.	Cook food in smaller batches. Shake or flip food halfway through cooking.
Food is not crispy.	Not enough oil (for certain foods); temperature too low; cooking time too short.	Lightly brush or spray food with oil. Increase temperature or cooking time.
White smoke coming from the air fryer.	Grease residue from previous use; high-fat food.	Clean the basket and tray thoroughly after each use. For high-fat foods, drain excess fat from the basket during cooking.

SPECIFICATIONS

- **Model Name:** Air Fryer 3qt
- **Model Number:** 19597
- **Capacity:** 3 Quarts
- **Output Wattage:** 1200 Watts
- **Voltage:** 120 Volts
- **Temperature Range:** 170°F to 400°F
- **Control Method:** Touch (Digital)
- **Special Features:** Automatic Shut-Off, Dishwasher Safe Parts, Programmable, Temperature Control, Non-stick Coating (PFOA & PFOS free)
- **Product Dimensions:** 20.47"D x 10.55"W x 9.84"H
- **Item Weight:** 8 Pounds
- **Material:** Plastic, Stainless Steel
- **Color:** Porcini Taupe

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official Beautiful by Drew Barrymore website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.