

LBVXJDCJB

Generic Lightweight 3-Wheel Golf Push Cart (Model LBVXJDCJB) Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your new Generic Lightweight 3-Wheel Golf Push Cart, Model LBVXJDCJB. Please read this manual thoroughly before using the product to ensure proper function and safety.

SAFETY INFORMATION

- Always ensure all components are securely fastened before use.
- Do not overload the golf cart beyond its intended capacity.
- Engage the foot brake when parking on slopes or uneven terrain to prevent unintended movement.
- Keep hands and fingers clear of moving parts during folding and unfolding operations.
- Store the cart in a dry, secure location when not in use.

PACKAGE CONTENTS

Please verify that all items listed below are present in your package:

- 1 x Golf Push Cart Frame
- 3 x Quick-Release Wheels
- 1 x Instruction Manual (this document)

SETUP AND ASSEMBLY

1. **Unfold the Frame:** Gently pull the main frame sections apart until the cart is partially extended. Ensure all locking mechanisms click into place.



Image: The golf cart frame in a partially unfolded state, ready for wheel attachment.

2. **Attach the Wheels:** Insert each quick-release wheel into its designated axle on the cart frame. Press the release button on the wheel hub and slide it onto the axle until it locks securely. Repeat for all three wheels.



Image: Top view showing the cart frame folded with wheels detached, and bottom view showing the cart frame folded with wheels attached, illustrating the quick-release mechanism.

- 3. Fully Extend the Cart:** Once the wheels are attached, fully extend the cart frame until it is rigid and stable. Ensure the handle is in the upright position.



Image: The golf push cart fully assembled and standing upright on a grassy surface.

OPERATING INSTRUCTIONS

Attaching Your Golf Bag

Place your golf bag onto the cart's support cradles. Secure the bag using the adjustable straps provided, ensuring it is stable and centered.



Image: A golf bag securely attached to the push cart, positioned on a grassy area.



Image: A close-up view showing the ergonomic handle and the adjustable strap used to secure the golf bag to the cart.

Using the Foot Brake

To engage the brake, press down firmly on the foot pedal located near one of the rear wheels. To release, lift the pedal. Always engage the brake when the cart is stationary, especially on inclines.

Adjusting the Handle

The handle height can be adjusted to suit your preference. Locate the adjustment mechanism on the handle shaft, typically a quick-release lever or knob. Adjust to the desired height and secure firmly.

Folding for Storage

To fold the cart, release any locking mechanisms on the frame and collapse the cart. The quick-release wheels can be removed for more compact storage if desired.



Image: The golf cart in its folded state, demonstrating compact storage options both with and without wheels attached.

MAINTENANCE

- **Cleaning:** Wipe down the frame and wheels with a damp cloth after each use to remove dirt and debris. Avoid harsh chemicals.
- **Lubrication:** Periodically check moving parts and apply a silicone-based lubricant if necessary to ensure smooth operation.
- **Storage:** Store the cart in a cool, dry place away from direct sunlight and extreme temperatures to prolong its lifespan.
- **Wheel Inspection:** Regularly inspect the wheels for wear and tear. Ensure quick-release mechanisms are functioning correctly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Cart does not fold/unfold smoothly.	Locking mechanisms are stuck or dirty.	Clean and lubricate locking mechanisms. Ensure no debris is obstructing movement.
Wheels are wobbly or loose.	Wheels not fully engaged or quick-release mechanism is faulty.	Re-attach wheels, ensuring the quick-release mechanism locks securely. Inspect for damage.
Foot brake is not holding.	Brake mechanism is worn or obstructed.	Check for debris around the brake pedal. Inspect the brake pad for wear.

SPECIFICATIONS

- **Model Name:** LBVXJDCJB
- **Brand:** Generic
- **Frame Material:** Aircraft-grade Aluminum
- **Wheel Type:** 3 x Quick-Release, EVA-covered
- **Brake System:** Foot Brake
- **Item Weight:** 50 Grams *(Note: This weight appears unusually low for a golf cart. Please refer to product packaging for accurate weight.)*
- **Color:** One Color
- **Suggested Users:** Unisex-adult

Note: Specifications are subject to change without notice.

CUSTOMER SUPPORT

For further assistance or inquiries regarding your Generic Lightweight 3-Wheel Golf Push Cart, please refer to the retailer's customer service contact information or visit the manufacturer's website.