

[Manuals.plus](#) /

› [ELIVED](#) /

› ELIVED Ultra Slim TV Wall Mount Instruction Manual for Samsung The Frame/Neo QLED TVs (1.1" Rotate Model)

ELIVED 1.1" Ultra Slim Rotate

ELIVED Ultra Slim TV Wall Mount Instruction Manual

Model: 1.1" Ultra Slim Rotate

1. Introduction

Thank you for choosing the ELIVED Ultra Slim TV Wall Mount. This manual provides essential information for the safe and correct installation, operation, and maintenance of your TV wall mount. Please read these instructions thoroughly before installation and keep them for future reference. This mount is specifically designed for Samsung The Frame, Neo QLED 8K, and Neo QLED 4K TVs, offering a low-profile design and 90-degree rotation capability.

2. Safety Information

WARNING: Failure to read and follow these instructions may result in personal injury, property damage, or voiding of your warranty.

- Ensure the mounting surface can safely support the combined weight of the mount and the TV.
- Do not mount on drywall alone. Always mount into wood studs, concrete, or brick walls using appropriate anchors.
- Use a stud finder to locate wood studs accurately.
- Always use the provided hardware. If any parts are missing or defective, contact ELIVED customer service.
- Do not exceed the maximum weight capacity of 88 lbs (40 kg).
- This product is intended for indoor use only.
- Two people are recommended for installation to ensure safety.

3. Package Contents

Verify all components are present and undamaged before installation. If any parts are missing or damaged, do not attempt installation and contact customer support.

- Wall Plate Unit
- TV Brackets (2x)
- Mounting Hardware Kit (screws, washers, spacers, anchors)
- Paper Drilling Template
- Small Bubble Level
- Instruction Manual

4. Specifications

Feature	Detail
Brand	ELIVED
Model	1.1" Ultra Slim Rotate
Mounting Type	Wall Mount
Movement Type	Articulating, Rotate
TV Compatibility	Samsung The Frame, Neo QLED 8K, Neo QLED 4K
Max TV Size	Up to 75 inches
Weight Capacity	88 lbs (40 kg)
VESA Compatibility	Min: 100x100mm (4"x4"), Max: 400x400mm (16"x16")
Wall Profile	1.1 inches (2.8 cm) from wall
Rotation	±90 degrees (Landscape to Portrait)
Material	Alloy Steel

5. Setup and Installation

5.1 WALL COMPATIBILITY

This mount is compatible with wood studs, concrete walls, and brick walls.**DO NOT install into drywall alone.**



Image: Illustration of compatible wall types: wood studs (up to 16 inches apart), concrete walls, and brick walls. A warning indicates not to install into drywall alone.

5.2 ATTACHING TV BRACKETS TO TV

1. Carefully place your TV face down on a soft, clean surface to prevent scratches.
2. Identify the VESA mounting holes on the back of your TV.
3. Select the appropriate screws, washers, and spacers from the hardware kit that fit your TV's VESA pattern.
4. Attach the two TV brackets to the back of your TV using the selected hardware. Ensure they are securely fastened but do not overtighten.

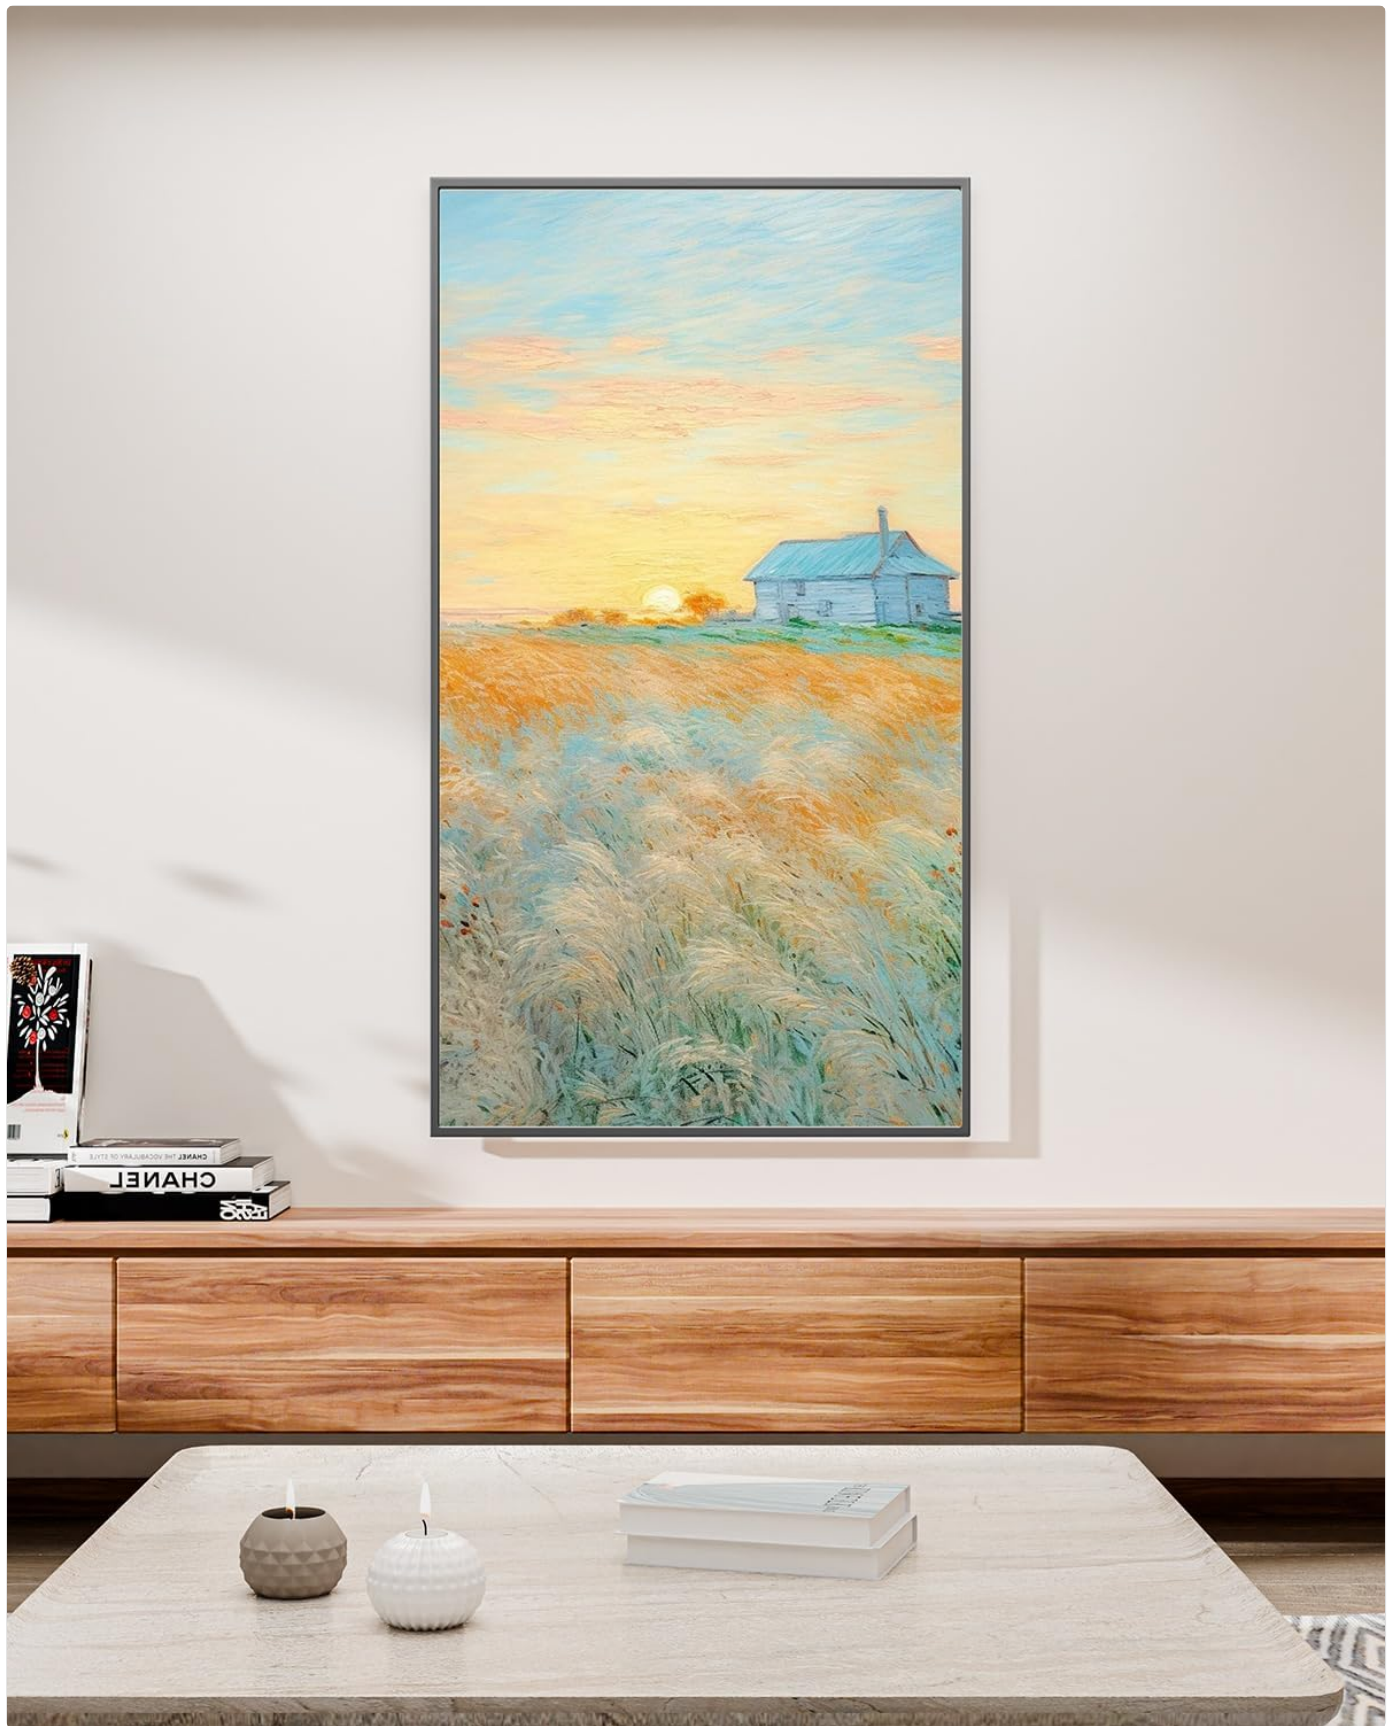


Image: A diagram illustrating the VESA mounting range (Min: 100x100mm, Max: 400x400mm) and the weight capacity (88 lbs/40 kg) for compatible Samsung TVs.



Image: A visual representation of the VESA range, highlighting horizontal and vertical mounting points on the back of a television.

5.3 MOUNTING THE WALL PLATE

1. Determine the desired height for your TV. Use the provided paper drilling template to mark the pilot holes on the wall.
2. Use a stud finder to locate the center of the wood studs if mounting to wood. For concrete/brick, ensure you are drilling into solid material.
3. Drill pilot holes at the marked locations. The size of the drill bit will depend on your wall type (refer to the template for specifics).
4. Attach the wall plate unit to the wall using the appropriate lag screws and washers. For concrete/brick, insert wall anchors into the pilot holes before fastening the lag screws.
5. Use the small bubble level to ensure the wall plate is perfectly horizontal before fully tightening all screws.



Image: A simplified three-step installation guide: 1. Attach TV plate to TV. 2. Install Wall Plate. 3. Hang TV onto Wall Plate.

5.4 HANGING THE TV

1. With assistance, carefully lift the TV with the attached brackets.
2. Align the TV brackets with the wall plate and gently hook the TV onto the wall plate.
3. Ensure the TV is securely seated on the wall plate. The safety screws or locking mechanisms should engage to prevent accidental dislodging.

Your browser does not support the video tag.

Video: An official ELIVED video demonstrating the installation process of the Ultra Slim TV Mount for Samsung The Frame/Neo QLED TVs, including attaching the mount to the TV and then to the wall.

6. Operating Instructions

6.1 90-DEGREE ROTATION (LANDSCAPE TO PORTRAIT)

This ELIVED TV mount allows for a ± 90 -degree rotation, enabling you to switch your TV between landscape and portrait orientations. This feature is particularly useful for Samsung The Frame TVs to display artwork or for viewing vertical

content.

1. Gently grasp the sides of your TV.
2. Carefully rotate the TV clockwise or counter-clockwise to achieve the desired orientation. The mount is designed for tool-free rotary adjustment.
3. Ensure the TV is stable in its new position before releasing.

Ultra-Slim Design

1.1" close to wall
Hangs like a picture



Image: A visual demonstration of the TV mount's tool-free rotary adjustment, allowing the television to rotate ± 90 degrees between

landscape and portrait modes.

VESA Range:

Max: **400x400mm/16x16"**

Min: **100x100mm/4x4"**

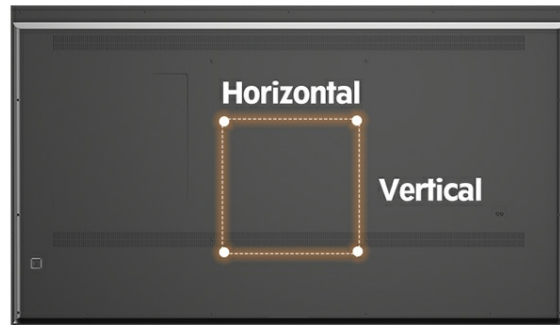


Image: A comparison showing a TV mounted in portrait orientation displaying art, and the same TV in landscape orientation displaying a video, illustrating the versatile viewing options.

7. Maintenance

Regular maintenance ensures the longevity and safe operation of your TV wall mount.

- **Cleaning:** Wipe the mount with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- **Periodic Inspection:** Every few months, check all screws and connections to ensure they are tight and secure. Retighten if necessary.
- **Movement Check:** Periodically test the rotation mechanism to ensure smooth operation.

8. Troubleshooting

8.1 TV IS NOT LEVEL AFTER INSTALLATION

- **Check the wall plate:** Ensure the wall plate was installed level using the bubble level. If not, minor adjustments might be possible by slightly loosening and re-tightening the wall plate screws.
- **Check TV brackets:** Ensure the TV brackets are evenly attached to the TV's VESA holes.

8.2 DIFFICULTY ROTATING THE TV

- Ensure no cables are snagged or obstructing the rotation mechanism.
- Check for any debris or foreign objects in the rotating parts.
- The rotation mechanism is designed to be firm to hold position. Apply gentle, even pressure.

8.3 MOUNT FEELS UNSTABLE

- Immediately remove the TV from the mount.
- Re-check all wall plate screws and TV bracket screws for tightness.
- Verify that the wall type is appropriate and that the correct anchors were used. If mounting to wood studs, ensure screws are fully engaged in the center of the studs.
- Ensure the TV's weight does not exceed the 88 lbs capacity.

9. Warranty and Support

ELIVED products are manufactured with quality and durability in mind. For specific warranty details, please refer to the product packaging or contact ELIVED customer support directly. If you encounter any issues or have questions regarding your ELIVED TV Wall Mount, please reach out to our customer service team for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0F1CK13ZF>

More documents and user manuals: <https://manuals.plus/>