

LEKATO FP-10

LEKATO FP-10 88-Key Foldable Digital Piano Instruction Manual

Model: FP-10 (BC3359)

1. INTRODUCTION

Thank you for purchasing the LEKATO FP-10 88-Key Foldable Digital Piano. This portable digital piano is designed for musicians of all levels, offering a full 88-key experience in a compact, travel-friendly design. This manual provides essential information for setting up, operating, and maintaining your instrument to ensure optimal performance and longevity.

Please read this manual thoroughly before using the product and keep it for future reference.

折りたたみ式

簡単に折りたたみ、取り付け、
ピアノをより安定させる

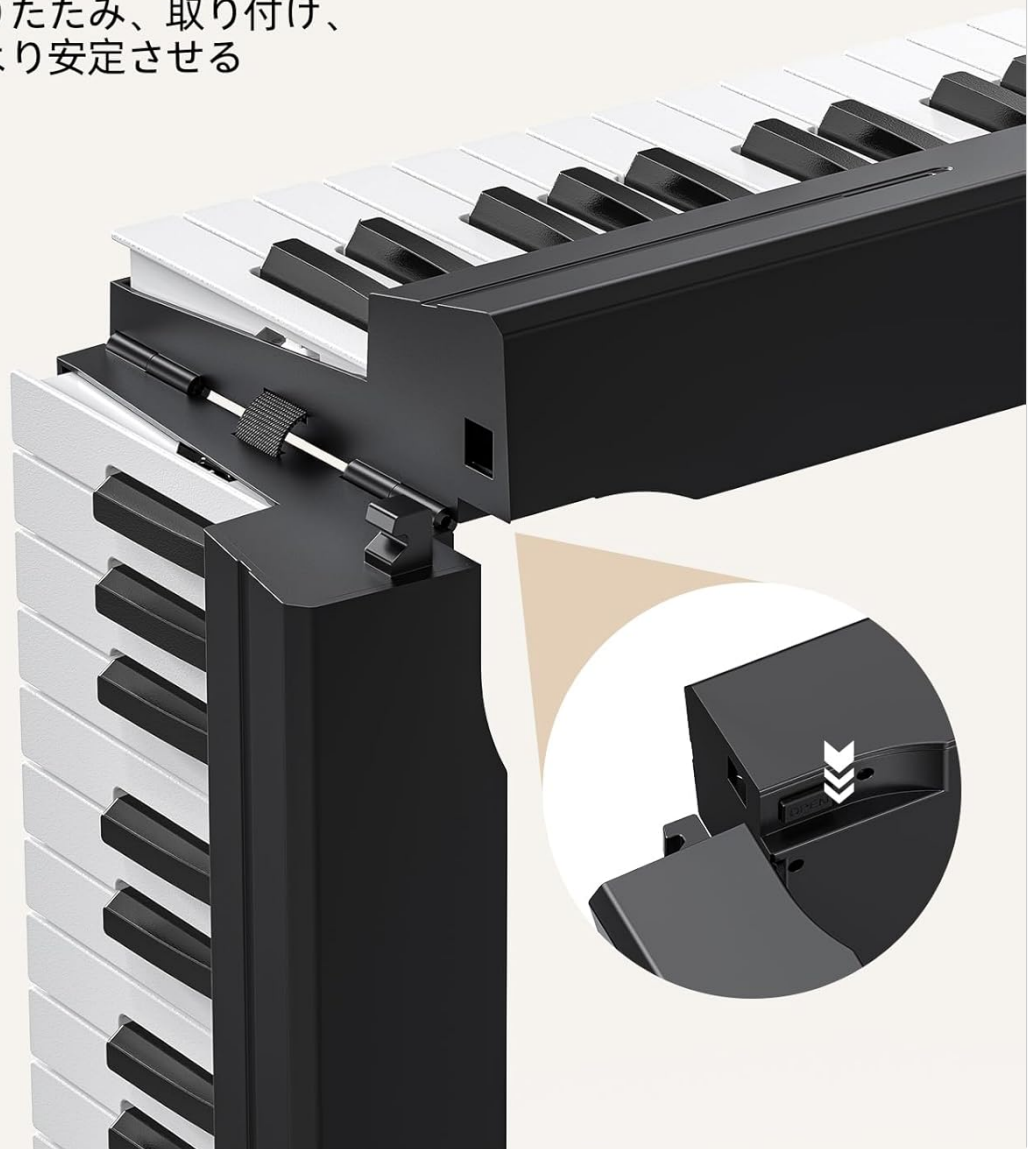


Figure 1: LEKATO FP-10 88-Key Foldable Digital Piano Overview

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- LEKATO FP-10 88-Key Foldable Digital Piano
- Music Stand
- Protective Carry Bag
- Power Adapter
- USB Cable
- Sustain Pedal
- User Manual (this document)
- Stickers



Figure 2: Included Accessories

3. PRODUCT FEATURES

- **88-Key Foldable Design:** Lightweight (2.9kg / 6.3 lbs) and easily folds for portability. Extended length: 125.5cm (49.4 inches), folded length: 62.5cm (24.6 inches).
- **Versatile Connectivity:** Integrated Bluetooth for music applications and USB-MIDI for Digital Audio Workstations (DAW). Supports audio input and external headphones.
- **Rich Sound and Functions:** Features 128 rhythms, 128 tones, 21 demo songs, automatic chord, transpose, recording, metronome, and dual keyboard mode.
- **Responsive Keys:** Wood grain design with high-speed rebound keys for an authentic playing feel.
- **User-Friendly Interface:** Quick function buttons for convenient mode adjustment and function switching.
- **Long Battery Life:** Approximately 10 hours of operation on a full charge.



Figure 3: Key Features Overview

4. SETUP

4.1 Unfolding the Piano

1. Place the folded piano on a flat, stable surface.

2. Gently unfold the two halves of the keyboard until they are fully extended and locked into place. Ensure the locking mechanism is secure.

折りたたみ式キーボード



Figure 4: Unfolding Mechanism

4.2 Power Connection and Initial Charge

Connect the power adapter to the DC IN port on the piano and plug it into a wall outlet. For the first use, charge the piano for at least 6 hours. Subsequent full charges typically take about 4 hours.



Figure 5: Power and Connectivity Ports

4.3 Connecting the Sustain Pedal

Plug the included sustain pedal into the dedicated sustain pedal input port on the piano.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Locate the power switch on the piano. Slide it to the "ON" position to power on the instrument. Slide it to "OFF" to power off.

5.2 Control Panel Overview

The control panel features various buttons for selecting tones, rhythms, demo songs, and adjusting other functions. Refer to the detailed diagram below for button identification.



Figure 6: Control Panel

5.3 Adjusting Volume

Use the dedicated volume buttons (usually labeled "Vol+" and "Vol-") on the control panel to adjust the master volume of the piano.

5.4 Key Touch Sensitivity

The keys are designed with touch sensitivity, meaning the volume and timbre change based on how hard you press them. This allows for expressive playing. The piano features a wood grain design and high-speed rebound keys for an authentic feel.



Figure 7: Key Touch Sensitivity

6. CONNECTIVITY

6.1 Bluetooth Connection

The FP-10 features integrated Bluetooth for wireless connection to music applications on your smartphone, tablet, or computer. This allows for interactive learning and practice.

1. Turn on the piano and activate Bluetooth on your device.
2. Search for "GZUT-MUSIC" or "GZUT-MIDI" in your device's Bluetooth settings and connect. "GZUT-MUSIC"

connects the piano as a Bluetooth speaker, while "GZUT-MIDI" connects it for MIDI data transfer with music apps.

3. Once connected, you can use compatible music applications for learning or playback.



Figure 8: Bluetooth Connectivity

6.2 USB-MIDI Port

The USB-MIDI port allows you to connect the piano to a computer for use with Digital Audio Workstations (DAW) or other music software. Use the provided USB cable for connection.

6.3 Headphone Output

For silent practice, connect standard headphones to the headphone jack. The piano's internal speakers will be muted automatically.

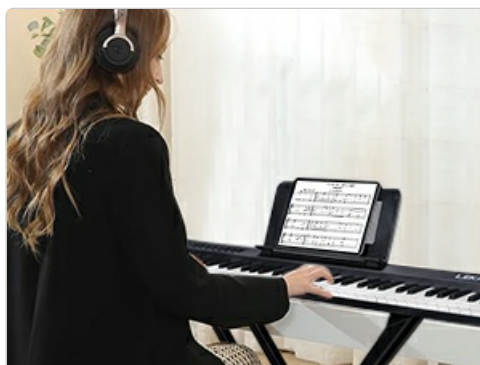


Figure 9: Headphone Use

7. FUNCTIONS

The FP-10 offers a variety of functions to enhance your playing and learning experience.

- **Tones (128 options):** Select from a wide range of instrument sounds. Use the "Tone+" and "Tone-" buttons to cycle through available tones.
- **Rhythms (128 options):** Choose from various rhythmic accompaniments. Use the "Rhythm+" and "Rhythm-" buttons to select a rhythm.
- **Demo Songs (21 options):** Play pre-recorded demo songs for enjoyment or learning. Use the "Demo" button to start/stop and cycle through songs.
- **Automatic Chord:** Engages automatic chord accompaniment based on your playing.

- **Transpose:** Adjust the pitch of the entire keyboard up or down.
- **Recording:** Record your performances. Consult the control panel for specific record/playback buttons.
- **Metronome:** Provides a steady beat for practice. Adjust tempo using dedicated buttons.
- **Dual Keyboard Mode:** Splits the keyboard into two identical sections, allowing two players to play simultaneously or for a teacher and student to play together.



Figure 10: Dual Keyboard Mode



Figure 11: Rich Tones and Rhythms

8. CHARGING AND BATTERY

The LEKATO FP-10 is equipped with a rechargeable battery for portable use. A full charge provides approximately 10 hours of playing time.

- **First Charge:** For optimal battery health, charge the piano for at least 6 hours before its first use.
- **Standard Charging:** Subsequent full charges typically take about 4 hours.
- **Charging Indicator:** The display or an indicator light will show the charging status.



Figure 12: 10-Hour Battery Life

9. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the piano. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, fold the piano and store it in the protective carry bag in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the piano or subjecting it to strong impacts.

10. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound	Volume too low; headphones connected; piano not powered on.	Increase volume; disconnect headphones; ensure piano is powered on.
Bluetooth connection fails	Bluetooth not enabled on device; piano not in pairing mode; interference.	Ensure Bluetooth is on; restart piano and device; try connecting again.
Keys not responding	Piano not powered on; internal issue.	Ensure piano is powered on. If problem persists, contact customer support.

11. SPECIFICATIONS

- **Model:** FP-10 (BC3359)
- **Keys:** 88, semi-weighted with wood grain texture
- **Tones:** 128
- **Rhythms:** 128
- **Demo Songs:** 21
- **Connectivity:** Bluetooth, USB-MIDI, Audio Input, Headphone Output
- **Battery Life:** Approx. 10 hours
- **Weight:** 2.9 kg (6.3 lbs)
- **Extended Length:** 125.5 cm (49.4 inches)
- **Folded Length:** 62.5 cm (24.6 inches)

12. WARRANTY AND SUPPORT

The LEKATO FP-10 Digital Piano comes with a 1-year warranty from the date of purchase. If you encounter any quality issues with the product, exchanges are possible within the warranty period.

For any questions, concerns, or support needs, please contact our customer service. Refer to your purchase documentation for contact details.

13. PRODUCT DEMONSTRATION VIDEO

Watch this video for a demonstration of the LEKATO FP-10's features and sound capabilities.

Your browser does not support the video tag.

Video: Demonstration of LEKATO FP-10 Digital Piano sounds and features.