

[Manuals.plus](#) /

> [Vminno](#) /

> Vminno Hot Air Popcorn Popper – 98% Unpopped Kernel-Free, Commercial-Grade Efficiency for Home Use, Butter Melter + BPA-Free (ETL)

## Vminno Hot Air Popcorn Popper

# Vminno Hot Air Popcorn Popper User Manual

Model: Hot Air Popcorn Popper

## INTRODUCTION

Thank you for choosing the Vminno Hot Air Popcorn Popper. This manual provides important information regarding the safe operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and retain it for future reference.



Image: The Vminno Hot Air Popcorn Popper in white and black, actively popping corn into a red and white striped popcorn bowl. Loose kernels are scattered around the base.

## IMPORTANT SAFETY INFORMATION

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.

- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

## PARTS AND FEATURES

---

Familiarize yourself with the components of your Vminno Hot Air Popcorn Popper:

- **Main Unit:** Houses the heating element and air circulation system.
- **Popping Chamber:** Where the popcorn kernels are placed for popping.
- **Chute/Spout:** Directs popped corn into your bowl.
- **Measuring Cup/Butter Melter:** Serves as a measuring cup for kernels and a tray for melting butter.
- **Top Cover:** Transparent cover that sits over the popping chamber and chute.
- **On/Off Switch:** Controls the power to the unit.

# EFFICIENT HOT AIR SYSTEM

Reach popcorn popping rate to

98%



Image: An internal view diagram of the Vminno Hot Air Popcorn Popper, highlighting the efficient hot air system and the popping chamber where kernels are heated. This system achieves up to a 98% popping rate.

## SETUP

Before first use, please follow these steps:

1. **Unpack:** Carefully remove all packaging materials and inspect the appliance for any damage.
2. **Clean:** Wipe the exterior of the main unit with a damp cloth. Wash the measuring cup/butter melter and top cover in warm, soapy water. Rinse thoroughly and dry completely. Do not immerse the main unit in water.
3. **Placement:** Place the popcorn popper on a stable, flat, heat-resistant surface. Ensure there is adequate ventilation around the unit.
4. **Assemble:** Place the top cover securely onto the main unit. Position the measuring cup/butter melter into the designated slot on the top cover.

## OPERATING INSTRUCTIONS

Follow these simple steps to make delicious popcorn:

1. **Measure Kernels:** Use the provided measuring cup to measure one level scoop of popcorn kernels (approximately 1/2 cup). Do not overfill the popping chamber. *Do not add oil or butter to the popping chamber.*
2. **Add Kernels:** Pour the measured kernels into the popping chamber.
3. **Position Bowl:** Place a large bowl (not included) under the popcorn chute to collect the popped corn.
4. **Melt Butter (Optional):** If desired, place butter or chocolate in the measuring cup/butter melter on top of the unit. The heat from the popping process will melt it.
5. **Start Popping:** Plug the appliance into a standard electrical outlet. Flip the On/Off switch to the "On" position. The popping process will begin almost immediately.
6. **Wait for Popping:** Popcorn will begin to pop and dispense into your bowl within 3 minutes. Allow the popping to complete.
7. **Turn Off:** Once popping has stopped, flip the On/Off switch to the "Off" position and unplug the appliance from the outlet.
8. **Serve:** Carefully remove the top cover and measuring cup (they may be hot). Pour melted butter over the popcorn if used, and season to taste.

# "ONLY THREE STEPS"

Let's get started!



Add kernels

1

Turn on

2

Enjoy

3

Image: A visual guide demonstrating the three simple steps for using the popcorn popper: 1. Add kernels to the popping chamber. 2. Turn on the power switch. 3. Enjoy the freshly popped corn as it dispenses into a bowl.

# SIMPLE & FAST

Only takes **3 minutes**, soft and delicious popcorn can fill your big bowl.



Image: The Vminno Hot Air Popcorn Popper with an overlay indicating "SIMPLE & FAST" and a clock icon showing "3 MIN", emphasizing the quick preparation time for popcorn.

## MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and performance of your popcorn popper:

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Remove Parts:** Remove the top cover and measuring cup/butter melter.
3. **Wash Removable Parts:** Wash the top cover and measuring cup/butter melter in warm, soapy water. Rinse thoroughly and dry completely. These parts are not dishwasher safe.
4. **Clean Main Unit:** Wipe the exterior of the main unit with a damp cloth. For the popping chamber, use a dry cloth or soft brush to remove any unpopped kernels or debris. *Do not immerse the main unit in water or any other liquid.*
5. **Storage:** Once clean and dry, reassemble the unit and store it in a cool, dry place.

## TROUBLESHOOTING

| Problem                                        | Possible Cause                                                                                                                                                              | Solution                                                                                                                                                                                                                                                                       |
|------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Popcorn not popping or only a few kernels pop. | <ul style="list-style-type: none"><li>• Appliance not plugged in.</li><li>• On/Off switch is off.</li><li>• Old or dry kernels.</li><li>• Too many kernels added.</li></ul> | <ul style="list-style-type: none"><li>• Ensure appliance is securely plugged into a working outlet.</li><li>• Flip the On/Off switch to "On".</li><li>• Use fresh, high-quality popcorn kernels.</li><li>• Do not exceed the recommended amount (one measuring cup).</li></ul> |
| Popcorn burns or smells burnt.                 | <ul style="list-style-type: none"><li>• Appliance left on too long after popping stops.</li><li>• Oil or butter added to popping chamber.</li></ul>                         | <ul style="list-style-type: none"><li>• Turn off and unplug the appliance immediately once popping ceases.</li><li>• Never add oil or butter directly to the popping chamber.</li></ul>                                                                                        |
| Popcorn flying out of the chute.               | <ul style="list-style-type: none"><li>• Bowl not positioned correctly.</li><li>• Too many kernels.</li></ul>                                                                | <ul style="list-style-type: none"><li>• Ensure a large bowl is placed directly under the chute.</li><li>• Use only the recommended amount of kernels.</li></ul>                                                                                                                |

## SPECIFICATIONS

- **Brand:** Vminno
- **Model:** Hot Air Popcorn Popper
- **Color:** Red (as per product specifications, though images show white/black unit)
- **Material:** Overall pick (as per product specifications)
- **Product Dimensions:** 19.1L x 14W x 31.5H Centimetres (approx. 7.5 x 5.5 x 12.4 inches)
- **Item Weight:** 1.13 kg (approx. 2.5 Pounds)
- **Power:** Electric
- **Certifications:** ETL Certified, BPA-Free Materials

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Vminno website. Please have your model number and purchase date available when contacting support.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question