

Ausic P30

Ausic P30 Portable Misting Fan User Manual

			Introduction	Safety Information	Package		
Contents	Features	Setup	Operation	Maintenance	Troubleshooting	Specifications	Warranty & Support

1. INTRODUCTION

The Ausic P30 Portable Misting Fan is designed to provide effective cooling for various outdoor and indoor environments. This device combines a powerful fan with a misting function to lower ambient temperatures through evaporative cooling. Its portable design, long-lasting battery, and versatile placement options make it suitable for patios, camping, beaches, and other recreational activities.

MISTING FAN **AN PORTABLE AIR COOLER**

RAPID COOLING WITH MISTING FUNCTION

That dual cooling effect:

Cool mist sprays onto the skin, evaporating and taking away more heat from the skin's surface;
As the mist disperses into the air, it further lowers the temperature of the surrounding air.



Image: The Ausic P30 Portable Misting Fan providing cooling mist to people enjoying an outdoor gathering.

2. SAFETY INFORMATION

- Always use clean water in the water tank to prevent dust accumulation or nozzle clogging.
- Avoid pinching or damaging the water tube during assembly, use, or movement of the fan.
- Do not immerse the fan unit in water or expose it to heavy rain.

- Keep the device out of reach of children and pets.
- Ensure the fan is placed on a stable, level surface to prevent tipping.
- Unplug the fan before cleaning or performing any maintenance.
- If any water droplets are present in the tank upon first use, this is normal due to factory testing.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Ausic P30 Misting Fan Unit
- 9L Water Bucket (serves as base and storage)
- Charging Cable
- User Manual

4. PRODUCT FEATURES

- **Dual Cooling Mist Effect:** Cool water mist sprays onto the skin, evaporating and taking away heat, while also lowering the surrounding air temperature.
- **Multiple Misting Modes:** Features single-nozzle mist for personal use and triple-nozzle mist for wider coverage (2-3 people or hot, dry conditions).
- **Large Water Tank:** 9-liter capacity provides 5-9 hours of continuous misting, reducing the need for frequent refills. Ice can be added for enhanced cooling.
- **Dual-Purpose Water Box:** The 9L bucket acts as both a water tank during operation and a storage/carry box when the fan is not in use.
- **Powerful Brushless Motor:** Equipped with a high-performance, quiet brushless motor for durability and efficient airflow.
- **3 Adjustable Fan Speeds:** Offers three wind speeds (8.6 ft/s, 13.1 ft/s, 16.4 ft/s) to suit various cooling needs.
- **Long-Lasting Battery:** Built-in 30,000mAh rechargeable battery provides 9-10 hours of fan+mist runtime or 17-82 hours of fan-only operation after a 15-hour full charge.
- **Portable & Versatile Design:** Features a hook design for hanging and can be used as a tabletop, floor, or hanging fan, making it ideal for patios, camping, and various outdoor/indoor settings.

SWIVEL DESIGN
FOR BROADER COOLING



9L LARGE WATER TANK

IT WILL BE COOLER WITH ICE WATER!

One mist



Three mists



1.3±0.3L/h output for 5-9h lasting mist

Image: The fan's swivel design, 9L water tank capacity, and options for single or triple mist nozzles are highlighted.

Long Worktime

High Fan + Mist

$6.5 \pm 0.5h$

Only Fan

$12-55h$

30000mAh

POWERFUL BRUSHLESS MOTOR

HIGHER 20% TORQUE & LOWER 30% NOISE

$2.6 \pm 0.3M/S$

$4.0 \pm 0.3M/S$

$5.0 \pm 0.3M/S$

Image: Illustration of the 30000mAh battery capacity, powerful brushless motor, and three fan speed settings.



Portable



Stand



Desktop



Hanging

Image: Demonstrates the fan's versatility for portable, standing, desktop, and hanging applications.

5. SETUP

1. **Unpack the Fan:** Carefully remove all components from the packaging.
2. **Assemble the Fan Unit:** The fan unit is stored inside the 9L bucket. Lift the fan unit out of the bucket.
3. **Connect Water Tube:** Ensure the water tube extending from the fan unit is properly connected and not pinched.

4. **Fill Water Tank:** Fill the 9L bucket with clean water. For enhanced cooling, you may add ice to the water. Do not use dirty water.
5. **Place Fan Unit on Bucket:** Securely place the fan unit back onto the filled water bucket, ensuring the water tube is submerged and not obstructed.
6. **Charge Battery:** Before first use, fully charge the built-in 30,000mAh battery using the provided charging cable. A full charge takes approximately 15 hours.



Image: Visual guide demonstrating the compact storage and assembly process of the fan unit with the water bucket.

Video: An official seller video demonstrating the setup and features of the Ausic Portable Misting Fan.

6. OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the power button located on the fan unit to turn the fan on or off.
2. **Adjust Fan Speed:** Repeatedly press the fan speed button to cycle through the three available speeds: Low, Medium, and High.
3. **Activate Misting Function:** Press the mist button to activate the misting function. Press again to switch between single-nozzle and triple-nozzle mist modes.
4. **Battery Indicator:** The LED lights on the control panel indicate the current battery level. Charge the fan when the battery indicator is low.
5. **Adjust Fan Angle:** Manually adjust the fan head to direct airflow and mist as desired.



Image: Close-up of the fan's control panel, showing power, fan speed, and misting buttons.

7. MAINTENANCE

- **Cleaning Nozzles:** To prevent clogging, regularly wipe the spray nozzles with a cotton swab, especially after extended use.
- **Water Tank Cleaning:** Periodically drain and clean the 9L water bucket to prevent algae or mineral buildup. Use mild soap and water, then rinse thoroughly.
- **Fan Blade Cleaning:** Gently wipe the fan blades with a soft, damp cloth. Ensure the fan is off and unplugged before cleaning.
- **Storage:** When not in use for an extended period, ensure the water tank is empty and dry. Store the fan unit inside the bucket in a cool, dry place.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the fan regularly, even during storage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is discharged.	Charge the fan fully.
Mist function is not working.	Water tank is empty.	Refill the water tank with clean water.
Mist function is not working.	Nozzles are clogged.	Clean the spray nozzles with a cotton swab.
Mist function is not working.	Water tube is pinched or obstructed.	Check and adjust the water tube to ensure it is free from obstruction.
Reduced mist output.	Mineral buildup in nozzles.	Clean nozzles thoroughly. Consider using distilled water to reduce mineral buildup.

9. SPECIFICATIONS

- **Brand:** Ausic
- **Model:** P30
- **Product Dimensions:** 7.5"D x 12"W x 10.5"H
- **Power Source:** Battery Powered
- **Battery Capacity:** 30000mAh
- **Wattage:** 12 watts
- **Number of Fan Speeds:** 3
- **Max Air Speed:** 16.4 ft/s
- **Water Tank Capacity:** 9 Liters
- **Max Mist Output:** Approximately 1.3 L/h
- **Material:** Plastic

- **Control Type:** Button Control
- **Indoor/Outdoor Usage:** Outdoor (also suitable for indoor use)

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Ausic customer service directly. Keep your purchase receipt for warranty claims.

© 2026 Ausic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question